



N6485V1 4/94

No. 5827 REMOTE WIRELESS KEYPAD/TRANSMITTER

INSTALLATION INSTRUCTIONS

GENERAL

The No. 5827 is a portable keypad which can be used to arm and disarm the system and perform certain other system functions remotely. No audible or visual system status indications are provided by the No. 5827 (except for a Red LED indicator which lights when any key is depressed). Silent or audible Panic alarms (as programmed at the control receiver) can be initiated at the keypad.

The unit may be left unmounted, resting on a table, countertop or other surface, or carried in a pocket or purse. Ensure that a transmission is received from each area where its usage is anticipated.

A low battery condition in a Remote Wireless Keypad will be so indicated by the control receiver.

PROGRAMMING (House ID)

The 5827 must be set for the system House ID (transmitter ID need not be programmed). See DIP switch table on other side.

SPECIFICATIONS

Dimensions: 4-3/4" (120mm) x 3-1/2" (89mm) x 1" (25mm)

LED: Lights when unit transmits.

Battery: 9-volt Alkaline. Ademco 464, Duracell MN1604, or Eveready 522.



BATTERY INSTALLATION

1. Remove the top cover by inserting the blade of a small screwdriver into the pry-off slot in the lower end of the case and twisting.
2. Install the 9-volt Alkaline battery in the battery compartment as follows: first insert the terminal end of the 9-volt battery into the compartment, **observing correct polarity** (see Fig. 1), then push the other end of the battery down firmly into position.
3. Replace the cover (snap fit).

WALL MOUNTING (Optional)

A keyhole slot on the back of the case will permit the unit to be mounted onto a screw in the wall.

Figure 1.
5827, Cover Removed
SHOWN

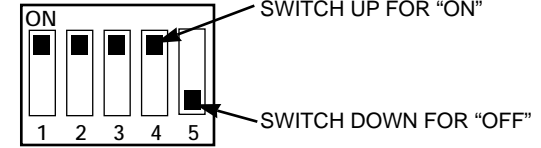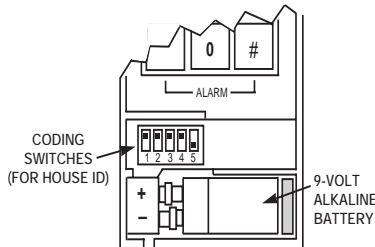

SET FOR HOUSE ID# 30

SEE FIGURE 1 FOR SWITCH LOCATION

HOUSE ID	DIP SWITCH POSITIONS				
	1	2	3	4	5
1	OFF	OFF	OFF	OFF	On
2	OFF	OFF	OFF	On	OFF
3	OFF	OFF	OFF	On	On
4	OFF	OFF	On	OFF	OFF
5	OFF	OFF	On	OFF	On
6	OFF	OFF	On	On	OFF
7	OFF	OFF	On	On	On
8	OFF	On	OFF	OFF	OFF
9	OFF	On	OFF	OFF	On
10	OFF	On	OFF	On	OFF
11	OFF	On	OFF	On	On
12	OFF	On	On	OFF	OFF
13	OFF	On	On	OFF	On
14	OFF	On	On	On	OFF
15	OFF	On	On	On	On
16	On	OFF	OFF	OFF	OFF

HOUSE ID	DIP SWITCH POSITIONS				
	1	2	3	4	5
17	On	OFF	OFF	OFF	On
18	On	OFF	OFF	On	OFF
19	On	OFF	OFF	On	On
20	On	OFF	On	OFF	OFF
21	On	OFF	On	OFF	On
22	On	OFF	On	On	OFF
23	On	OFF	On	On	On
24	On	On	OFF	OFF	OFF
25	On	On	OFF	OFF	On
26	On	On	OFF	On	OFF
27	On	On	OFF	On	On
28	On	On	On	OFF	OFF
29	On	On	On	OFF	On
30	On	On	On	On	OFF
31	On	On	On	On	On

REFER TO THE INSTALLATION INSTRUCTIONS FOR THE RECEIVER/CONTROL WITH WHICH THIS DEVICE IS USED FOR WARRANTY INFORMATION, AND FOR DETAILS REGARDING THE LIMITATIONS OF THE ENTIRE ALARM SYSTEM.



ALARM DEVICE MANUFACTURING CO.
A DIVISION OF PITTPWAY CORPORATION
165 Eileen Way, Syosset, New York 11791

Copyright © 1992 Pittway Corporation