

GENERAL INFORMATION:

The No. 656 Pulse Dial Tester may be used to check the telephone number being dialed by equipment which addresses the telephone network with dial pulses. It may be used with all Ademco digital communicators, such as the Nos. 669 and 670 (including the early screw programmed versions), as well as the Nos. 679 and 680 and (when it is programmed for pulse/rotary dial) the No. 678. It may also be used with the No. 612 Dialer.


The No. 656 checks both the operation of the dialing unit and the programming of the phone number to be dialed by displaying the digits sequentially on its digital display when the equipment is activated. (Subscriber identification and alarm codes will not be displayed.)

CONNECTION AND OPERATION: See Diagram.

The phone number may be checked at any time after it is fully programmed for the installation.

Note: The No. 656 must not be connected to equipment to which the telephone line is already connected.

1. Disconnect the telephone line from the communicator/dialer, if it is already connected.
2. Connect the No. 656 as indicated in the diagram. Be sure to connect the leads with "E-Z" hooks to the telephone line connection terminals of the communicator/dialer and the leads with "U" lugs to 6V. DC.
3. Trip the communicator/dialer in the normal manner. After the unit's dial tone wait has elapsed, the digits of the programmed phone number will appear sequentially on the No. 656's digital display.
4. When testing with the No. 656 is complete, DISCONNECT THE No. 656 BEFORE (RE)CONNECTING THE TELEPHONE LINE to the communicator/dialer.

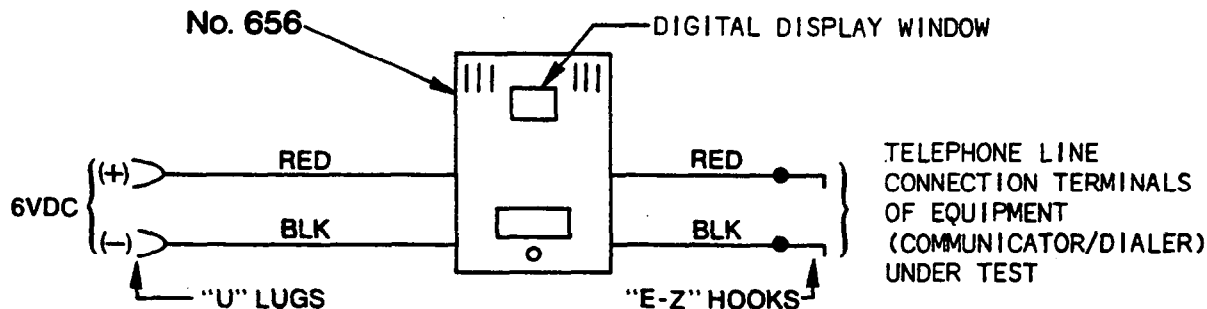

Important: Disconnect telephone line from equipment under test before connecting No. 656.

Diagram: CONNECTIONS

