

# New Zealand Programming Defaults

*For Use with PC1616/1832/1864 v4.2 NA Installation guide*

This document identifies the default settings for **PC1616/1832/1864 v4.2** Alarm Panels where they **differ** from the **standard** defaults found in the accompanying **Installation Manual**.

Sect.	Description	Setting
[001]	Zone definitions 1-8	01 03 03 03 03 03 03 03
[013]	1st System Option Code Opt [6]	Disabled
[017]	2nd System Option Code Opt [6]	Enabled

## Daylight Savings

[168]	Daylight Saving Time Start - - - - - Month	009
	Daylight Saving Time Start - - - - - Week	005
[169]	Daylight Saving Time End - - - - - Month	004

## Reporting Codes

[347]	Miscellaneous Reporting Codes	
	Event Buffer 75% Full	00

## Communications

[350]	Communicator Format Options	03 03
<b>Communicator Call Directions</b>		
[367]-[374]	Partition 1-8 Opening/Closing	ON OFF OFF OFF OFF OFF OFF OFF
[377]	Communication Variables	
	AC Failure Comm Delay	010
	Test Transmission Cycle	001
[380]	1st Communicator Option Codes Opt [6]	Enabled
[381]	2nd Communicator Option Codes Opt [5]	Disabled
	Opt [6]	Disabled

## PGMs

[501]	PGM Output Attributes	
	PGM [19] Command Output #1	OFF OFF ON ON OFF OFF OFF OFF

## International Options

[701]	1st International Option Codes	
	Opt #1 50 Hz AC	Enabled

