


Fire Burglary Instruments Inc.

999 A STEWART AVE.
GARDEN CITY, N.Y. 11530
516-222-9030

MODEL 320 PROGRAMMER

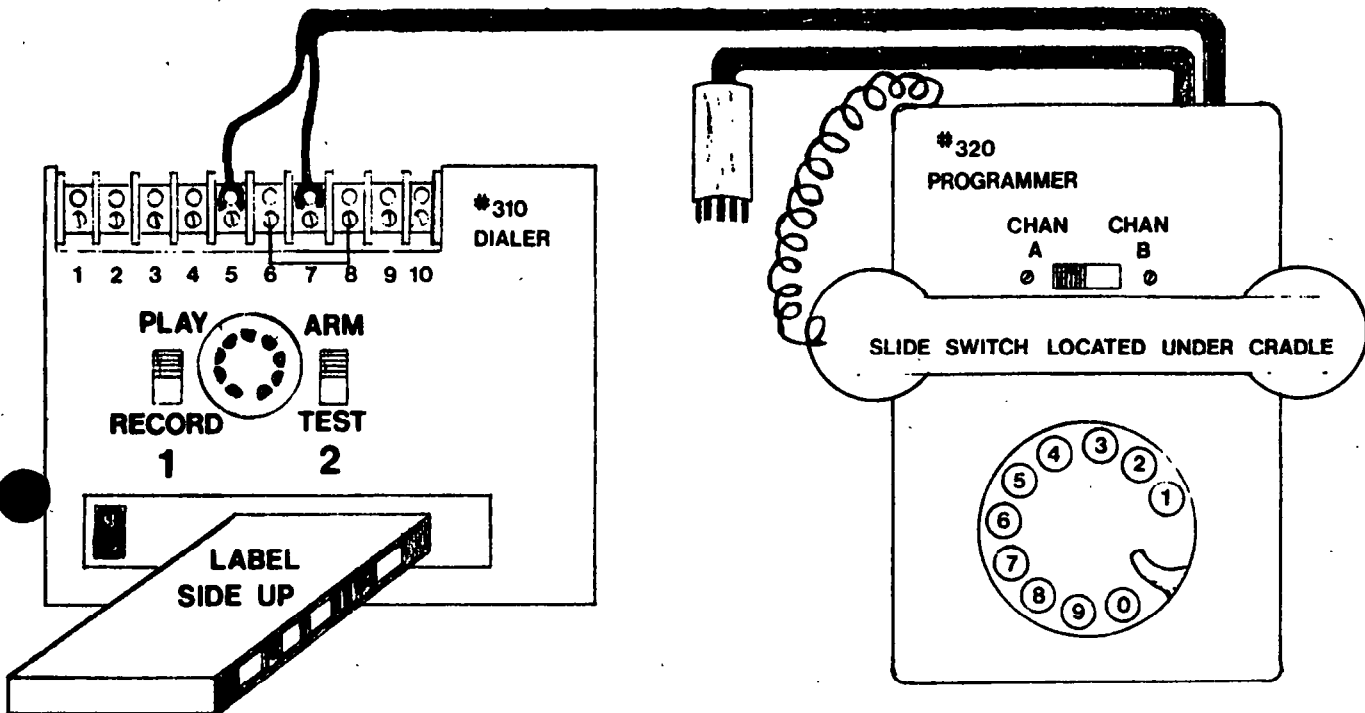

1. Initial switch set-up of dialer and programmer switches.

A. 310 Dialer

1. Apply power to dialer
2. Insert cartridge
3. Place switch 1 to record
4. Plug in cable from programmer to dialer

B. 320 Programmer

1. Leave receiver on cradle of telephone
2. Place switch 1 located under cradle to Channel A
3. Place red and black wire from programmer to terminals 5 & 7 (no polarity) and jump out terminals 6 & 8.

2. Channel "A" Programming

- A. Push down on dialer switch 2 to start unit.
- B. Lift the phone off hook for ten (10) seconds.
- C. Hang up the phone for 20-30 seconds.
- D. Pick up the phone for 5 seconds and then dial the desired phone number (use area code or 1 where required). Record message as if using a telephone. Sample message: PLEASE STAND - BY FOR AN EMERGENCY RECORDED MESSAGE. PLEASE STAND - BY FOR AN EMERGENCY RECORDED MESSAGE. THERE IS A BURGLARY IN PROGRESS AT (NAME AND ADDRESS, WITH DIRECTIONS OR HOUSE DESCRIPTION IF REQUIRED) PLEASE SEND ASSISTANCE AT ONCE. THERE IS A BURGLARY IN PROGRESS AT (NAME AND ADDRESS).
- E. To record another message, hang up the phone for ten(10) seconds and repeat step "D".

3. Channel "B" Programming

- A. Place switch on programmer to Channel B.
- B. Repeat steps A through E as outlined above.
- C. After you have programmed Channel A and Channel B, remove the programming plug from the dialer and place dialer switch 1 back to play mode.
- D. Trip Channel A (momentarily short 2 & 3) and verify the recorded message as follows:
 1. 20-25 seconds of no sound.
 2. Dial pulses (clicking sounds).
 3. Voice message.
 4. No sound.
- E. Trip Channel B (momentarily short 2 & 4) and verify the recorded message as outlined above.
- F. After completion of verification, dialer will automatically stop and be reset.

NOTE:1. The two leads on the programmer are for the test speaker in the handset. Install these leads on 5 and 7 with a jumper on 6 and 8 when verifying dialer program.

2. Should it be necessary to change a program or to re-record a tape, the tape must be completely erased, using a bulk eraser (Model 321). If a mistake is made on Channel A, DO NOT program Channel B as the bulk eraser will clear both channels at once.