

F-642NDDOOR SECOND DOOR TRANSMITTER INSTALLATION INSTRUCTIONS

Used with the F-64 DOOR DEMO sales tool, the F-642NDDOOR transmitter allows Touchpad operation with a second door transmitter to be demonstrated. The F-642NDDOOR is a model door and frame with a pre-wired F-LTRANS transmitter, F-TAB deadbolt sensor and door contact.

PROGRAMMING

Program the F-64 DOOR DEMO comes programmed in the same manner as a new factory default panel, mapping the Touchpad doors and PIR as follows:

- Touchpad Door 1 to Zone 9
- Touchpad Door 2 to Zone 10
- PIR Alarm to Zone 11

In addition, the F-64 DOOR DEMO is also programmed with the undocumented feature "Disable the Low Battery Display". Enter **Touchpad Configuration Mode** to learn the F-642NDDOOR as the secondary door transmitter. See the F-64TP and F-TAB installation instructions WI1499 for detailed information.

Napco Security Systems, Inc., 333 Bayview Avenue, Amityville, New York 11701
Sales, Repairs & Technical Service (Toll Free): (800) 645-9445
Technical Service Direct Line (Toll Free): (800) 645-9440
Publicly traded on NASDAQ Symbol: NSSC