




Publicly traded on NASDAQ Symbol: NSSC

PROGRAMMING INSTRUCTIONS




GEM-P1664 CONTROL PANEL/COMMUNICATOR

Programming the GEM-P1664 Control Panel with the "Classic" GEM-RP1CAe2 Keypad and the "K Series" GEM-K1CA Keypad

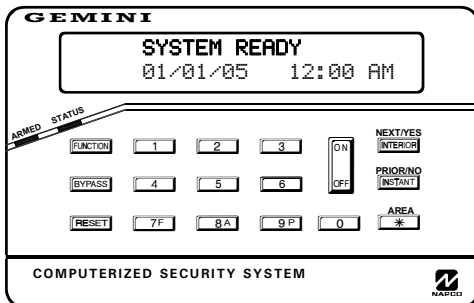


"Classic" GEM-RP1CAe2

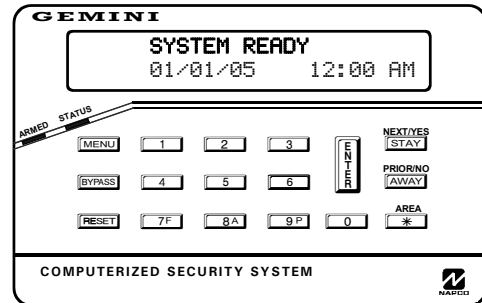

"K Series" GEM-K1CA

Quick Start (for "Classic" GEM-RP1CAe2)

 1. Refer to the wiring diagram, connect Siren, Aux. Power, PGM Output, Remote Bus, Earth ground, Zone and Telephone wiring. NOTE: See Installation Instructions (WI1424).
2. Connect AC power first and then the battery.
3. Configure the keypad (see page 42).
4. Access the Easy Menu Driven (Dealer Program) Mode:




Press NO (**INSTANT**) until "ACTIVATE PROGRAM Y/N" appears on the keypad display.

Press YES (**INTERIOR**) to Enter Dealer Program Mode. Go to page 5.

Quick Start (for "K-Series" GEM-K1CA)

 1. Refer to the wiring diagram, connect Siren, Aux. Power, PGM Output, Remote Bus, Earth ground, Zone and Telephone wiring. NOTE: See Installation Instructions (WI1424).
2. Connect AC power first and then the battery.
3. Configure the keypad (see page 42).
4. Access the Easy Menu Driven (Dealer Program) Mode:



Press NO (**AWAY**) until "ACTIVATE PROGRAM Y/N" appears on the keypad display.

Press YES (**STAY**) to Enter Dealer Program Mode. Go to page 5.

**THIS MANUAL INCLUDES FEATURES WHICH ARE ONLY AVAILABLE IN
CONTROL PANEL FIRMWARE VERSION 30B OR LATER.**

CHANGES FROM PREVIOUS EDITION

The following changes have been made to this manual (WI1422B) since the previous edition (WI1422A):









- Added new feature to address 2054 bit 2 (option 3) "TCP/IP Panel/Site Initiated Functions" on page 19.
- Added new feature to addresses 0461, 0483 and 0505 bit 6 (option 7) "Enable TCP/IP AES RPT" on page 20.

IMPORTANT NOTE

This manual supports the keypad programming of the GEM-P1664 control panel with the NAPCO "classic" GEM-RP1CAe2 keypad as well as the GEM-K1CA "K Series" keypad. The new "K Series" GEM-K1CA model offers the new STAY and AWAY buttons with simplified functionality, along with the new MENU and ENTER buttons.

While the instructions in this manual are depicted using the GEM-K1CA keypad, the manual applies to both the "classic" and the "K Series" keypads.

Program Mode is the same for both keypads--**only the button names have changed**, as follows:

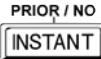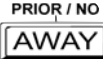- The  button and the  button operate identically (in Program Mode) for both keypads.
- The  button and the  button operate identically (in Program Mode) for both keypads.
- The  button and the  button operate identically (in Program Mode) for both keypads. The words "NEXT/YES button" are used in this manual.
- The  button and the  button operate identically (in Program Mode) for both keypads. The words "PRIOR/NO button" are used in this manual.

 **For consistency, it is recommended that all keypads either be all "classic" or all "K Series"--both keypad types should not be used in one alarm system.**



NAPCO Security Systems, Inc.
333 Bayview Avenue, Amityville, New York 11701
For Sales and Repairs, call toll free: (800) 645-9445
For direct line to Technical Service, call toll free: (800) 645-9440
Internet: <http://www.napcosecurity.com>

TABLE OF CONTENTS

| | | | |
|---|-----------|---|-----------|
| SYSTEM PROGRAMMING OPTIONS | 4 | Programming Conventions Used in this Manual | 14 |
| INTRODUCTION | 4 | SYSTEM DELAYS & TIMEOUTS | 15 |
| DOWNLOADING FROM A COMPUTER | 4 | SYSTEM OUTPUT TIMEOUTS | 16 |
| EASY MENU DRIVEN PROGRAM MODE | 5 | DOWNLOAD/CALLBACK OPTIONS | 16 |
| Dealer Program - Preliminary Information | 5 | SYSTEM OPTIONS | 17 |
| Accessing Dealer Program Mode | 5 | CS RECEIVER OPTIONS | 20 |
| Customizing a Default Program | 5 | CS SUBSCRIBER ID OPTIONS | 21 |
| GEM-RP1CAe2/GEM-K1CA Easy Program Menu | 6 | CS SYSTEM REPORTING OPTIONS | 22 |
| Total Number of Zones in Area 1 | 6 | CS AREA & SYSTEM REPORTING OPTIONS | 22 |
| Panel Zone Doubling | 6 | CS ZONE REPORTING OPTIONS | 23 |
| Fire Zones in Area 1 | 6 | CS USER REPORTING OPTIONS | 24 |
| 2-Wire Fire Zones in Area 1 | 6 | EZM GROUP OPTIONS | 25 |
| Local or Central Station Reporting System | 6 | AREA ARMING OPTIONS | 25 |
| Exit/Entry Zones in Area 1 | 6 | AREA BELL CONTROL OPTIONS | 26 |
| Interior Zones in Area 1 | 6 | KEYPAD OPTIONS | 27 |
| 24 Hour Zones in Area 1 | 6 | TEMPERATURE DISPLAY AT KEYPAD | 28 |
| Chime Zones in Area 1 | 7 | ZONE OPTIONS - ZONES 1 TO 16 | 29 |
| Chime 2 Zones in Area 1 | 7 | ZONE OPTIONS - ZONES 17 TO 32 | 30 |
| Exit/Entry2 Zones in Area 1 | 7 | ZONE OPTIONS - ZONES 33 TO 48 | 31 |
| 50 mS Loop Response Zones | 7 | ZONE OPTIONS - ZONES 49 TO 64 | 32 |
| Aux Output Activated on Alarm Zones | 7 | EXTERNAL RELAY CONTROL | 33 |
| Sensor Watch Zones | 7 | RF RECEIVER & SUPERVISORY TIMER OPTIONS 36 | |
| Keypad Sounder On Alarm Zones | 7 | CLEAR PROGRAM OPTIONS | 37 |
| Auto Bypass Re-entry Zones | 7 | USER PROGRAM MODE | 37 |
| Enable No EOLR Zones | 7 | Preliminary Information | 37 |
| Enable Telco Line Fault Test? | 7 | Accessing User Program Mode | 38 |
| Enable Burg Output Chirp on KeyFob? | 8 | User Codes | 38 |
| Enable SIA CP-01 Features? | 8 | Zone Descriptions | 39 |
| Number of Keypads in Area 1 | 8 | Date | 39 |
| Central Station Receiver 1 Telephone Number | 8 | Time | 39 |
| Central Station Receiver 1 Account Number | 8 | KEYPAD CONFIGURATION MODE | 40 |
| Central Station Receiver 1 Format | 8 | Keypad Installation | 40 |
| Enter User Codes | 8 | Configuring the Keypads | 40 |
| RF Transmitter Points | 9 | EASY MENU PROGRAMMING WORKSHEETS | 42 |
| Key Fob Transmitters as Arm/Disarm & Control Devices | 9 | ALPHABETICAL INDEX | 46 |
| Key Fob Transmitters as Zone Input Devices | 10 | ADDRESS NUMBER INDEX | 51 |
| Enter Zone Descriptions | 10 | GEM-P1664 WIRING DIAGRAM | 56 |
| Enter Date | 10 | | |
| Enter Time | 10 | | |
| Dealer Code | 10 | | |
| Test Timer | 10 | | |
| Clear Dealer Program | 10 | | |
| Cold Start | 10 | | |
| DIRECT ADDRESS PROGRAM MODE | 11 | | |
| Direct Address Overview | 11 | | |
| Address Mode Displays | 11 | | |
| Binary (Bit) Format Example | 11 | | |
| Decimal Format Example | 12 | | |
| Hexadecimal Format Example | 13 | | |

Refer to accompanying GEM-P1664 Installation Instructions (WI1424) for installation information.




SYSTEM PROGRAMMING OPTIONS

INTRODUCTION

The GEM-P1664 control panel may be programmed by various means, each of which will be covered in detail in the sections that follow. Keypad displays shown are for a GEM-RP1CAe2/K1CA (version 8 keypad), the recommended keypad for programming. For Programming Instructions with the GEM-RP2ASe2/GEM-K2AS, GEM-RP3DGTL/GEM-K3DGTL and the GEM-RP4RFC/GEM-K4RF series, see WI1423.

✓ **Downloading From a Computer.** This is the preferred method of programming. The panel may be downloaded from (or uploaded to) an IBM PC-compatible computer, either locally or remotely. Napco's PCD-Windows Quickloader software features context-sensitive help screens as well as an error-checking utility that prevents programming of incompatible or conflicting data to ensure proper panel operation. **Note:** Unattended downloading from a computer is not allowed for Fire Alarm or UL installations.

✓ **Easy Menu-Driven Program (Dealer Program) Mode - Keypad Programming.** The Easy Menu-Driven Program Mode allows keypad programming of number of zones in area 1, panel zone doubling, number of fire zones (both 4-wire and 2-wire), local or Central Station reporting, number of exit/entry zones, number of interior zones, number of 24 hour zones, number of chime zones, Chime 2 zones, Exit/Entry2 zones, 50ms loop response zones (**Note:** 750mS is required for Loop Response time in UL installations), aux output activated on alarm zones, sensor watch zones, keypad sounder on alarm zones, auto bypass re-entry zones, EOLR zones, number of keypads in area 1, Central Station telephone number, Central Station account number, Central Station receiver format, User Codes, RF transmitter points, RF keyfob transmitters, zone descriptions, date/time, dealer code, Test Timer, Telco line fault test, Burg output chirp on keyfob, keypad time/date display, enable CP-01 programming, and clear dealer program/cold start. For new panels, a custom default program may be created at the keypad. A menu-driven utility prompts the installer to configure the system. Further detailed customization is accomplished in the Direct Address Program Mode.

✓ **Direct Address (Dealer Program) Program Mode - Keypad Programming.** The Direct Address Program Mode is an extension of the Dealer Program Mode wherein data is entered at the keypad by location. This mode is accessed from the Easy Menu Driven Program Mode by pressing the  button at any time.

✓ **User Program Mode - Keypad Programming.** The User Program Mode is intended for authorized users and is limited to keypad programming of User Codes, Time, Date and Zone Descriptions.



DOWNLOADING FROM A COMPUTER

The control-panel program may be downloaded from the computer by any of the following methods.

Local Downloading

(**Note:** This procedure should be used after installation, after peripheral devices are connected).



For direct high-speed data transfer to the control panel from a desktop computer, connect the download jack (JP2) on the panel to the LOCAL jack (J3) on the Napco PCI2000/3000 computer interface using the supplied 6-conductor cable. (Refer to PCI2000/3000 Installation Instructions WI443 for wiring diagram and procedures).

Similarly, a high-speed local download may be made in the field using a notebook or laptop computer. Connect JP2 on the control panel to a Napco PCI-MINI computer interface using the 6-conductor cable supplied. (Refer to PCI-MINI Installation Instructions WI767).

Remote Downloading

(Also see PCI2000/3000 Installation Instructions WI443). **Note:** Unattended downloading from a computer is not allowed for Fire Alarm or UL installations.

Function Mode

Start by establishing a telco connection between the computer operator and the installer. During this procedure, voice contact will be lost, therefore both the installer and the computer operator should be familiar with the operation. When a steady high-pitched tone is heard at the site phone, access the "ACTIVATE DOWNLOAD" Function (see Keypad Programming Modes), then press the  or  button or the **NEXT/YES** button; the site phone will go dead.








Hang up the phone and wait for a call from the central station confirming a successful download.

Callback Method

An installed, unattended panel may be programmed or reprogrammed remotely using the Callback-Method Download feature of the PCD-Windows software. Remote downloading requires a modem compatible with the PCI2000/3000. Upon answering the call from the computer, the panel will verify the Download Security Code and, if confirmed, will establish a connection. If a Callback Number is programmed into the panel, the panel will automatically disconnect and call the computer at this number before establishing a connection.

EASY MENU DRIVEN PROGRAM MODE

DEALER PROGRAM - PRELIMINARY INFORMATION

-  The Default Dealer Code is . Use this code to enter the Dealer Program Mode to program a custom Dealer Code, which replaces the Default Dealer Code. If you clear your Dealer Code, use the Default Dealer Code once again to enter programming.
-  After entering codes or data, press the save  button. Data will not be stored into memory unless  is pressed.
-  If the keypad is in the Program Mode and no activity is detected for longer than 4 minutes, a steady tone will sound.
-  Silence the sounder by the button to continue, or by pressing the button to exit.
-  When programming a Multiple Area System, Direct Address Programming Mode must be used to complete the program.

For ease of programming, it is recommended that a GEM-RP1CAe2 or GEM-K1CA be used. If a GEM-RP2ASe2/ GEM-K2AS is used, see WI1423.

ACCESSING DEALER PROGRAM MODE

1. Press
Dealer Code (Default =)

2. Press PRIOR/NO button until "ACTIVATE PROGRAM Y/N" appears on LCD screen.

3. Press NEXT/YES button to Enter Dealer Program Mode.


4. Press **to Exit Dealer Program Mode when finished.**

CUSTOMIZING A DEFAULT PROGRAM

For new panels, you can design a default program that will best suit your application. Using this procedure, you will configure the panel for:

- Number of Zones in Area 1
- Panel Zone Doubling
- Fire Zones in Area 1
- 2-Wire Fire Zones in Area 1
- Local or Central Station Reporting System
- Exit/Entry Zones in Area 1
- Interior Zones in Area 1
- 24 Hour Zones in Area 1
- Chime Zones in Area 1
- Chime 2 Zones in Area 1
- Exit/Entry2 Zones in Area 1
- 50mS Loop Response Zones (Note: 750mS is required for Loop Response time in UL installations).
- Aux Output Activated on Alarm Zones
- Sensor Watch Zones
- Keypad Sounder on Alarm Zones
- Auto Bypass re-entry Zones
- Enable no EOLR Zones
- Enable Telco Line Fault Test
- Enable Burg Output Chirp on Keyfob
- Enable CP-01 Programming
- Number of Keypads in Area 1
- Central Station Receiver 1 Tel. Number
- Central Station Receiver 1 Account Number
- Central Station Receiver 1 Format
- Enter User Codes
- RF Transmitter Points
 - Quick "Enroll" Method
- Key Fob Transmitters
- Enter Zone Descriptions
- Enter Date
- Enter Time
- Dealer Code
- Test Timer

This procedure will automatically set up system keypads, EZMs, wireless transmitters, etc. After your basic default program has been loaded, you may alter it as necessary in the Direct Address Program Mode.

NEW PANELS: The custom default program may be created for new panels only. Once the panel has been programmed by any means, the number zones will be suppressed and cannot be changed. Should it be necessary to create a new custom default program, (a) from the Dealer Program Mode, press the button to enter the Direct Address Program Mode; (b) access Location 2285 (Clear Program); (c) press the  button and start over.



GEM-RP1CAe2/GEM-K1CA Keypad Easy Program Menu

To create a custom program using the GEM-RP1CAe2/GEM-K1CA keypad, simply answer the following questions and record your information on the *Easy Menu Programming Worksheet*. In each of the following steps, press **[MENU]** to set cursor, the NEXT/YES button to go forwards, the PRIOR/NO button to go backwards, **[SAVE]** to save and **[RESET]** twice to exit at any time.

```
#of Zns in Area1
Enter # Zones XX
```

(Direct Entry)

Total Number of Zones in Area 1 (New Program Only)

- Enter the total number of zones to be programmed for Area 1.
- Valid entries are from 01 to 64. Directly enter the total number of zones, including leading zeros.
- The system is based on groups of 4 zones each (after the first 8 zones), and will automatically round up to the next group of 4. For example, if you enter 18, it will automatically convert this to 20 zones. Press **[SAVE]** to save. Press the NEXT/YES button to proceed.

```
EZ Zone Doubling
Enabled? Y/N
```

(Press YES or NO)

Panel Zone Doubling (New Program Only)

- To double the number of hardwired panel zones from 8 to 16, press YES.
- If Panel Zone doubling is not desired, press the PRIOR/NO button.
- The 16 zones will remain EOL terminated zones, requiring Normally Closed devices only.
- Refer to Wiring Diagram and Installation Instructions for wiring instructions

```
Fire Zones
Enter Zone # **
```

(Direct Entry)

Fire Zones in Area 1 (New Program Only)

- Enter the zone number of any Fire Zones (including 2-wire, 4-wire or wireless).
- Valid entries are from 01 to 64.
- Directly enter each zone number, including leading zeros, and press **[SAVE]** to save, and then repeat for any additional zone(s). Press the NEXT/YES button to proceed.

```
2-Wire Fire Zns
Enter Zone # **
```

(Direct Entry)

2-Wire Fire Zones in Area 1 (New Program Only)

- Enter the zone number of any Fire Zone (from previous question) to be used with 2-wire smoke detectors.
- Valid entries are 07 and 08. Directly enter each zone number, including leading zeros.
- Press **[SAVE]** to save, and repeat for any additional zone(s); press NEXT/YES to proceed.

NOTE: Only zones which have been designated as Fire Zones can be programmed as 2 Wire Fire zones. JP3 must be set to "2-WF" position for 2-wire fire. (refer to Installation Instructions).

```
Report All Zones
To Central? Y/N
```

(Press YES or NO)

Local or Central Station Reporting System (New Program Only)

Press the NEXT/YES button for all zones to report; press the PRIOR/NO button for local system

```
Exit/Entry Zones
Enter Zone # XX
```

(Direct Entry)

Exit/Entry Zones in Area 1 (New Program Only)

- Enter the zone numbers of zones to be used as Exit/Entry zones.
- Valid entries are from 01 to 64. Directly enter each zone number, including leading zeros.
- Press **[SAVE]** to save and repeat for any additional zone(s); press the NEXT/YES button to proceed.

NOTE: Exit/Entry Entry time of 30 seconds will automatically be programmed.

```
Interior Zones
Enter Zone # XX
```

(Direct Entry)

Interior Zones in Area 1 (New Program Only)

- Enter the zone numbers to be used as Interior Zones.
- Valid entries are from 01 to 64. Directly enter each zone number, including leading zeros.
- Press **[SAVE]** to save and then repeat for any additional zone(s).
- Press the NEXT/YES button to proceed.
- All Interior zones will also be automatically programmed as "Exit/Entry Follower" and as "Power Up Delay" zones.

```
24 Hour Zones
Enter Zone # **
```

(Direct Entry)

24 Hour Zones in Area 1 (New Program Only)


- Enter the zone numbers of zones to be used as 24 Hour zones.
- Valid entries are from 01 to 64. Directly enter each zone number, including leading zeros.
- Press **[SAVE]** to save and repeat for any additional zone(s); press the NEXT/YES button to proceed.

NOTE: 24 Hour Zones will automatically be programmed as audible (Burg Output).

```
Chime Zones
Enter Zone # **
```

(Direct Entry)

Chime Zones in Area 1 (New Program Only)


- Enter the zone numbers which are to be used as Chime Zones.
- Valid entries are from 01 to 64. Directly enter each zone number, including leading zeros.
- Press  to save, then repeat for any additional zone(s), press the NEXT/YES button to proceed.

NOTE: A chime time of 2 seconds will be automatically programmed.

```
Chime 2 Zones
Enter Zone # **
```

(Direct Entry)

Chime 2 Zones in Area 1 (New Program Only)

- Enter the zone numbers which are to be used as Chime 2 Zones.
- Valid entries are from 01 to 64. Directly enter each zone number, including leading zeros.
- Press  to save, then repeat for any additional zone(s), Press the NEXT/YES button to proceed.


NOTE: A chime time of 2 seconds will be automatically programmed.

Chime 2 zones give a distinct pulsating tone when zone is faulted.

```
Exit/Entry2 Zones
Enter Zone # **
```

(Direct Entry)

Exit/Entry2 Zones in Area 1 (New Program Only)


- Enter the zone numbers of zones to be used as Exit/Entry zones.
- Valid entries are from 01 to 64. Directly enter each zone number, including leading zeros.
- Press  to save and repeat for any additional zone(s); press the NEXT/YES button to proceed.

NOTE: An Exit/Entry 2 Entry Time of 30 seconds will automatically be programmed.

```
50mS Loop Zones
Enter Zone # **
```

(Direct Entry)

50 mS Loop Response Zones (New Program Only) Note: 750mS is required for Loop Response time in UL installations.


- Enter the zone numbers of zones to be have a 50mS loop response.
- Valid entries are from 01 to 08. Directly enter each zone number, including leading zeros.
- Press  to save, then repeat for any additional zone(s), Press the NEXT/YES button to proceed.

Note: Only panel zones 01-08 can be programmed for Quick Loop Response. All other zones can be programmed via their respective EZM's (hardware). Time can also be adjusted via address 2280.

```
Aux Output Zones
Enter Zone # **
```

(Direct Entry)

Aux Output Activated on Alarm Zones (New Program Only)


- Enter the zone numbers of zones to activate the PGM2 upon alarm.
- Valid entries are from 01 to 64. Directly enter each zone number, including leading zeros.
- Press  to save, then repeat for any additional zone(s), Press the NEXT/YES button to proceed.

NOTE: A PGM2 Timeout of 15 minutes will automatically be programmed.

```
Sensor Watch Zns
Enter Zone # **
```

(Direct Entry)

Sensor Watch Zones (New Program Only)


- Enter the zone numbers of zones to be Sensor Watch zones.
- Valid entries are from 01 to 64. Directly enter each zone number, including leading zeros.
- Press  to save, then repeat for any additional zone(s), Press the NEXT/YES button to proceed.

NOTE: A Sensor Watch Time of 24 hours will automatically be programmed.

```
KP Sndr Alrm Zns
Enter Zone # **
```

(Direct Entry)


Keypad Sounder On Alarm Zones (New Program Only)

- Enter the zone numbers of all zones to activate the Keypad Sounder upon alarm.
- Valid entries are from 01 to 64. Directly enter each zone number, including leading zeros.
- Press  to save, then repeat for any additional zone(s), Press the NEXT/YES button to proceed.

```
Auto Byp REnt Zn
Enter Zone # **
```

(Direct Entry)

Auto Bypass Re-entry Zones (New Program Only) (Not Evaluated by UL)

- Enter the zone numbers of zones to be Auto Bypass Re-entry zones.
- Valid entries are from 01 to 64. Directly enter each zone number, including leading zeros.
- Press  to save, then repeat for any additional zone(s), Press the NEXT/YES button to proceed.
- Auto Bypass Re-entry Zones allow the system to be armed with the zone faulted but come back into the system (armed) when the zone is subsequently closed.

```
Enable No EOLR
Zones Y/N
```

(Press YES or NO)

Enable No EOLR Zones (New Program Only)

- Press YES to program all zones except 24 Hr & fire zones for No End Of Line Resistor. Press NO to continue. Do NOT program this feature for UL installations.

```
Enable Telco
Line Test? Y/N
```

(Press YES or NO)

Enable Telco Line Fault Test?

- Press YES to enable Telco Line Fault Test.
- Press NO to continue. **NOTE: If enabled, a Telco Line Fault Test Delay of 60 sec. will automatically be programmed.**



Enable Burg Out Chirp? Y/N

(Press YES or NO)

Enable SIA CP-01? Y/N

(Press YES or NO)

Area 1 Keypads Enter # KPs 01

(Direct Entry)

Central Phone #

(Direct Entry)

Central Station Account # (____)

(Direct Entry)

See WI for Info Rcvr Format (0)

(Direct Entry)

Enter user code-> U01 123 - 9-

User# User Code Area 1 Area 2

Enable Burg Output Chirp on KeyFob?

- Press the NEXT/YES button to enable Burg Output Chirp on KeyFob Arm / Disarm.
- Press the PRIOR/NO button to continue.

NOTE: The Burg Output will chirp once on Keyfob Arm and twice on Keyfob Disarm.

Enable SIA CP-01 Features?

- Press the NEXT/YES button to enable.
- Press the PRIOR/NO button to continue.

The SIA CP-01 Features are designed to reduce the incidence of false alarms. **NOTE:** Do not enable unless reporting, otherwise system trouble *Fail to Communicate* may occur.

Number of Keypads in Area 1

- Enter the total number of Keypads to be installed in Area 1.
- Valid entries are from 01 to 07. Directly enter the number of keypads, including leading zeros. Press to save. Press the NEXT/YES button to proceed.

NOTE: Area 2-4 keypads must be assigned in Direct Address Programming. See Keypad Options.

Central Station Receiver 1 Telephone Number

- Enter telephone number of up to 16 digits.
- Press through for digits 1-9; for a zero and for a blank (*).
- Press through for letters B-F, respectively.
- Pre-Dial Delay = "D" (); Dial-Tone Detection = "E" ().
- Press to save and press the NEXT/YES button to proceed.

NOTE: Central Station Receiver 2 and 3 Telephone Numbers must be entered in Direct Address Programming. See CS Receiver Options.

Central Station Receiver 1 Account Number

- Enter an account number of up to four digits.
- Press through for digits 0-9, and for a blank (*).
- Press to save and press the NEXT/YES button to proceed.

NOTE: Central Station Receiver 2 and 3 Account Numbers must be entered in Direct Address Programming. See CS Reporting Options.

Central Station Receiver 1 Format

- From the table at the right enter the receiver format.
- Press through , and for blank (*).
- Press through for letters B-E.
- Press to save; press the NEXT/YES button to proceed.

| DATA ENTRY | CS RECEIVER 1 FORMAT |
|------------|---------------------------------|
| • (blank) | Ademco Slow, Silent Knight Slow |
| 2 | Radionics Fast |
| 3 | Silent Knight Fast |
| 4 | Radionics, DCI, Franklin Slow |
| 5 | Universal High Speed |
| B | SIA |
| C | Ademco Point ID |
| E | Pager |

Enter User Codes (Press to set cursor.)


For default program, enter up to 64 User Codes, with Area 1, 2, 3 & 4 Options.

- Press the () button once to set the cursor to the User Code.
- Press through to enter a code from 3 to 6 digits, leave blank (*) any trailing boxes.
- Press to set the cursor to the Area 1 Options Level. Refer to the table below for available options. For Area 2 Options, press the () button once again. For Area 3 & 4 Options, press () a third and fourth time.

- If "Enable Global Ambush Code" (Address 1422) is enabled and "Global Ambush Code" (Address 2045) is **not** left blank (*), *do not* program the first two digits of ANY User Code the same as the "Global Ambush Code". See Address 2045 further in this manual for more information.
- Press to save. **Note:** Duplicate User Codes are not allowed; therefore a duplicate Code entered in the LCD Window will erase when is pressed. To proceed to the next User Code, press () to set the cursor to the User Number and change it using the number buttons. Press the NEXT/YES button to proceed.

| USER OPTIONS | | | | |
|----------------------------|----------------|----------------|----------------|----------------|
| USER CODE (UP TO 6 DIGITS) | AREA 1 OPTIONS | AREA 2 OPTIONS | AREA 3 OPTIONS | AREA 4 OPTIONS |
| | | | | |

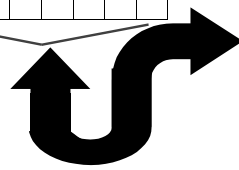

| USER AREA OPTIONS | | |
|-------------------|----------|----------------|
| DATA ENTRIES | | OPTION ENABLED |
| L | R | |
| blank(*) | blank(*) | Disabled |
| blank(*) | 1 | Arm/Disarm |
| blank(*) | 2 | Arm Only |
| blank(*) | 3 | Service |
| blank(*) | 4 | Access |
| blank(*) | 5 | Ambush |
| blank(*) | Add 8 | * User Program |
| 4 | blank(*) | Bypass Enable |



Example: Program a code of "2222" for user 02, with area 1 options of "Arm/Disarm" and "User Program". Enter "2222" for a user code, "*" (blank) "9" for area 1 options and "*" (blank) "*" (blank)" for area 2 options.


| AREA OPTIONS | EXPLANATION |
|----------------|---|
| Disabled | User Code not active in this area. |
| Arm/Disarm | Allows User Code to arm/disarm this area. |
| Arm Only | Prevents User Code from disarming this area. |
| Service | A Service Code has restricted arm/disarm rights; if an area is armed with a Service Code, a "MIGRATOR ON" appears on the GEM-RP2ASe2 keypad and the area can be disarmed with any valid User Code, including a Service Code. If the area is armed with OTHER than a Service Code, it CANNOT be disarmed with a Service Code. This is typically used to allow tradesmen access to premises under control of the owner. |
| Ambush | There are two types of Ambush Codes: (1) A 2-digit code (prefix) that is entered immediately prior to (and as part of) the regular User Code and (2) A separate and unique User Code. Disarming with an Ambush Code will cause a silent report to be sent to a central station. Thus, should a user be forced to disarm, he can silently signal an emergency while appearing to be merely disarming the system. |
| Access | This is normally used to activate a door strike while an area is disarmed. Also program "Access Control on PGM2. Output" (Address 0719) and "PGM2 Output Access Control Timeout" (Address 0711). |
| * User Program | User Program Option is enabled. To enable User Program Option for any user, add 8 to the data entry for Area Option (see example). Then, User Programming can be performed at any Keypad by a user code with user program enabled. |
| Bypass Enable | Security Bypass--Bypass is enabled only with a security code. |

Related User Options: "Enable Global Ambush Code" (Address 1422), "Global Ambush Code" (Address 2045) & "Enable Manager's Mode" (Address 1421).


CHANGING OR CANCELING A CODE: To change any code, merely program over the existing code as described above and press  to save. Similarly, to cancel a code, blank out each number of the code and press  to save.











 

 
 
| ZN# | XMIT# | CS | P |
|-------|--------|----|-----|
| Zn01- | 000000 | : | 0-0 |

Zone # Mapped to Xmitter ID Check Sum Point #

RF Transmitter Points (Press  to set cursor.)


For each transmitter enter: (For wireless systems only. Also see Quick Method, which follows)

- The **zone number** (01–64) to which the transmitter will be mapped.
- The **6-digit RF ID #** and **1-digit checksum number** printed on the transmitter and box,
- The **point number** (1–2); enter "9" for *unsupervised* (all points).
- Press  to save and NEXT/YES button to proceed when all transmitters have been entered.

NOTE: When programming the ID Code number, "0" through "9" =  through  ; A =   ; B =   ; C =   ; D =   ; E =   and "F" =  .

Quick "Enroll" Method: If a receiver is already installed in the panel, transmitter wireless points can be programmed automatically ("enrolled") using the following procedure. **NOTE:** The transmitter point will be enrolled only if the signal strength is 3 or greater.

| ZN# | XMIT# | CS | P |
|-------|--------|----|-----|
| Zn01- | 000000 | : | 0-0 |

1. Enter the zone number to which the transmitter point will be mapped.
2. Press  to enter the Enroll Mode. The red and green LEDs on the keypad will flash and the window will display as shown at left.
3. Open the loop of the point that is to be programmed (GEM-TRANS2 only).
4. Install the transmitter battery. The keypad will beep to indicate that the point has been successfully enrolled. Multi-point transmitters can be mapped to successive zones simultaneously.

| ZN# | XMIT# | CS | P |
|-------|---------|-----|---|
| ZN01- | ENROLL: | A-- | |

Example. A 2-point transmitter has the RF ID number 287613:1. Map point 1 to Zone 6 and point 2 to Zone 9.

1. Enter the Enroll mode as described above.
2. Enter Zone "06".
3. Open point-1 loop.
4. Install the battery. The keypad will beep once to indicate that one point has been programmed. (Transmitter 287613:1, point 1 will be mapped to Zone 6).
5. Enter Zone "09".
6. Close point-1 loop and open point-2 loop.
7. Remove the transmitter battery, then re-install it. The keypad will beep once to indicate that one point has been programmed. (Transmitter 287613:1, point 2 is mapped to Zone 9).


KEY FOB ZONE ASSIGNMENT: Key fobs can also be assigned to zones to allow multiple wireless panic buttons on one alarm system, each reporting to a central station, a pager or having a description on the keypad that describes the person holding the key fob, the location where the person holding the key fob is stationed, or the special purpose of the key fob button being depressed. See the next page on Key Fob Transmitters as Zone Input Devices .


 












| KF | A | XMIT# | CS | OP |
|-----|---|--------|----|------|
| 01- | 0 | 000000 | : | 0 00 |

KF # Area Xmitter ID Check Sum Aux 1&2

Key Fob Transmitters as Arm/Disarm & Control Devices (Press  to set cursor.)

Key fobs can be programmed as "Arm/Disarm" devices using their On/Off buttons (refer to WI752). For each Key Fob Transmitter, enter:

 - The **Key Fob Transmitter number** (01–8).
- The **area number** to which transmitter is assigned (0 to disable keyfob, 1 through 4).
- The **6-digit RF ID #** and **1-digit checksum number** printed on the transmitter and box,
- The **Aux 1 Option** (see key fob aux 1 & aux 2 options).
- The **Aux 2 Option** (see key fob aux 1 & aux 2 options).
- Press  to save and NEXT/YES button to proceed when all key fobs have been entered.

NOTE: When programming the ID Code number, "0" through "9" =  through  ; A =   ; B =   ; C =   ; D =   ; E =   and "F" =  .

EASY MENU DRIVEN PROGRAM MODE

Key Fob Transmitters as Zone Input Devices

(Refer to display above: press the AWAY button to go backwards).

Each of the 4 key fob buttons can be assigned to a zone. For example, On button = point 1; Off button = point 2; A1 = point 3; A2 = point 4. Up to 64 key fobs (using 1 button) or 32 key fobs (using 2 buttons) or 16 key fobs (using all 4 buttons) or any combination up to a maximum of 64 controlled zones can be assigned, providing multiple wireless panic buttons on a system, each reporting to a Central Station or a pager and/or annunciating on a keypad the key fob zone number with a description. To assign a key fob to a zone: program the key fob as you would a transmitter, entering the key fob's ID code, check sum and point number at the appropriate zone. The "Quick Method" is not allowed. The zone may be hardwired to an electrical sensor as well as assigned to a key fob (either one will activate the zone alarm output).

NOTE: If assigning a key fob to a zone, the "ON/OFF" buttons on the key fob will no longer arm/disarm the system. The key fob is converted to a "panic only" device.

| DATA ENTRY | AUX 1/AUX 2 OPTIONS |
|------------|-----------------------|
| 0 | None |
| 1 | Relay Group 1 Toggle |
| 2 | Relay Group 2 Toggle |
| 9 | Keypad Panic |
| A | Keypad Aux. |
| B | Instant |
| C | PGM2 Output Toggle |
| D | Access on PGM2 Output |
| E | Arm STAY |
| F | Interior Button |

01-

(Direct Entry)

Enter Zone Descriptions

- For each zone, enter a description of up to two lines. Press to save each description.
- See page 41 for instructions for entering characters and numbers for the zone descriptions.
- To proceed to the next description, place the cursor under the Zone Number (e.g. "1") and

press the number that corresponds to the zone. Program new description as above. **NOTE:** Zone Descriptions can only be entered through the GEM-RP1CAe2 Keypad or by using the Napco Quickloader Software. See Easy Menu Programming Worksheet for available zone description characters.

Enter Date
(/ /)

(Direct Entry)

Enter Date (Press to set cursor).

- Enter the current date in the format MM/DD/YY. (MM = month, DD = day and YY = year.
- Press to save. Press the NEXT/YES button to proceed.

Enter Time
(:)

(Direct Entry)

Enter Time (Press to set cursor.)

- Enter the current time in format HH:MMA/P, where HH=hours (01-12); MM=minutes (00-59).
- Select AM or PM by pressing any number button.
- Press to save. Press the NEXT/YES button to proceed.

Dealer Code
456789

Dealer Code

- Directly enter the Dealer Code (default = 456789), using through buttons.
- Press to save. Re-enter the Dealer Code to verify the previous code. Press to save.
- Press the NEXT/YES button to proceed.

DEALER CODE
RE-ENTER

Test Timer

- Select day(s) by simply erasing the unwanted days. Move the cursor over the day and press any number key to erase/restore the day. For example, "Monday" and "Friday" will appear as: "•M•••F•"
- Enter Time (in 24 hour format) by moving cursor under the left H and pressing two digits to overwrite the existing default of 00. **Note:** Midnight is 00:00. Enter minutes by continuing to enter data or if just updating minutes move the cursor under the left M and enter the two digits to overwrite the existing default of 00. Use as right cursor one position.

TEST TIMER
SMTWTFS HH:MM

EXIT DEALER PROGRAM MODE: This completes the custom default program. Press to enter the Direct Address Program Mode for further programming or press once again to end all programming and resume normal keypad operation.

CLEAR PROGRAM: Should it be necessary to create a new custom default program, (a) from the Dealer Program Mode, press to enter the Address Program Mode; (b) access Location 2285 (Clear Program) or 2286 (Cold Start); (c) press and then (d) press to exit the Dealer Program Mode. A "SYSTEM TROUBLE/E09-00 SERVICE" will occur. Press to silence the keypad.

Clear Dealer Program (Erases Dealer Program)

Use this feature to erase the Panel Program, while maintaining Scheduled Data and Zone Descriptions. Access address 2285 and press . Data entry is not allowed. **NOTE:** Enter Easy Menu Driven Program Mode to reprogram system.

2285 XX H

Cold Start (Erases Entire Program)

This erases all programmed data (Dealer Program, Zone Description Data and Schedules). Access address 2286 and press . Data entry is not allowed. **NOTE:** Some features (schedules) can only be programmed again with the Downloading Software.


2286 XX H

EASY MENU DRIVEN PROGRAM MODE


DIRECT ADDRESS PROGRAM MODE

DIRECT ADDRESS OVERVIEW

Direct Address Programming allows you to go directly to the address locations (up to 2287) and change the data entries manually in order to customize your control panel options. Whereas the Easy Menu Program Mode guides you through limited selections to get you started, **Direct Address Program Mode** allows you to change all options directly. It consists of up to 2287 address locations each with data entry locations as shown in the following diagram (below left). The data entry location accepts data in one of three formats: Binary, Decimal and Hexadecimal (explained below in "Address Mode Displays"). The following diagram (below right) illustrates a *Decimal* format data entry location (using a GEM-RP1CAe2 keypad).

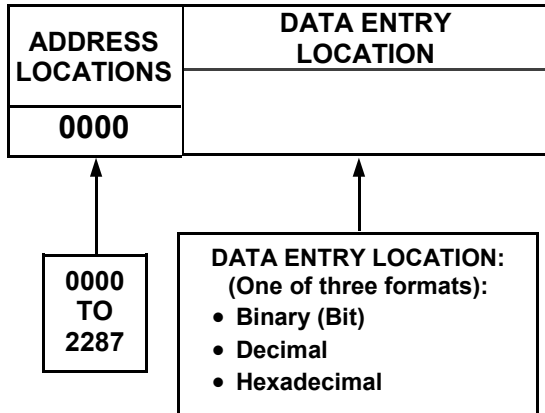

GEM-RP1CAe2 Keypad Display Example

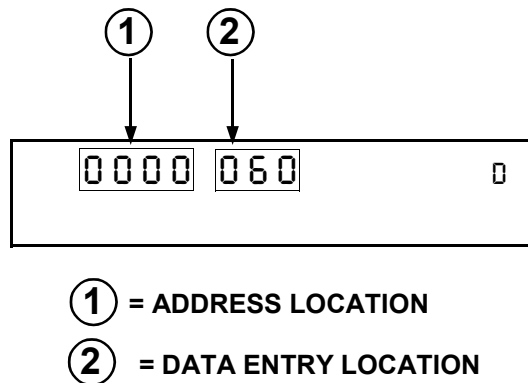


ADDRESS MODE DISPLAYS

There are three types of address displays when programming in Direct Entry Program Mode, as follows:

A) Binary (Bit) Format Example

Settings (such as Zone Features) display and accept data in "number" format. For example, Zone Features are turned on by the pressing of keypad buttons 1 through 8, with the activated Zone(s) displaying the corresponding decimal digit (replacing deactivated zones which are signified by dashes).

EXAMPLE: BIT Format with the GEM-RP1CAe2: Program Zones 2, 4, 5 and 7 as *Exit/Entry Follower Zones*.

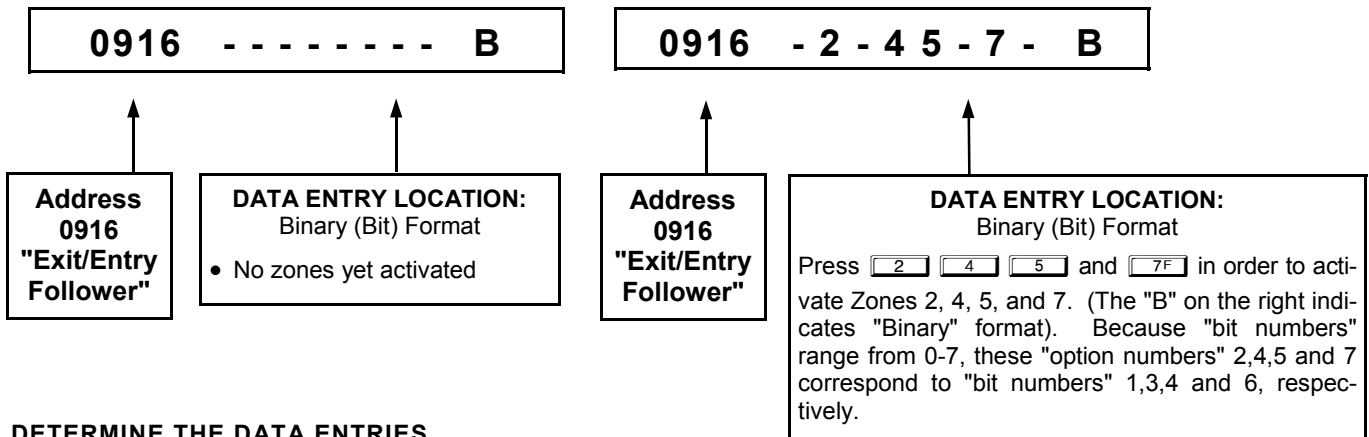

DETERMINE THE DATA ENTRIES

- Referring to ZONE FEATURES in the Programming Worksheets that follow, the Exit/Entry Follower for Zones 1 through 8 are located at address 0916.

DIRECT ADDRESS PROGRAM MODE

| ZONE FEATURES | ADDR | ZONES 1 → 8 | | | | | | | | ADDR | ZONES 9 → 16 | | | | | | | |
|---------------------|------|-------------|----|----|----|----|----|----|----|------|--------------|-----|-----|-----|-----|-----|-----|-----|
| | | Z1 | Z2 | Z3 | Z4 | Z5 | Z6 | Z7 | Z8 | | Z9 | Z10 | Z11 | Z12 | Z13 | Z14 | Z15 | Z16 |
| | | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 |
| Exit/Entry Follower | 0916 | | | | | | 6 | 7 | 8 | 0911 | | | | | | | | |


PROGRAM THE DATA ENTRIES

1. Enter the panel's Dealer Security Code, then press **[MENU]**.
2. Answer NO to all questions until "ACTIVATE PROGRAM Y/N" is displayed; then press YES. **NOTE:** If you pass "ACTIVATE PROGRAM", scroll backward using **[BYPASS]**.
3. Press **[RESET]** to enter the Address Program Mode. Address "0000" will display.
4. Press **[0]** **[9P]** **[1]** **[6]** to access Address 0916. *The existing data will display and the cursor will advance to the data field.*
5. Press **[6]** **[7F]** **[8A]**. The numbers 6,7 and 8 will appear on the keypad display indicating the zones activated.
6. Press **[ENTER]** to save. Address 0916 is now programmed with "6,7,8".
7. Press **[MENU]** and enter another 4-digit address to continue programming --or-- press **[RESET]** to exit and resume normal keypad operation.

B) Decimal Format Example

Settings (such as Entry and Exit Delay) display and accept data in decimal format, as a 3 digit number. Data is entered directly, by pressing keys 0 – 9, with the cursor automatically moving to the right upon each key press.

EXAMPLE: DECIMAL Format with the GEM-RP1CAe2: Program *Abort Delay* to be 15 seconds.

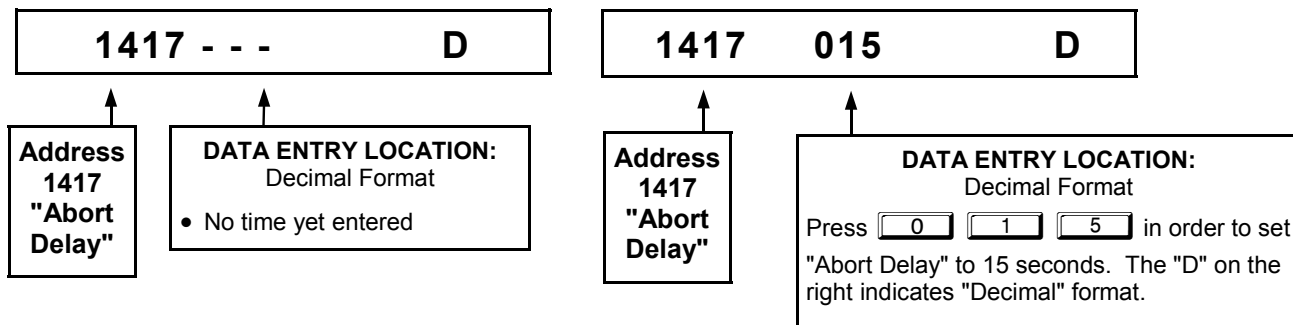

DETERMINE THE DATA ENTRIES

1. Referring to SYSTEM DELAYS & TIMEOUTS in the Programming Worksheets that follow, the Abort Delay is located at address 1417:

| ABORT DELAY (sec.) | ADDRESS 1417 | | |
|--------------------|--------------|--|--|
| | | | |

[Default = 0 sec. = blank (*)]

PROGRAM THE DATA ENTRIES

1. Enter the panel's Dealer Security Code, then press **[MENU]**.
2. Answer NO to all questions until "ACTIVATE PROGRAM Y/N" is displayed; then press YES. **NOTE:** If you pass "ACTIVATE PROGRAM", scroll backward using **[BYPASS]**.
3. Press **[RESET]** to enter the Address Program Mode. Address "0000" will display.
4. Press **[1]** **[4]** **[1]** **[7F]** to access Address 1417. *The existing data will display and the cursor will*

advance to the data field.


5. Press . The numbers 015 will appear on the keypad display indicating the number of seconds entered.
6. Press to save. Address 1417 is now programmed with a 15-second Abort Delay.
7. Press and enter another 4-digit address to continue programming--or--press to exit and resume normal keypad operation.

C) Hexadecimal Format Example

Data such as Report Codes displays and accepts data by means of a Hexadecimal display. Data is entered directly, by pressing keys 1 – 9, for zero, and through for hex B through F (11-15), with the cursor automatically moving to the right upon key press. See table below.

| HEXADECIMAL ENTRIES | | | | | |
|---------------------|---|-----------------|-------------|---|-----------------|
| ENTRY TOTAL | PRESS | KEYPAD DISPLAYS | ENTRY TOTAL | PRESS | KEYPAD DISPLAYS |
| blank | <input type="button" value="0"/> | • | 8 | <input type="button" value="8"/> <input type="button" value="A"/> | 8 |
| 1 | <input type="button" value="1"/> | 1 | 9 | <input type="button" value="9"/> <input type="button" value="P"/> | 9 |
| 2 | <input type="button" value="2"/> | 2 | 10 | <input type="button" value="*"/> <input type="button" value="0"/> | 0 |
| 3 | <input type="button" value="3"/> | 3 | 11 | <input type="button" value="*"/> <input type="button" value="1"/> | B |
| 4 | <input type="button" value="4"/> | 4 | 12 | <input type="button" value="*"/> <input type="button" value="2"/> | C |
| 5 | <input type="button" value="5"/> | 5 | 13 | <input type="button" value="*"/> <input type="button" value="3"/> | D |
| 6 | <input type="button" value="6"/> | 6 | 14 | <input type="button" value="*"/> <input type="button" value="4"/> | E |
| 7 | <input type="button" value="7"/> <input type="button" value="F"/> | 7 | 15 | <input type="button" value="*"/> <input type="button" value="5"/> | F |

EXAMPLE: HEXADECIMAL Format with the GEM-RP1CAe2: Program *Chime Timeout* to be 2 seconds.

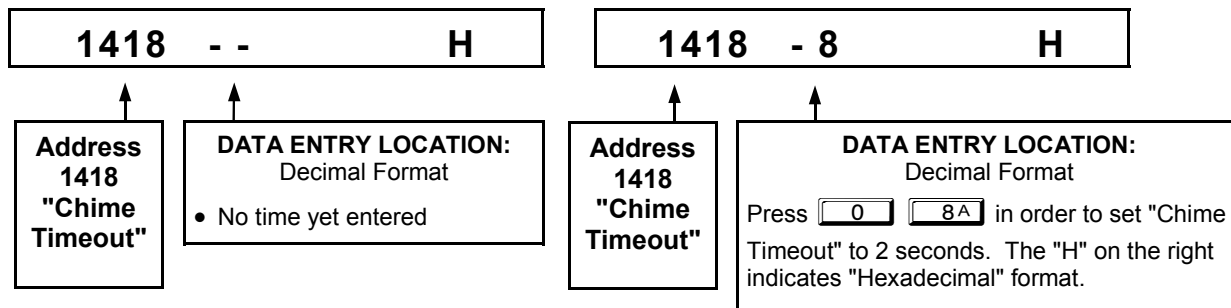

DETERMINE THE DATA ENTRIES

1. Referring to SYSTEM DELAYS & TIMEOUTS in the Programming Worksheets that follow, the Chime Timeout is located at address 1418. In the "Chime Timeout Options" table, the data entries needed to assign a timeout of 2 seconds are "blank" and "8".

| | | |
|---------------|--------------|--|
| CHIME TIMEOUT | ADDRESS 1418 | |
| (1/4sec.) | | |

[Default = 2 1/4sec. = 1/2 sec.]

| CHIME TIMEOUT OPTIONS | | |
|-----------------------|-----------|-------------------------|
| DATA ENTRIES | | TIMEOUT |
| LEFT | RIGHT | |
| blank (*) | blank (*) | 0 x 1/4sec. = 0 sec. |
| blank (*) | 2 | 2 x 1/4sec. = 1/2 sec. |
| blank (*) | 3 | 3 x 1/4sec. = 3/4 sec. |
| blank (*) | 4 | 4 x 1/4sec. = 1 sec. |
| blank (*) | 5 | 5 x 1/4sec. = 1.25 sec. |
| blank (*) | 6 | 6 x 1/4sec. = 1.5 sec. |
| blank (*) | 7 | 7 x 1/4sec. = 1.75 sec. |
| blank (*) | 8 | 8 x 1/4sec. = 2 sec. |
| | | |
| F | F | 255 x 1/4sec. = 63.25 |

← 2 seconds

PROGRAM THE DATA ENTRIES

1. Enter the panel's Dealer Security Code, then press **MENU**.
2. Answer NO to all questions until "ACTIVATE PROGRAM Y/N" is displayed; then press YES. **NOTE:** If you pass "ACTIVATE PROGRAM", scroll backward using **BYPASS**.
3. Press **RESET** to enter the Address Program Mode. Address "0000" will display.
4. Press **1** **4** **1** **8A** to access Address 1418. *The existing data will display and the cursor will advance to the data field.*
5. Since you wish the timeout to be for 2 seconds (and 8 multiplied by ¼ second equals 2 seconds), press **0** **8A**. The numbers 08 will appear on the keypad display indicating the number of seconds entered.
6. Press **SAVE** to save. Address 1418 is now programmed with a 2-second chime.
7. Press **MENU** and enter another 4-digit address to continue programming --or-- press **RESET** to exit and resume normal keypad operation.

PROGRAMMING CONVENTIONS USED IN THIS MANUAL

The Keypad Programming Worksheets in the back are provided as an address-programming reference to help the installer modify his custom default program or to make minor field alterations to an existing panel program. It is recommended that the panel be uploaded to NAPCO's PCD-Windows software following any keypad programming and that the PCD-Windows's error-check feature be utilized to reduce the possibility of programming omissions or conflicts.

Keep the Keypad Programming Worksheets on file for future reference.

General Programming Steps

1. Contact the central station to ascertain receiver format, data format, event codes, subscriber numbers and telephone number(s).
2. Select the desired features by circling the respective "address" boxes. Refer to the Programming Options and Worksheets for guidance in selecting the "data" to be entered into those boxes.
3. Program the data entered in the boxes on the worksheets into the respective addresses. The display will show the entry numerically, but if hexadecimal format will display "0" for the number 10, and letters "B", "C", "D", "E", and "F" for the numbers 11 through 15, respectively. To program a 10, press ***** **0**. To program 11 through 15, press ***** **1** through ***** **5**, respectively.

The displays will appear after a brief delay.

- Use **MENU** to toggle the cursor between the 4-digit address field and the data entry locations.
- Enter the address directly using the number buttons.
- The contents of the address will be read automatically. The cursor will advance to the data field. Enter the required data directly using the number buttons.
- IMPORTANT:** Press **SAVE** to save the contents of each address.

EXIT DIRECT ADDRESS PROGRAM MODE: When done, press **RESET** to exit and resume normal keypad operation.

SYSTEM DELAYS & TIMEOUTS (ADDRESS 0000-0002, 1413, 1417, 2050 & 2055)

| | | | | |
|-------------------------|---------------------|--|--|--|
| EXIT DELAY (sec.) | ADDRESS 0000 | | | |
| [Default = 060] | | | | |

| | | | | |
|----------------------------|---------------------|--|--|--|
| ENTRY DELAY 1 (sec.) | ADDRESS 0001 | | | |
| [Default = 030] | | | | |

| | | | | |
|----------------------------|---------------------|--|--|--|
| ENTRY DELAY 2 (sec.) | ADDRESS 0002 | | | |
| [Default = 030] | | | | |

| | | | | |
|---|---------------------|--|--|--|
| PGM2 Output Access Cntrl Timeout (sec.) | ADDRESS 1413 | | | |
| [Default = 0 sec. = blank (*)] | | | | |

| | | | | |
|--------------------------|---------------------|--|--|--|
| ABORT DELAY (sec.) | ADDRESS 1417 | | | |
| [Default = 030] | | | | |

 Select delay/timeout (0-255 sec.).

EXIT/ENTRY DELAYS: Apply only to zones programmed with the following options "Exit/Entry 1, Exit/Entry 2, Exit/Entry Follower". For UL Installations, the maximum exit delay is 60 seconds and the maximum entry delay is 45 seconds. **NOTE:** Sensor Watch Time Options are similar to above, except in hours.

 Press  to save.

| | | | | |
|--------------------------------|---------------------|--|--|--|
| Sensor Watch Time (Hrs.) | ADDRESS 2050 | | | |
| [Default = 024] | | | | |

| | | | | |
|-----------------------------------|---------------------|--|--|--|
| Report Cancel Window (min.) | ADDRESS 2055 | | | |
| [Default = 0 min. = blank (*)] | | | | |


WARNING: Timers have uncertainty of +/-1 sec, so a "time" of 1 second may actually timeout IMMEDIATELY.

SYSTEM DELAYS & TIMEOUTS (ADDRESS 1418-1419)

| | | | | |
|-----------------------------------|---------------------|--|--|--|
| CHIME TIME (¼sec.) | ADDRESS 1418 | | | |
| [Default = 008 x ¼ sec. = 2 sec.] | | | | |

| | | | | |
|-----------------------------------|---------------------|--|--|--|
| AC Fail Report Delay (min.) | ADDRESS 1419 | | | |
| [Default = 060] | | | | |

DEFAULTS: The defaults shown on this page and on the following pages are automatically set after exiting the Easy Menu Driven Mode.

-  1. Enter delay/timeout in corresponding address locations above.
Note: All entries for address 1418 are in quarter seconds (.25 seconds). Therefore, the default of 008 results in a 2 second timeout.

 2. Press  to save.

DIRECT ADDRESS PROGRAM MODE



SYSTEM OUTPUT TIMEOUTS (ADDRESS 1412 & 1414-1416)

| | | | |
|------------------------|---------------------|--|--|
| PGM2 Output | ADDRESS 1412 | | |
| Timeout (min.) | | | |

[Default = 0 min. = blank (*)]

| | | | |
|-------------------------|---------------------|--|--|
| Alarm Output | ADDRESS 1414 | | |
| Timeout (min.) | | | |

[Default = 015]

| | | | |
|-------------------------------|---------------------|--|--|
| Pulse Alarm Output | ADDRESS 1415 | | |
| Timeout (min.) | | | |

[Default = 015]

| | | | |
|------------------------|---------------------|--|--|
| PGM1 Output | ADDRESS 1416 | | |
| Timeout (min.) | | | |

[Default = 0 min. = blank (*)]

| DATA ENTRIES | DELAY/ TIMEOUT |
|--------------|----------------|
| blank (*) | 0 min. |
| 001 | 1 min. |
| 002 | 2 min. |
| 003 | 3 min. |
| 004 | 4 min. |
| 005 | 5 min. |
| 006 | 6 min. |
| 016 | 16 min. |
| ↓ | ↓ |
| 255 | 255 min. |

1. Select delay/timeout (0-255 min.) from the table shown.
2. Enter in corresponding address locations above.
3. Press to save.

OUTPUT TIMEOUTS: If a timeout of "0 min." is selected, then the output will remain active (ON) until the system is reset or disarmed. For UL Residential Installations, the minimum timeout is 4 minutes. Not UL listed for Commercial Installations.

DOWNLOAD/CALLBACK OPTIONS (ADDRESS 2059 & 0526-0545)

| | | | |
|--|---------------------|--|--|
| No. Rings Before Pickup | ADDRESS 2059 | | |
| Timeout (min.) | | | |

[Default = 015]

NUMBER OF RINGS BEFORE PICKUP: Enter the number of rings before automatic pickup by the control panel when downloading from a computer (see Glossary at the back for more information).

1. Enter digit only.
2. Valid entries are: 003-015. **NOTE:** Default is 15 Rings.
3. Press to save.

| Callback Telephone Number (Digits 1-20) | ADDRESS 0526-0545 (RIGHT DIGITS 1-20) | | | | | | | | | | | | | | | | | | | | |
|---|---------------------------------------|------|------|------|------|------|------|------|------|------|------|------|------|------|------|------|------|------|------|------|--|
| (Digits 1-20) | 0526 | 0527 | 0528 | 0529 | 0530 | 0531 | 0532 | 0533 | 0534 | 0535 | 0536 | 0537 | 0538 | 0539 | 0540 | 0541 | 0542 | 0543 | 0544 | 0545 | |
| | | | | | | | | | | | | | | | | | | | | | |

[Default = blank (*) for all digits 1-20]

CALLBACK TELEPHONE NUMBER: Enter telephone number to be used when downloading from a computer (see Glossary at the back for more information).

1. Enter digit only (right nibble).
2. Enter up to 20 digits from left to right. **NOTE:** Leave trailing boxes blank (*).
3. Valid entries are: 1-9, B = , C = , D = 3 sec. pause, E = Wait for dial tone, F = ignore location.
4. Press to save.

PAGER FORMAT OPTIONS (ADDRESS 0546 & 0547)

| | |
|--|---------------------|
| Leading Digits for Pager Format (1st Digit) | ADDRESS 0546 |
| (1st Digit) | |
| Leading Digits for Pager Format (2nd Digit) | ADDRESS 0547 |
| (2nd Digit) | |

[Default = blank (*) blank (*)]

LEADING DIGITS FOR PAGER FORMAT: In Pager Format reporting, the message typically begins with "00". However, for some pager services, this will cause the Pager's Voice Mail feature to activate. This option allows you to program these digits to any number desired. A typical Pager report is "003 22 1234", where 3 is the Event, 22 is the zone, and 1234 is the Subscriber ID number. For example, if the Leading Digits are programmed as "98", the Pager report will now appear as "983 22 1234". **NOTE:** See CS Receiver Options to select Pager Format.

1. Enter in 1st and 2nd Leading Digits as shown (right nibble).
2. Valid entries are: 0-9. Press to save.

SYSTEM OPTIONS (ADDRESS 0836-0871 & 2045)

| SYSTEM RESPONSE ACTIVATED BY GLOBAL EVENT/TROUBLE | ADDR | GLOBAL SYSTEM EVENT/TROUBLE | | | | | | | |
|---|------|-----------------------------|---------------|------------------|----------------|-------------|---------|------------|-------------|
| | | TEST TIMER | TELCO FAILURE | RF RCVR. TROUBLE | MEMORY FAILURE | LOW BATTERY | AC FAIL | EZM TAMPER | Bell Superv |
| | | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 |
| Alarm Output | 0836 | | | | | | | | |
| Pulsed Alarm Output | 0837 | | | | | | | | |
| PGM1 Output | 0838 | | | | | | | | |
| PGM2 Output | 0839 | | | | | | | | |
| Report Event Telco 1 | 0840 | | | | | | | | |
| Report Restore Telco 1 | 0841 | | | | | | | | |
| Report Event Telco 3 | 0842 | | | | | | | | |
| Report Restore Telco 3 | 0843 | | | | | | | | |



[Default = blank (*) from address 0836-0843]. **Note:** If Test Timer is enabled (above), Digital Dialer Test is also enabled.



| SYSTEM RESPONSE ACTIVATED BY AREA 1 EVENT/TROUBLE | ADDR | AREA 1 SYSTEM EVENT/TROUBLE | | | | | | | |
|---|------|-----------------------------|--------------|-------------|--------------|---------------|--------------|---------------|-----------------|
| | | AMBUSH | KEYPAD PANIC | KEYPAD FIRE | KEYPAD AUX.* | KEYPAD TAMPER | FAIL TO OPEN | FAIL TO CLOSE | Keyfob Low Batt |
| | | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 |
| Pulsed Alarm Output | 0856 | | | | | | | | |
| Alarm Output | 0857 | | | | | | | | |
| PGM1 Output | 0858 | | | | | | | | |
| PGM2 Output | 0860 | | | | | | | | |
| Report Event Telco 1 | 0861 | | | | | | | | |
| Report Event Telco 3 | 0863 | | | | | | | | |

[Default = blank (*) from address 0856-0863] * **NOTE:** Keypad Aux. is not to be selected for UL Installations.

| SYSTEM RESPONSE ACTIVATED BY AREA 2 EVENT/TROUBLE | ADDR | AREA 2 SYSTEM EVENT/TROUBLE | | | | | | | |
|---|------|-----------------------------|--------------|-------------|--------------|---------------|--------------|---------------|-----------------|
| | | AMBUSH | KEYPAD PANIC | KEYPAD FIRE | KEYPAD AUX.* | KEYPAD TAMPER | FAIL TO OPEN | FAIL TO CLOSE | Keyfob Low Batt |
| | | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 |
| Pulsed Alarm Output | 0864 | | | | | | | | |
| Alarm Output | 0865 | | | | | | | | |
| PGM1 Output | 0866 | | | | | | | | |
| PGM2 Output | 0868 | | | | | | | | |
| Report Event Telco 1 | 0869 | | | | | | | | |
| Report Event Telco 3 | 0871 | | | | | | | | |

[Default = blank (*) blank (*) from address 0864-0871] * **NOTE:** Keypad Aux. is not to be selected for UL Installations.


-  1. Select the desired option entering the option number (1-8) for each digit.
-  2. Enter corresponding option number in address location.

 **NOTE:** Dark shaded data value box shows option not available. Press  to save.

| Global Ambush Code | ADDRESS 2045 | |
|--------------------|--------------|-----------|
| | 1st digit | 2nd digit |
| | | |

[Default = blank (*) blank (*)]

GLOBAL AMBUSH CODE: It is the 2-digits entered immediately prior to the regular disarm code. If "Enable Global Ambush Code" (Address 1422) is selected and Address 2045 is left blank (*), then the 2-digit Global Ambush Code is "99". If "Enable Global Ambush Code" is selected and Address 2045 is **not** left blank (*), then the 2-digit Global Ambush Code is the two digits entered in address 2045.

 Enter in address location (both 1st and 2nd digits); valid entries are 1-9.

 Press  to save.



SYSTEM OPTIONS (ADDRESS 0872-0887)

| SYSTEM RESPONSE ACTIVATED BY AREA 3 EVENT/TROUBLE | ADDR | AREA 3 SYSTEM EVENT/TROUBLE | | | | | | | |
|---|------|-----------------------------|-----------------|----------------|------------------|------------------|-----------------|------------------|--------------------|
| | | AMBUSH | KEYPAD PANIC | KEYPAD FIRE | KEYPAD AUX. * | KEYPAD TAMPER | FAIL TO OPEN | FAIL TO CLOSE | Keyfob Low Batt |
| | | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 |
| Pulsed Alarm Output | 0872 | | | | | | | | |
| Alarm Output | 0873 | | | | | | | | |
| PGM1 Output | 0874 | | | | | | | | |
| PGM2 Output | 0876 | | | | | | | | |
| Report Event Telco 1 | 0877 | | | | | | | | |
| Report Event Telco 3 | 0879 | | | | | | | | |

[Default = blank (*) from address 0872-0879] * **NOTE:** Keypad Aux. is not to be selected for UL Installations.

| SYSTEM RESPONSE ACTIVATED BY AREA 4 EVENT/TROUBLE | ADDR | AREA 4 SYSTEM EVENT/TROUBLE | | | | | | | |
|---|------|-----------------------------|-----------------|----------------|------------------|------------------|-----------------|------------------|--------------------|
| | | AMBUSH | KEYPAD PANIC | KEYPAD FIRE | KEYPAD AUX. * | KEYPAD TAMPER | FAIL TO OPEN | FAIL TO CLOSE | Keyfob Low Batt |
| | | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 |
| Pulsed Alarm Output | 0880 | | | | | | | | |
| Alarm Output | 0881 | | | | | | | | |
| PGM1 Output | 0882 | | | | | | | | |
| PGM2 Output | 0884 | | | | | | | | |
| Report Event Telco 1 | 0885 | | | | | | | | |
| Report Event Telco 3 | 0887 | | | | | | | | |

[Default = blank (*) blank (*) from address 0880-0887] * **NOTE:** Keypad Aux. is not to be selected for UL Installations.

☞ 1. Select the desired option entering the option number (1-8) for each digit.

☞ 2. Enter corresponding option number in address location.

☞ **NOTE:** Dark shaded data value box shows option not available. Press to save.

DIRECT ADDRESS PROGRAM MODE

SYSTEM OPTIONS (ADDRESS 1420-1424, 2051-2054)

DIRECT ADDRESS PROGRAM MODE

| 1420 System Options | | |
|---------------------|---|---|
| Default | | Option |
| OFF | 1 | Opening Report Only after Alarm Report |
| OFF | 2 | Closing Report Only on Conditional Close |
| OFF | 3 | Incl. Sel./Grp. Bypass in Cond. Close /Status |
| OFF | 4 | Status Report |
| OFF | 5 | RESERVED |
| OFF | 6 | Enable AutoArm if not closed at end of Window |
| OFF | 7 | Enable Keypad Time/Date Display |
| OFF | 8 | Disable Zone Fault Scrolling |

| 1422 System Options | | |
|---------------------|---|---|
| Default | | Option |
| OFF | 1 | Interior Normally Bypassed |
| OFF | 2 | Enable Global Ambush Code *** |
| OFF | 3 | Reset Day Zone with Arm/Disarm Only |
| OFF | 4 | Enable Residential Fire |
| OFF | 5 | Disable Keypad Function Mode Download |
| OFF | 6 | Disable Callback Download |
| OFF | 7 | Chirp Output on Keyfob Arm/Disarm |
| OFF | 8 | Change Pulse Output to Temporal Output [§] |

[§]This feature must be programmed in Fire Alarm applications.

| 1424 System Options | | |
|---------------------|---|--|
| Default | | Option |
| OFF | 1 | Automatic Interior Bypass/Easy Exit |
| OFF | 2 | Veri-phone Zones Trip PGM2 Output |
| OFF | 3 | Veri-phone Audio Priority Over Alarms |
| OFF | 4 | Resound on Wireless Smoke Low Battery |
| OFF | 5 | Don't Clear PGM2 Output with Disarm |
| OFF | 6 | Disable 2nd Call Ans. Machine Override |
| OFF | 7 | RESERVED |
| ON | 8 | Disable Code Required for EZ Bypass |

| 2052 E15 Lug / System Options | | |
|-------------------------------|---|--|
| Default | | Option |
| OFF | 1 | RESERVED |
| OFF | 2 | RESERVED |
| OFF | 3 | <input checked="" type="checkbox"/> Lug E15 Area 1 Armed Away Only**** |
| OFF | 4 | <input checked="" type="checkbox"/> PGM on RF Transmitter Tamper |
| OFF | 5 | RESERVED |
| OFF | 6 | RESERVED |
| OFF | 7 | RESERVED |
| OFF | 8 | RESERVED |

***NOTE:** Address 1423: Default depends on Easy Menu Question :“EZ ZONE DOUBLING? Y/N”. If yes, then [Default = 1]. If no, then [Default = blank (*)].

****NOTE:** To select “Line-Fault Test only when Armed”, you must also select “Enable Line-Fault Test” at address 1423.

*****NOTE:** If “Enable Global Ambush Code” in Address 1422 is selected, then program the 2-digit “Global Ambush Code” in Address 2045. If Address 2045 is left blank (*), then, the 2-digit “Global Ambush Code” will be “99”.

******Note:** If this feature is not selected, the E15 Lug will, by default, activate when the system is armed (all areas).

| 1421 System Options | | |
|---------------------|---|---|
| Default | | Option |
| OFF | 1 | Auto Bell Test on Arming |
| OFF | 2 | Auto Reset after Burglary Output Timeout |
| OFF | 3 | Suppress Bypass Reminder when Armed |
| OFF | 4 | Enable Local Alarm on First Zone AND Trip |
| OFF | 5 | Access Control on PGM2 Output |
| OFF | 6 | Maintained Keyswitch Arming |
| OFF | 7 | Enable Manager's Mode |
| OFF | 8 | Disable Keypad Instant Mode |

| 1423 System Options | | |
|---------------------|---|---|
| Default* | | Option |
| OFF* | 1 | Enable Zone Doubling (Zones 9-16) |
| OFF* | 2 | Wireless Trouble Activates Telco 1 |
| OFF* | 3 | Wireless Trouble Activates Telco 3 |
| OFF* | 4 | Enable Alarm Output on Telco Fail only when Armed |
| OFF* | 5 | Line-Fault Test only when Armed** |
| OFF* | 6 | Enable Line-Fault Test** |
| OFF* | 7 | <input checked="" type="checkbox"/> Inhibit System Trouble Audible at Keypad† |
| OFF* | 8 | Select Alarm Output for Keyfob Chirp |

† **NOTE:** Not for UL Installations.

| 2051 System Options | | |
|---------------------|---|--|
| Default | | Option |
| OFF | 1 | Enable Keypad Set Time/Date Message |
| OFF | 2 | Enable Cancel Report to Telco 3 |
| OFF | 3 | Disable [ON/OFF] as Easy Exit |
| OFF | 4 | Enable GEM-PRINT Module |
| OFF | 5 | RESERVED |
| OFF | 6 | RESERVED |
| OFF | 7 | Disable System Trouble Audible Timeout |
| OFF | 8 | Enable "K Series" Style Keypads †† |

†† **NOTE:** For reference only and cannot be changed.

| 2053 System Options | | |
|---------------------|---|--|
| Default | | Option |
| OFF | 1 | Exit Time Restart |
| OFF | 2 | Sound Alarm On Exit Error |
| OFF | 3 | Rpt Exit Err/Recent Close |
| OFF | 4 | Enable CP-01 Limits |
| OFF | 5 | Digital Dialer Rpt Enter /Exit Test Mode |
| OFF | 6 | Disable Call Waiting on 1st Attempt |
| OFF | 7 | Enable Keypad 1 Only Programming |
| OFF | 8 | Enable CP-01 Egress Tones Only |

| 2054 System Options | | |
|---------------------|---|--|
| Default | | Option |
| OFF | 1 | <input checked="" type="checkbox"/> Enable TCP/IP Communications |
| OFF | 2 | RESERVED |
| OFF | 3 | TCP/IP Panel/Site Initiated Functions |
| OFF | 4 | RESERVED |
| OFF | 5 | RESERVED |
| OFF | 6 | RESERVED |
| OFF | 7 | RESERVED |
| OFF | 8 | RESERVED |



CS RECEIVER OPTIONS (ADDRESS 0460-0525)

| | | |
|----------------------|---------------------|--|
| CS Receiver 1 | ADDRESS 0460 | |
| Format | | |

| | | |
|----------------------|---------------------|--|
| CS Receiver 2 | ADDRESS 0482 | |
| Format | | |

| | | |
|----------------------|---------------------|--|
| CS Receiver 3 | ADDRESS 0504 | |
| Format | | |

| DATA ENTRY | CS RECEIVER 1 FORMAT |
|------------|---------------------------------|
| blank (*) | Ademco Slow, Silent Knight Slow |
| 2 | Radionics Fast |
| 3 | Silent Knight Fast |
| 4 | Radionics, DCI, Franklin Slow |
| 5 | Universal High Speed |
| B | SIA |
| C | Ademco Point ID |
| E | Pager * |

Default for CS Receiver 1 Format depends on Easy Menu Question "RCVR FORMAT". [Default = *(blank) * (blank)] for CS Receivers 2 and 3 Formats.

CS RECEIVER FORMATS: Up to 3 CS Formats may be programmed.

1. Select the desired CS Receiver Format from the table shown.
2. Enter the corresponding digit in the address location for each CS Receiver. **NOTE:** Dark shaded data value box shows option not available. Press [Enter] to save.

NOTE: * See Pager Format Options to program Leading Digits for Pager Format.

| 0461 | CS Receiver Options - Telco 1 | |
|---------|-------------------------------|-----------------------------------|
| Default | | Option |
| OFF | 1 | 1400Hz Handshake/Kissoff * |
| OFF | 2 | 2300Hz Handshake/Kissoff * |
| OFF | 3 | Enable Zone Number on Pulse Alarm |
| OFF | 4 | Single Digit Only |
| OFF | 5 | Sum Check |
| OFF | 6 | 3/1 with Extended Restores |
| OFF | 7 | Enable TCP/IP AES RPT |
| OFF | 8 | RESERVED |

| 0483 | CS Receiver Options - Telco 2 | |
|---------|-------------------------------|-----------------------------------|
| Default | | Option |
| OFF | 1 | 1400Hz Handshake/Kissoff * |
| OFF | 2 | 2300Hz Handshake/Kissoff * |
| OFF | 3 | Enable Zone Number on Pulse Alarm |
| OFF | 4 | Single Digit Only |
| OFF | 5 | Sum Check |
| OFF | 6 | 3/1 with Extended Restores |
| OFF | 7 | Enable TCP/IP AES RPT |
| OFF | 8 | RESERVED |

| 0505 | CS Receiver Options - Telco 3 | |
|---------|-------------------------------|-----------------------------------|
| Default | | Option |
| OFF | 1 | 1400Hz Handshake/Kissoff * |
| OFF | 2 | 2300Hz Handshake/Kissoff * |
| OFF | 3 | Enable Zone Number on Pulse Alarm |
| OFF | 4 | Single Digit Only |
| OFF | 5 | Sum Check |
| OFF | 6 | 3/1 with Extended Restores |
| OFF | 7 | Enable TCP/IP AES RPT |
| OFF | 8 | RESERVED |

CS RECEIVER OPTIONS:

Select options for any of the three CS Receivers.

1. Select the desired option entering the option number (1-8) for each digit.
2. Enter corresponding option number in address location (right nibble).

NOTE: Dark shaded data value box shows option not available. Press [Enter] to save.

***NOTE:** If both are selected, 1400Hz has priority over 2300Hz.

| CS Receiver 1 | ADDRESS 0462-0481 (RIGHT DIGITS 1-20) | | | | | | | | | | | | | | | | | | | | |
|------------------|---------------------------------------|------|------|------|------|------|------|------|------|------|------|------|------|------|------|------|------|------|------|------|--|
| Telephone Number | 0462 | 0463 | 0464 | 0465 | 0466 | 0467 | 0468 | 0469 | 0470 | 0471 | 0472 | 0473 | 0474 | 0475 | 0476 | 0477 | 0478 | 0479 | 0480 | 0481 | |
| (Digits 1-20) | | | | | | | | | | | | | | | | | | | | | |

| CS Receiver 2 | ADDRESS 0484-0503 (RIGHT DIGITS 1-20) | | | | | | | | | | | | | | | | | | | | |
|------------------|---------------------------------------|------|------|------|------|------|------|------|------|------|------|------|------|------|------|------|------|------|------|------|--|
| Telephone Number | 0484 | 0485 | 0486 | 0487 | 0488 | 0489 | 0490 | 0491 | 0492 | 0493 | 0494 | 0495 | 0496 | 0497 | 0498 | 0499 | 0500 | 0501 | 0502 | 0503 | |
| (Digits 1-20) | | | | | | | | | | | | | | | | | | | | | |

| CS Receiver 3 | ADDRESS 0506-0525 (RIGHT DIGITS 1-20) | | | | | | | | | | | | | | | | | | | | |
|------------------|---------------------------------------|------|------|------|------|------|------|------|------|------|------|------|------|------|------|------|------|------|------|------|--|
| Telephone Number | 0506 | 0507 | 0508 | 0509 | 0510 | 0511 | 0512 | 0513 | 0514 | 0515 | 0516 | 0517 | 0518 | 0519 | 0520 | 0521 | 0522 | 0523 | 0524 | 0525 | |
| (Digits 1-20) | | | | | | | | | | | | | | | | | | | | | |

Default for CS Receiver 1 Telephone Number depends on Easy Menu Question "CENTRAL PHONE #".

[Default = blank (*)] across digits 1-20 for CS Receiver Telephone Numbers 2 and 3.

CS RECEIVER TELEPHONE NUMBERS: Enter telephone numbers for any of the three CS Receivers (Telco 1, 2 & 3).

1. Enter digit only.
2. Enter up to 20 digits from left to right. **NOTE:** Leave trailing boxes blank (*). Press [Enter] to save.
3. Valid entries are: 1-9, B = [*] button, C = [#] button, D = 3 sec. pause, E = Wait for dial tone, F = Ignore location

DIRECT ADDRESS PROGRAM MODE

CS SUBSCRIBER ID OPTIONS (ADDRESS 0560-0667)

| | | | | |
|--|---|------|------|------|
| CS Telco 1 Sub- scriber Opening/ Closing ID Number (Area 1) | ADDRESS 0560-0563 (RIGHT DIGITS 1-4) | | | |
| | 0560 | 0561 | 0562 | 0563 |
| | | | | |

| | | | | |
|--|---|------|------|------|
| CS Telco 1 Sub- scriber Opening/ Closing ID Number (Area 2) | ADDRESS 0564-0567 (RIGHT DIGITS 1-4) | | | |
| | 0564 | 0565 | 0566 | 0567 |
| | | | | |

| | | | | |
|--|---|------|------|------|
| CS Telco 1 Sub- scriber Opening/ Closing ID Number (Area 3) | ADDRESS 0568-0571 (RIGHT DIGITS 1-4) | | | |
| | 0568 | 0569 | 0570 | 0571 |
| | | | | |

| | | | | |
|--|---|------|------|------|
| CS Telco 1 Sub- scriber Opening/ Closing ID Number (Area 4) | ADDRESS 0572-0575 (RIGHT DIGITS 1-4) | | | |
| | 0572 | 0573 | 0574 | 0575 |
| | | | | |

| | | | | |
|--|---|------|------|------|
| CS Telco 1 Sub- scriber Event ID Number (Area 1) | ADDRESS 0576-0579 (RIGHT DIGITS 1-4) | | | |
| | 0576 | 0577 | 0578 | 0579 |
| | | | | |

| | | | | |
|--|---|------|------|------|
| CS Telco 1 Sub- scriber Event ID Number (Area 2) | ADDRESS 0580-0583 (RIGHT DIGITS 1-4) | | | |
| | 0580 | 0581 | 0582 | 0583 |
| | | | | |

| | | | | |
|--|---|------|------|------|
| CS Telco 1 Sub- scriber Event ID Number (Area 3) | ADDRESS 0584-0587 (RIGHT DIGITS 1-4) | | | |
| | 0584 | 0585 | 0586 | 0587 |
| | | | | |

| | | | | |
|--|---|------|------|------|
| CS Telco 1 Sub- scriber Event ID Number (Area 4) | ADDRESS 0588-0591 (RIGHT DIGITS 1-4) | | | |
| | 0588 | 0589 | 0590 | 0591 |
| | | | | |

| | | | | |
|--|---|------|------|------|
| CS Telco 1 Sub- scriber Event ID Number (System) | ADDRESS 0592-0595 (RIGHT DIGITS 1-4) | | | |
| | 0592 | 0593 | 0594 | 0595 |
| | | | | |

| | | | | |
|--|---|------|------|------|
| CS Telco 2 Sub- scriber Opening/ Closing ID Number (Area 1) | ADDRESS 0596-0599 (RIGHT DIGITS 1-4) | | | |
| | 0596 | 0597 | 0598 | 0599 |
| | | | | |

| | | | | |
|--|---|------|------|------|
| CS Telco 2 Sub- scriber Opening/ Closing ID Number (Area 2) | ADDRESS 0600-0603 (RIGHT DIGITS 1-4) | | | |
| | 0600 | 0601 | 0602 | 0603 |
| | | | | |

| | | | | |
|--|---|------|------|------|
| CS Telco 2 Sub- scriber Opening/ Closing ID Number (Area 3) | ADDRESS 0604-0607 (RIGHT DIGITS 1-4) | | | |
| | 0604 | 0605 | 0606 | 0607 |
| | | | | |

| | | | | |
|--|---|------|------|------|
| CS Telco 2 Sub- scriber Opening/ Closing ID Number (Area 4) | ADDRESS 0608-0611 (RIGHT DIGITS 1-4) | | | |
| | 0608 | 0609 | 0610 | 0611 |
| | | | | |

| | | | | |
|--|---|------|------|------|
| CS Telco 2 Sub- scriber Event ID Number (Area 1) | ADDRESS 0612-0615 (RIGHT DIGITS 1-4) | | | |
| | 0612 | 0613 | 0614 | 0615 |
| | | | | |

| | | | | |
|--|---|------|------|------|
| CS Telco 2 Sub- scriber Event ID Number (Area 2) | ADDRESS 0616-0619 (RIGHT DIGITS 1-4) | | | |
| | 0616 | 0617 | 0618 | 0619 |
| | | | | |

| | | | | |
|--|---|------|------|------|
| CS Telco 2 Sub- scriber Event ID Number (Area 3) | ADDRESS 0620-0623 (RIGHT DIGITS 1-4) | | | |
| | 0620 | 0621 | 0622 | 0623 |
| | | | | |

| | | | | |
|--|---|------|------|------|
| CS Telco 2 Sub- scriber Event ID Number (Area 4) | ADDRESS 0624-0627 (RIGHT DIGITS 1-4) | | | |
| | 0624 | 0625 | 0626 | 0627 |
| | | | | |

| | | | | |
|--|---|------|------|------|
| CS Telco 2 Sub- scriber Event ID Number (System) | ADDRESS 0628-0631 (RIGHT DIGITS 1-4) | | | |
| | 0628 | 0629 | 0630 | 0631 |
| | | | | |

| | | | | |
|--|---|------|------|------|
| CS Telco 3 Sub- scriber Opening/ Closing ID Number (Area 1) | ADDRESS 0632-0635 (RIGHT DIGITS 1-4) | | | |
| | 0632 | 0633 | 0634 | 0635 |
| | | | | |

| | | | | |
|--|---|------|------|------|
| CS Telco 3 Sub- scriber Opening/ Closing ID Number (Area 2) | ADDRESS 0636-0639 (RIGHT DIGITS 1-4) | | | |
| | 0636 | 0637 | 0638 | 0639 |
| | | | | |

| | | | | |
|--|---|------|------|------|
| CS Telco 3 Sub- scriber Opening/ Closing ID Number (Area 3) | ADDRESS 0640-0643 (RIGHT DIGITS 1-4) | | | |
| | 0640 | 0641 | 0642 | 0643 |
| | | | | |

| | | | | |
|--|---|------|------|------|
| CS Telco 3 Sub- scriber Opening/ Closing ID Number (Area 4) | ADDRESS 0644-0647 (RIGHT DIGITS 1-4) | | | |
| | 0644 | 0645 | 0646 | 0647 |
| | | | | |

| | | | | |
|--|---|------|------|------|
| CS Telco 3 Sub- scriber Event ID Number (Area 1) | ADDRESS 0648-0651 (RIGHT DIGITS 1-4) | | | |
| | 0648 | 0649 | 0650 | 0651 |
| | | | | |

| | | | | |
|--|---|------|------|------|
| CS Telco 3 Sub- scriber Event ID Number (Area 2) | ADDRESS 0652-0655 (RIGHT DIGITS 1-4) | | | |
| | 0652 | 0653 | 0654 | 0655 |
| | | | | |

| | | | | |
|--|---|------|------|------|
| CS Telco 3 Sub- scriber Event ID Number (Area 3) | ADDRESS 0656-0659 (RIGHT DIGITS 1-4) | | | |
| | 0656 | 0657 | 0658 | 0659 |
| | | | | |

| | | | | |
|--|---|------|------|------|
| CS Telco 3 Sub- scriber Event ID Number (Area 4) | ADDRESS 0660-0663 (RIGHT DIGITS 1-4) | | | |
| | 0660 | 0661 | 0662 | 0663 |
| | | | | |

| | | | | |
|---|---|------|------|------|
| CS Telco 3 Sub- subscriber Event ID Number (System) | ADDRESS 0664-0667 (RIGHT DIGITS 1-4) | | | |
| | 0664 | 0665 | 0666 | 0667 |
| | | | | |

Default for CS Telco 1 Subscriber Event ID Number (Area 1) depends on Easy Menu Question "ACCOUNT #". [Default = blank (•) blank (•) blank (•) blank (•)] for all other ID Numbers.

CS TELCO SUBSCRIBER ID NUMBERS: Enter the Subscriber Opening/Closing and Event ID Numbers for any of the 3 CS Receivers.

 1. Enter 3 or 4 digits (depending on the CS receiver format) for each subscriber number from left to right.

NOTE: Leave trailing boxes blank (•).

 2. Valid entries are: 1-9, 0 and B-F. **NOTE:** A is not permitted. Press [Enter] to save.



CS SYSTEM REPORTING OPTIONS (ADDRESS 0670-0705)

| CS SYSTEM REPORTING CODES | ADDRESS 0670-0682 | |
|---------------------------|-------------------|-----------|
| | ADDR | |
| Alarm Restore | blank (*) | 0670 |
| Trouble | blank (*) | 0671 |
| Trouble Restore | blank (*) | 0672 |
| Xmitter Low Battery | blank (*) | 0673 |
| Xmitter Supervision | blank (*) | 0674 |
| Xmitter Tamper | blank (*) | 0675 |
| RESERVED | blank (*) | blank (*) |
| Opening | blank (*) | 0677 |
| Closing | blank (*) | 0678 |
| Opening after Alarm | blank (*) | 0679 |
| Conditional Close | blank (*) | 0680 |
| Cancel | blank (*) | 0681 |
| Test Timer | | 0682 |

| CS SYSTEM REPORTING CODES | ADDRESS 0683-0708 | |
|---------------------------|-------------------|--|
| | ADDR | |
| Telco Fail | 0683 | |
| RF Rec. Trouble | 0684 | |
| Memory Fail | 0685 | |
| Low Battery | 0686 | |
| Panel AC Fail | 0687 | |
| EZM Tamper | 0688 | |
| Alarm Output Superv. | 0689 | |
| Ambush | 0698 | |
| Panic | 0699 | |
| Fire | 0700 | |
| Auxiliary * | 0701 | |
| Tamper | 0702 | |
| Fail to Open | 0703 | |
| Fail to Close | 0704 | |
| Keyfob Low Battery | 0705 | |

CS SYSTEM REPORTING CODES:

1. Enter in corresponding address location (left and right digits).
NOTE: Left digit is the first digit and right digit is the second digit in a two digit CS receiver format.
2. Valid entries are: 1-9, 0 and B-F.
NOTE: A is not permitted.
3. To disable a code leave boxes blank (*).
NOTE: Dark shaded data value box shows option not available.
4. Press to save.

* **NOTE:** Keypad Aux. is not to be selected for UL Installations.

[Default = blank (*) blank (*) from address 0670-0682]
[Default = blank (*) blank (*) from address 0683-0705]

DIRECT ADDRESS PROGRAM MODE

CS AREA & SYSTEM REPORTING OPTIONS (ADDRESS 0785, 0786 & 0788)

| DISABLE OPENING REPORTS | |
|-------------------------|----------------------------------|
| ADDRESS 0785 | |
| LEFT DIGIT | RIGHT DIGIT (SUM OF DATA VALUES) |
| blank (*) | |

| RIGHT DATA VALUES (CIRCLE) | AREA |
|-----------------------------|--------|
| 1 | AREA 1 |
| 2 | AREA 2 |
| 4 | AREA 3 |
| 8 | AREA 4 |

| DISABLE CLOSING REPORTS | |
|-------------------------|----------------------------------|
| ADDRESS 0786 | |
| LEFT DIGIT | RIGHT DIGIT (SUM OF DATA VALUES) |
| blank (*) | |

| RIGHT DATA VALUES (CIRCLE) | AREA |
|-----------------------------|--------|
| 1 | AREA 1 |
| 2 | AREA 2 |
| 4 | AREA 3 |
| 8 | AREA 4 |

[Default = blank (*) blank (*)]

[Default = blank (*) blank (*)]

OPENING REPORT OPTIONS:

1. Select the desired option by circling the data values for each digit (left and right).
2. Add the data values (ex: F=15=(1+2+4+8) from the selected options. See page 13).
3. Enter in address location (left and right digits).

NOTE: Dark shaded data value box shows option not available. Press to save.

| 0788 | CS System Report Options | |
|---------|--------------------------|---|
| Default | Option | |
| OFF | 1 | Backup Report on Telco 1 & 2 |
| OFF | 2 | Touch-tone Dialing Only * |
| OFF | 3 | Touch-tone Dialing w/Rotary Backup * |
| OFF | 4 | RESERVED |
| OFF | 5 | Cancel Next Test Timer on any Report |
| OFF | 6 | Disable Wait for Silence (Pager Format) |
| OFF | 7 | Disable Wait for Handshake on Transmit |
| OFF | 8 | Disable Auto Dial Tone Detect |

CS SYSTEM REPORTING OPTIONS:

1. Select the desired option entering the option number (1-8) for each digit.
2. Enter corresponding option number in address location.
NOTE: Dark shaded data value box shows option not available.
3. Press to save.

* **NOTE:** If neither Touch-tone Dialing nor Touch-tone w/Rotary Backup is selected, then system defaults automatically to Rotary Dialing. Leave blank (*) to select Rotary Dialing.

CS ZONE REPORTING OPTIONS (ADDRESS 0720-0783)

| ADDRESS 0720-0727 | | | | | | | |
|---------------------------------|--------|--------|--------|--------|--------|--------|--------|
| CONTROL PANEL ZONES REPORT CODE | | | | | | | |
| ZONE 1 | ZONE 2 | ZONE 3 | ZONE 4 | ZONE 5 | ZONE 6 | ZONE 7 | ZONE 8 |
| 0720 | 0721 | 0722 | 0723 | 0724 | 0725 | 0726 | 0727 |
| | | | | | | | |

| ADDRESS 0728-0731 | | | |
|-------------------|---------|---------|---------|
| ZONES REPORT CODE | | | |
| ZONE 9 | ZONE 10 | ZONE 11 | ZONE 12 |
| 0728 | 0729 | 0730 | 0731 |
| | | | |

| ADDRESS 0732-0735 | | | |
|-------------------|---------|---------|---------|
| ZONES REPORT CODE | | | |
| ZONE 13 | ZONE 14 | ZONE 15 | ZONE 16 |
| 0732 | 0733 | 0734 | 0735 |
| | | | |

| ADDRESS 0736-0739 | | | |
|-------------------|---------|---------|---------|
| ZONES REPORT CODE | | | |
| ZONE 17 | ZONE 18 | ZONE 19 | ZONE 20 |
| 0736 | 0737 | 0738 | 0739 |
| | | | |

| ADDRESS 0740-0743 | | | |
|-------------------|---------|---------|---------|
| ZONES REPORT CODE | | | |
| ZONE 21 | ZONE 22 | ZONE 23 | ZONE 24 |
| 0740 | 0741 | 0742 | 0743 |
| | | | |

| ADDRESS 0744-0747 | | | |
|-------------------|---------|---------|---------|
| ZONES REPORT CODE | | | |
| ZONE 25 | ZONE 26 | ZONE 27 | ZONE 28 |
| 0744 | 0745 | 0746 | 0747 |
| | | | |

| ADDRESS 0748-0751 | | | |
|-------------------|---------|---------|---------|
| ZONES REPORT CODE | | | |
| ZONE 29 | ZONE 30 | ZONE 31 | ZONE 32 |
| 0748 | 0749 | 0750 | 0751 |
| | | | |

| ADDRESS 0752-0759 | | | | | | | |
|---------------------------------|---------|---------|---------|---------|---------|---------|---------|
| CONTROL PANEL ZONES REPORT CODE | | | | | | | |
| ZONE 33 | ZONE 34 | ZONE 35 | ZONE 36 | ZONE 37 | ZONE 38 | ZONE 39 | ZONE 40 |
| 0752 | 0753 | 0754 | 0755 | 0756 | 0757 | 0758 | 0759 |
| | | | | | | | |

| ADDRESS 0760-0763 | | | |
|-------------------|---------|---------|---------|
| ZONES REPORT CODE | | | |
| ZONE 41 | ZONE 42 | ZONE 43 | ZONE 44 |
| 0760 | 0761 | 0762 | 0763 |
| | | | |

| ADDRESS 0764-0767 | | | |
|-------------------|---------|---------|---------|
| ZONES REPORT CODE | | | |
| ZONE 45 | ZONE 46 | ZONE 47 | ZONE 48 |
| 0764 | 0765 | 0766 | 0767 |
| | | | |

| ADDRESS 0768-0771 | | | |
|-------------------|---------|---------|---------|
| ZONES REPORT CODE | | | |
| ZONE 49 | ZONE 50 | ZONE 51 | ZONE 52 |
| 0768 | 0769 | 0770 | 0771 |
| | | | |

| ADDRESS 0772-0775 | | | |
|-------------------|---------|---------|---------|
| ZONES REPORT CODE | | | |
| ZONE 53 | ZONE 54 | ZONE 55 | ZONE 56 |
| 0772 | 0773 | 0774 | 0775 |
| | | | |

| ADDRESS 0776-0779 | | | |
|-------------------|---------|---------|---------|
| ZONES REPORT CODE | | | |
| ZONE 57 | ZONE 58 | ZONE 59 | ZONE 60 |
| 0776 | 0777 | 0778 | 0779 |
| | | | |

| ADDRESS 0780-0783 | | | |
|-------------------|---------|---------|---------|
| ZONES REPORT CODE | | | |
| ZONE 61 | ZONE 62 | ZONE 63 | ZONE 64 |
| 0780 | 0781 | 0782 | 0783 |
| | | | |

Default for Group Zone Report Codes depends on Easy Menu Question "RCVR. FORMAT".


| ZONE REPORT CODE OPTIONS |
|--------------------------|
| DATA ENTRIES |
| |

NOTE: If "Zone Doubling" (Address 1423) is **not** enabled, then Zones 1-8 are included in the control panel and Zones 9-64 are EZM Zones. If "Zone Doubling" is enabled, then Zones 1-16 are included in the control panel and Zones 17-64 are EZM Zones. See Address 1455-1468 to enable "EZM Group Options".

| DATA ENTRIES LEFT | MODEM CODE |
|-------------------|-------------------|
| 1 | Fire |
| 2 | Panic |
| 3 | Burglary |
| 4 | Hold up |
| 7 | Gas Alarm |
| 8 | Heat Alarm |
| 0 | Auxiliary Alarm |
| B | 24 Hour Auxiliary |

PULSE EVENT CODE will be the first digit of the 2 digit reporting code. The second digit will be the second digit of the reporting zone. For example, for zone 9 (address 0728), if the right digit is "3", then the reporting code is "39". For example, for zone 15 (address 0734), if the right digit is "4", then the reporting code is "45".

MODEM CODES determine the zone types reported for the following formats: SIA and ADEMCO Point ID.

 1. Select the desired Modem Code for each zone from the table shown.

 2. Press  to save.

DIRECT ADDRESS PROGRAM MODE



CS USER REPORTING OPTIONS (ADDRESS 0800-0835)

| Enable Users to Report Opening and Closings | ADDR | USERS 1 → 8 | | | | | | | | ADDR | USERS 9 → 16 | | | | | | | |
|---|------|-------------|----|----|----|----|----|----|----|------|--------------|-----|-----|-----|-----|-----|-----|-----|
| | | U1 | U2 | U3 | U4 | U5 | U6 | U7 | U8 | | U9 | U10 | U11 | U12 | U13 | U14 | U15 | U16 |
| | | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 |
| Enable Opening Report, Telco 1 | 0800 | | | | | | | | | 0801 | | | | | | | | |
| Enable Closing Report, Telco 1 | 0809 | | | | | | | | | 0810 | | | | | | | | |
| Enable Opening Report, Telco 3 | 0818 | | | | | | | | | 0819 | | | | | | | | |
| Enable Closing Report, Telco 3 | 0827 | | | | | | | | | 0828 | | | | | | | | |

| Enable Users to Report Opening and Closings | ADDR | USERS 17 → 24 | | | | | | | | ADDR | USERS 25 → 32 | | | | | | | |
|---|------|---------------|-----|-----|-----|-----|-----|-----|-----|------|---------------|-----|-----|-----|-----|-----|-----|-----|
| | | U17 | U18 | U19 | U20 | U21 | U22 | U23 | U24 | | U25 | U26 | U27 | U28 | U29 | U30 | U31 | U32 |
| | | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 |
| Enable Opening Report, Telco 1 | 0802 | | | | | | | | | 0803 | | | | | | | | |
| Enable Closing Report, Telco 1 | 0811 | | | | | | | | | 0812 | | | | | | | | |
| Enable Opening Report, Telco 3 | 0820 | | | | | | | | | 0821 | | | | | | | | |
| Enable Closing Report, Telco 3 | 0829 | | | | | | | | | 0830 | | | | | | | | |

| Enable Users to Report Opening and Closings | ADDR | USERS 33 → 40 | | | | | | | | ADDR | USERS 41 → 48 | | | | | | | |
|---|------|---------------|-----|-----|-----|-----|-----|-----|-----|------|---------------|-----|-----|-----|-----|-----|-----|-----|
| | | U33 | U34 | U35 | U36 | U37 | U38 | U39 | U40 | | U41 | U42 | U43 | U44 | U45 | U46 | U47 | U48 |
| | | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 |
| Enable Opening Report, Telco 1 | 0804 | | | | | | | | | 0805 | | | | | | | | |
| Enable Closing Report, Telco 1 | 0813 | | | | | | | | | 0814 | | | | | | | | |
| Enable Opening Report, Telco 3 | 0822 | | | | | | | | | 0823 | | | | | | | | |
| Enable Closing Report, Telco 3 | 0831 | | | | | | | | | 0832 | | | | | | | | |

| Enable Users to Report Opening and Closings | ADDR | USERS 49 → 56 | | | | | | | | ADDR | USERS 57 → 64 | | | | | | | |
|---|------|---------------|-----|-----|-----|-----|-----|-----|-----|------|---------------|-----|-----|-----|-----|-----|-----|-----|
| | | U49 | U50 | U51 | U52 | U53 | U54 | U55 | U56 | | U57 | U58 | U59 | U60 | U61 | U62 | U63 | U64 |
| | | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 |
| Enable Opening Report, Telco 1 | 0806 | | | | | | | | | 0807 | | | | | | | | |
| Enable Closing Report, Telco 1 | 0815 | | | | | | | | | 0816 | | | | | | | | |
| Enable Opening Report, Telco 3 | 0824 | | | | | | | | | 0825 | | | | | | | | |
| Enable Closing Report, Telco 3 | 0833 | | | | | | | | | 0834 | | | | | | | | |

| Enable Users to Report Opening and Closings | ADDR | USERS 65 → 68 | | | | | | | | ADDR | USERS 69 → 76 | | | | | | | |
|---|------|---------------|-----|-----|-----|---|---|---|---|------|---------------|-----|-----|-----|-----|-----|-----|-----|
| | | U65 | U66 | U67 | U68 | | | | | | U69 | U70 | U71 | U72 | U73 | U74 | U75 | U76 |
| | | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 |
| Enable Opening Report, Telco 1 | 0808 | | | | | | | | | 0809 | | | | | | | | |
| Enable Closing Report, Telco 1 | 0817 | | | | | | | | | 0818 | | | | | | | | |
| Enable Opening Report, Telco 3 | 0826 | | | | | | | | | 0827 | | | | | | | | |
| Enable Closing Report, Telco 3 | 0835 | | | | | | | | | 0836 | | | | | | | | |

User 65 = Auto Arming/Disarming
 User 66 = Quickloader Remote Arming/Disarming
 User 67 = Easy Arming (Opening not applicable)
 User 68 = Keypad Arming
NOTE: These opening events will report as the user number shown. Also, Keyfobs 1-8 (see Easy Menu Program Driven Mode) will report as Users 57-64, respectively.

CS USER REPORTING OPTIONS: [Default = blank (*) from address 0800-0835]

1. Select the desired option entering the option number (1-8) for each digit.
2. At the keypad, enter corresponding option number in address location. **NOTE:** Dark shaded data value box shows option not available.
3. Press to save.

DIRECT ADDRESS PROGRAM MODE

EZM GROUP OPTIONS (ADDRESS 1455-1468)

| | | | | | |
|-------------------------------------|-------------------------------------|------------------------------------|-------------------------------------|-------------------------------------|-------------------------------------|
| EZM Group 1 ADDRESS 1455 | EZM Group 2 ADDRESS 1456 | EZM Group 3 ADDRESS 1457 | EZM Group 4 ADDRESS 1458 | EZM Group 5 ADDRESS 1459 | EZM Group 6 ADDRESS 1460 |
| [Dark Shaded Box] | [Dark Shaded Box] | [Dark Shaded Box] | [Dark Shaded Box] | [Dark Shaded Box] | [Dark Shaded Box] |
| EZM Group 7 ADDRESS 1461 | EZM Group 8 ADDRESS 1462 | EZM Group 9 ADDRESS 1463 | EZM Group 10 ADDRESS 1464 | EZM Group 11 ADDRESS 1465 | EZM Group 12 ADDRESS 1466 |
| [Dark Shaded Box] | [Dark Shaded Box] | [Dark Shaded Box] | [Dark Shaded Box] | [Dark Shaded Box] | [Dark Shaded Box] |
| EZM Group 13 ADDRESS 1467 | EZM Group 14 ADDRESS 1468 | | | | |
| [Dark Shaded Box] | [Dark Shaded Box] | | | | |

Default depends on Easy Menu Question “# OF ZNS IN AREA 1 ENTER # ZONES” and “EZ ZONE DOUBLING? Y/N”. For example, if 64 Zones are used and Zone Doubling is **not** enabled, then all 14 Groups will be automatically enabled. If 64 Zones are used and Zone Doubling is enabled, then only Groups 1-12 will be automatically enabled.


NOTE: If “Zone Doubling” (Address 1423, option 1) is **not** enabled, then Zones 1-8 are included in the control panel and Zones 9-64 (Groups 1-14) are EZM Zones. If “Zone Doubling” is enabled, then Zones 1-16 are included in the control panel and Zones 17-64 (Groups 1-12) are EZM Zones (and Groups 13 and 14 must not be used).

| EZM TYPE | | EZM ZONES COVERED | |
|--------------|------------------------------|-------------------|---------|
| DATA ENTRIES | OPTION | GROUP | DOUBLED |
| blank (*) | Not used (No EZM present) | 1 | 9-12 |
| 1 | 4-Zone EZM | 2 | 13-16 |
| | | 3 | 17-20 |
| | | 4 | 21-24 |
| | | 5 | 25-28 |
| | | 6 | 29-32 |
| | | 7 | 33-36 |
| | | 8 | 37-40 |
| | | 9 | 41-44 |
| | | 10 | 45-48 |
| | | 11 | 49-52 |
| | | 12 | 53-56 |
| | | 13 | 57-60 |
| | | 14 | 61-64 |

EZM GROUP OPTIONS: Up to 14 Groups of 4 Zones each may be programmed depending on the number of Zones used and which EZM modules are connected. Each Group represents 4 Zones.

1. Select EZM type from the table shown.
2. Enter either blank (*) or "1" in corresponding address locations above.

NOTE: Dark shaded data value box shows option not available.

3. Press  to save.


AREA ARMING OPTIONS (ADDRESS 1469-1472)

| | | | | | | | | | | | | | | | | | | | |
|---|------------------------|--------------|-------------------|-------------------|---|------------------------|--------------|-------------------|-------------------|---|------------------------|--------------|-------------------|-------------------|---|------------------------|--------------|-------------------|-------------------|
| <table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td style="width: 50%; text-align: left;">Priority Arming Area 1</td> <td style="width: 50%; text-align: right;">ADDRESS 1469</td> </tr> <tr> <td style="text-align: center;">[Dark Shaded Box]</td> <td style="text-align: center;">[Dark Shaded Box]</td> </tr> </table> <p>[Default = blank (*)]</p> | Priority Arming Area 1 | ADDRESS 1469 | [Dark Shaded Box] | [Dark Shaded Box] | <table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td style="width: 50%; text-align: left;">Priority Arming Area 2</td> <td style="width: 50%; text-align: right;">ADDRESS 1470</td> </tr> <tr> <td style="text-align: center;">[Dark Shaded Box]</td> <td style="text-align: center;">[Dark Shaded Box]</td> </tr> </table> <p>[Default = blank (*)]</p> | Priority Arming Area 2 | ADDRESS 1470 | [Dark Shaded Box] | [Dark Shaded Box] | <table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td style="width: 50%; text-align: left;">Priority Arming Area 3</td> <td style="width: 50%; text-align: right;">ADDRESS 1471</td> </tr> <tr> <td style="text-align: center;">[Dark Shaded Box]</td> <td style="text-align: center;">[Dark Shaded Box]</td> </tr> </table> <p>[Default = blank (*)]</p> | Priority Arming Area 3 | ADDRESS 1471 | [Dark Shaded Box] | [Dark Shaded Box] | <table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td style="width: 50%; text-align: left;">Priority Arming Area 4</td> <td style="width: 50%; text-align: right;">ADDRESS 1472</td> </tr> <tr> <td style="text-align: center;">[Dark Shaded Box]</td> <td style="text-align: center;">[Dark Shaded Box]</td> </tr> </table> <p>[Default = blank (*)]</p> | Priority Arming Area 4 | ADDRESS 1472 | [Dark Shaded Box] | [Dark Shaded Box] |
| Priority Arming Area 1 | ADDRESS 1469 | | | | | | | | | | | | | | | | | | |
| [Dark Shaded Box] | [Dark Shaded Box] | | | | | | | | | | | | | | | | | | |
| Priority Arming Area 2 | ADDRESS 1470 | | | | | | | | | | | | | | | | | | |
| [Dark Shaded Box] | [Dark Shaded Box] | | | | | | | | | | | | | | | | | | |
| Priority Arming Area 3 | ADDRESS 1471 | | | | | | | | | | | | | | | | | | |
| [Dark Shaded Box] | [Dark Shaded Box] | | | | | | | | | | | | | | | | | | |
| Priority Arming Area 4 | ADDRESS 1472 | | | | | | | | | | | | | | | | | | |
| [Dark Shaded Box] | [Dark Shaded Box] | | | | | | | | | | | | | | | | | | |

| <table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <th colspan="2" style="text-align: center;">PRIORITY ARMING/AREA 1</th> </tr> <tr> <th style="text-align: center;">DATA ENTRIES</th> <th style="text-align: center;">OPTION</th> </tr> <tr> <td style="text-align: center;">blank (*)</td> <td style="text-align: center;">Not Used</td> </tr> <tr> <td style="text-align: center;">1</td> <td style="text-align: center;">Enabled</td> </tr> </table> | PRIORITY ARMING/AREA 1 | | DATA ENTRIES | OPTION | blank (*) | Not Used | 1 | Enabled | <table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <th colspan="2" style="text-align: center;">PRIORITY ARMING/AREA 2</th> </tr> <tr> <th style="text-align: center;">DATA ENTRIES</th> <th style="text-align: center;">OPTION</th> </tr> <tr> <td style="text-align: center;">blank (*)</td> <td style="text-align: center;">Not Used</td> </tr> <tr> <td style="text-align: center;">1</td> <td style="text-align: center;">Enabled</td> </tr> </table> | PRIORITY ARMING/AREA 2 | | DATA ENTRIES | OPTION | blank (*) | Not Used | 1 | Enabled | <table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <th colspan="2" style="text-align: center;">PRIORITY ARMING/AREA 3</th> </tr> <tr> <th style="text-align: center;">DATA ENTRIES</th> <th style="text-align: center;">OPTION</th> </tr> <tr> <td style="text-align: center;">blank (*)</td> <td style="text-align: center;">Not Used</td> </tr> <tr> <td style="text-align: center;">1</td> <td style="text-align: center;">Enabled</td> </tr> </table> | PRIORITY ARMING/AREA 3 | | DATA ENTRIES | OPTION | blank (*) | Not Used | 1 | Enabled | <table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <th colspan="2" style="text-align: center;">PRIORITY ARMING/AREA 4</th> </tr> <tr> <th style="text-align: center;">DATA ENTRIES</th> <th style="text-align: center;">OPTION</th> </tr> <tr> <td style="text-align: center;">blank (*)</td> <td style="text-align: center;">Not Used</td> </tr> <tr> <td style="text-align: center;">1</td> <td style="text-align: center;">Enabled</td> </tr> </table> | PRIORITY ARMING/AREA 4 | | DATA ENTRIES | OPTION | blank (*) | Not Used | 1 | Enabled |
|--|------------------------|--|--------------|--------|-----------|----------|---|---------|--|------------------------|--|--------------|--------|-----------|----------|---|---------|--|------------------------|--|--------------|--------|-----------|----------|---|---------|--|------------------------|--|--------------|--------|-----------|----------|---|---------|
| PRIORITY ARMING/AREA 1 | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| DATA ENTRIES | OPTION | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| blank (*) | Not Used | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 1 | Enabled | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| PRIORITY ARMING/AREA 2 | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| DATA ENTRIES | OPTION | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| blank (*) | Not Used | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 1 | Enabled | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| PRIORITY ARMING/AREA 3 | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| DATA ENTRIES | OPTION | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| blank (*) | Not Used | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 1 | Enabled | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| PRIORITY ARMING/AREA 4 | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| DATA ENTRIES | OPTION | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| blank (*) | Not Used | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 1 | Enabled | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |

PRIORITY AREA ARMING:

1. Select option from the table shown.
2. Enter either blank (*) or "1" in corresponding address location.

NOTE: Dark shaded data value box shows option not available.
3. Press  to save.



AREA BELL CONTROL OPTIONS (ADDRESS 1473-1488)

DIRECT ADDRESS PROGRAM MODE

| | | |
|---|---|----------------------------------|
| 1473 Burglary Output Turns Off upon Disarm | | |
| Default | | Option: Disarming Area 1: |
| ON | 1 | Area 1 Burg Output Silenced |
| OFF | 2 | Area 2 Burg Output Silenced |
| OFF | 3 | Area 3 Burg Output Silenced |
| OFF | 4 | Area 4 Burg Output Silenced |

| | | |
|---|---|----------------------------------|
| 1474 Burglary Output Turns Off upon Disarm | | |
| Default | | Option: Disarming Area 2: |
| ON | 1 | Area 1 Burg Output Silenced |
| OFF | 2 | Area 2 Burg Output Silenced |
| OFF | 3 | Area 3 Burg Output Silenced |
| OFF | 4 | Area 4 Burg Output Silenced |

| | | |
|---|---|----------------------------------|
| 1475 Burglary Output Turns Off upon Disarm | | |
| Default | | Option: Disarming Area 3: |
| ON | 1 | Area 1 Burg Output Silenced |
| OFF | 2 | Area 2 Burg Output Silenced |
| OFF | 3 | Area 3 Burg Output Silenced |
| OFF | 4 | Area 4 Burg Output Silenced |

| | | |
|---|---|----------------------------------|
| 1476 Burglary Output Turns Off upon Disarm | | |
| Default | | Option: Disarming Area 4: |
| ON | 1 | Area 1 Burg Output Silenced |
| OFF | 2 | Area 2 Burg Output Silenced |
| OFF | 3 | Area 3 Burg Output Silenced |
| OFF | 4 | Area 4 Burg Output Silenced |

| | | |
|--|---|------------------------------------|
| 1477 Pulsed Burg Output Turns Off upon Disarm | | |
| Default | | Option: Disarming Area 1: |
| ON | 1 | Area 1 Pulsed Burg Output Silenced |
| OFF | 2 | Area 2 Pulsed Burg Output Silenced |
| OFF | 3 | Area 3 Pulsed Burg Output Silenced |
| OFF | 4 | Area 4 Pulsed Burg Output Silenced |

| | | |
|--|---|------------------------------------|
| 1478 Pulsed Burg Output Turns Off upon Disarm | | |
| Default | | Option: Disarming Area 2: |
| ON | 1 | Area 1 Pulsed Burg Output Silenced |
| OFF | 2 | Area 2 Pulsed Burg Output Silenced |
| OFF | 3 | Area 3 Pulsed Burg Output Silenced |
| OFF | 4 | Area 4 Pulsed Burg Output Silenced |

| | | |
|--|---|------------------------------------|
| 1479 Pulsed Burg Output Turns Off upon Disarm | | |
| Default | | Option: Disarming Area 3: |
| ON | 1 | Area 1 Pulsed Burg Output Silenced |
| OFF | 2 | Area 2 Pulsed Burg Output Silenced |
| OFF | 3 | Area 3 Pulsed Burg Output Silenced |
| OFF | 4 | Area 4 Pulsed Burg Output Silenced |

| | | |
|--|---|------------------------------------|
| 1480 Pulsed Burg Output Turns Off upon Disarm | | |
| Default | | Option: Disarming Area 4: |
| ON | 1 | Area 1 Pulsed Burg Output Silenced |
| OFF | 2 | Area 2 Pulsed Burg Output Silenced |
| OFF | 3 | Area 3 Pulsed Burg Output Silenced |
| OFF | 4 | Area 4 Pulsed Burg Output Silenced |

| | | |
|---|---|----------------------------------|
| 1481 PGM1 Output Turns Off upon Disarm | | |
| Default | | Option: Disarming Area 1: |
| ON | 1 | Area 1 PGM1 Output Silenced |
| OFF | 2 | Area 2 PGM1 Output Silenced |
| OFF | 3 | Area 3 PGM1 Output Silenced |
| OFF | 4 | Area 4 PGM1 Output Silenced |

| | | |
|---|---|----------------------------------|
| 1482 PGM1 Output Turns Off upon Disarm | | |
| Default | | Option: Disarming Area 2: |
| ON | 1 | Area 1 PGM1 Output Silenced |
| OFF | 2 | Area 2 PGM1 Output Silenced |
| OFF | 3 | Area 3 PGM1 Output Silenced |
| OFF | 4 | Area 4 PGM1 Output Silenced |

| | | |
|---|---|----------------------------------|
| 1483 PGM1 Output Turns Off upon Disarm | | |
| Default | | Option: Disarming Area 3: |
| ON | 1 | Area 1 PGM1 Output Silenced |
| OFF | 2 | Area 2 PGM1 Output Silenced |
| OFF | 3 | Area 3 PGM1 Output Silenced |
| OFF | 4 | Area 4 PGM1 Output Silenced |

| | | |
|---|---|----------------------------------|
| 1484 PGM1 Output Turns Off upon Disarm | | |
| Default | | Option: Disarming Area 4: |
| ON | 1 | Area 1 PGM1 Output Silenced |
| OFF | 2 | Area 2 PGM1 Output Silenced |
| OFF | 3 | Area 3 PGM1 Output Silenced |
| OFF | 4 | Area 4 PGM1 Output Silenced |

| | | |
|---|---|----------------------------------|
| 1485 PGM2 Output Turns Off upon Disarm | | |
| Default | | Option: Disarming Area 1: |
| ON | 1 | Area 1 PGM2 Burg Output Silenced |
| OFF | 2 | Area 2 PGM2 Burg Output Silenced |
| OFF | 3 | Area 3 PGM2 Burg Output Silenced |
| OFF | 4 | Area 4 PGM2 Burg Output Silenced |

| | | |
|---|---|----------------------------------|
| 1486 PGM2 Output Turns Off upon Disarm | | |
| Default | | Option: Disarming Area 2: |
| ON | 1 | Area 1 PGM2 Burg Output Silenced |
| OFF | 2 | Area 2 PGM2 Burg Output Silenced |
| OFF | 3 | Area 3 PGM2 Burg Output Silenced |
| OFF | 4 | Area 4 PGM2 Burg Output Silenced |

| | | |
|---|---|----------------------------------|
| 1487 PGM2 Output Turns Off upon Disarm | | |
| Default | | Option: Disarming Area 3: |
| ON | 1 | Area 1 PGM2 Burg Output Silenced |
| OFF | 2 | Area 2 PGM2 Burg Output Silenced |
| OFF | 3 | Area 3 PGM2 Burg Output Silenced |
| OFF | 4 | Area 4 PGM2 Burg Output Silenced |

| | | |
|---|---|----------------------------------|
| 1488 PGM2 Output Turns Off upon Disarm | | |
| Default | | Option: Disarming Area 4: |
| ON | 1 | Area 1 PGM2 Burg Output Silenced |
| OFF | 2 | Area 2 PGM2 Burg Output Silenced |
| OFF | 3 | Area 3 PGM2 Burg Output Silenced |
| OFF | 4 | Area 4 PGM2 Burg Output Silenced |

OUTPUT TURNS OFF UPON DISARM:

Select options for any of the 4 Outputs. By default, the ability to turn off an output upon disarm is not allowed. For example, the ability to silence an Area 1 through Area 4 output via an Area 1 keypad is not enabled by default. To enable selected area output control, enter the number (1,2,3,4) accordingly. For example, if you wish to grant an Area 1 keypad the ability to turn off an Area 2 PGM2 output, enter "2" in Address 1485.

Enter digit in address location. **NOTE:** Dark shaded data value box shows option not available. Press to save.


KEYPAD OPTIONS (ADDRESS 1425-1431, 1440-1446)

| Enable Keypad Type & Activation | ADDR | Enable Keypad Type | Keypad Area Assignment |
|---------------------------------|------|---|--|
| | | Blank (•) = Burg Keypad 2 = Wizard * *Not for UL Installations | Blank (•) = Disabled 1 = Area 1 2 = Area 2 3 = Area 3 4 = Area 4 |
| Keypad 1 | 1425 | | |
| Keypad 2 | 1426 | | |
| Keypad 3 | 1427 | | |
| Keypad 4 | 1428 | | |
| Keypad 5 | 1429 | | |
| Keypad 6 | 1430 | | |
| Keypad 7 | 1431 | | |

[Default = blank (•) from address 1425-1431]

KEYPAD TYPE: Up to 7 keypads may be programmed, if they are connected.



NOTE: See Keypad Configuration Mode.

1. Select keypad type for each keypad from the tables shown.
2. Enter data in corresponding address locations.
3. Press  to save.


| Enable Keypad Options | ADDR | Enable Keypad Options | | | | | | | |
|-----------------------|------|-----------------------|--------------|--------------|-------|--------|-------------|--------------|-------|
| | | Keypad Fire | Keypad Aux.* | Keypad Panic | RSRVD | Ambush | Easy Arming | Panel Access | RSRVD |
| | | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 |
| Keypad 1 Options | 1440 | | | | | | | | |
| Keypad 2 Options | 1441 | | | | | | | | |
| Keypad 3 Options | 1442 | | | | | | | | |
| Keypad 4 Options | 1443 | | | | | | | | |
| Keypad 5 Options | 1444 | | | | | | | | |
| Keypad 6 Options | 1445 | | | | | | | | |
| Keypad 7 Options | 1446 | | | | | | | | |

[Default = blank (•) from address 1440-1446] * **NOTE:** Keypad Aux. is not to be selected for UL Installations.

ENABLE KEYPAD OPTIONS: Select options for any of the 7 keypads.

-  1. Select the desired option entering the option number (1-8) for each digit.
-  2. At the keypad, enter corresponding option number in address location.

NOTE: Dark shaded data value box shows option not available.

-  3. Press  to save.

DIRECT ADDRESS PROGRAM MODE



TEMPERATURE DISPLAY AT KEYPAD (ADDRESS 1666-1668)

--ZONE 6 TEMPERATURE SENSOR--

| 1666 Temperature Lower Limit* | | |
|-------------------------------|---|---------------------------------------|
| Default | | Option |
| OFF | 1 | Binary Temperature Value 1° |
| OFF | 2 | Binary Temperature Value 2° |
| OFF | 3 | Binary Temperature Value 4° |
| OFF | 4 | Binary Temperature Value 8° |
| OFF | 5 | Binary Temperature Value 16° |
| OFF | 6 | Binary Temperature Value 32° |
| OFF | 7 | Binary Temperature Value 64° |
| OFF | 8 | Enable for Negative Temperature Value |


| 1667 Temperature Upper Limit* | | |
|-------------------------------|---|---------------------------------------|
| Default | | Option |
| OFF | 1 | Binary Temperature Value 1° |
| OFF | 2 | Binary Temperature Value 2° |
| OFF | 3 | Binary Temperature Value 4° |
| OFF | 4 | Binary Temperature Value 8° |
| OFF | 5 | Binary Temperature Value 16° |
| OFF | 6 | Binary Temperature Value 32° |
| OFF | 7 | Binary Temperature Value 64° |
| OFF | 8 | Enable for Negative Temperature Value |

| 1668 Enable Temperature Options* | | |
|----------------------------------|---|-----------------------------------|
| Default | | Option |
| OFF | 1 | Enable Temperature Display Option |
| OFF | 2 | Select Degrees Celsius |
| OFF | 3 | Report Temperature Alarm (Zone 6) |
| OFF | 4 | Reserved |
| OFF | 5 | Reserved |
| OFF | 6 | Reserved |
| OFF | 7 | Reserved |
| OFF | 8 | Reserved |

DIRECT ADDRESS PROGRAM MODE

Temperature Display at Keypad

 The temperature is displayed instead of the date on line 2 of the GEM-RP1CAe2 (or GEM-K1CA) keypad. The keypad will display from -22F to 140F (or -30C to 60C). Fahrenheit is the default setting, select Celsius by enabling address 1668 option 2. When this Temperature Display Option is enabled, Zone 6 becomes the input for the GEM-TEMP64 Temperature Sensor module and Zone 6 of the panel becomes inoperative; if Zone Doubling is selected, zones 6, 14 will be inoperative.

Address 1668 option 3 enables Zone 6 to report a temperature problem. Address 1666 (options 1-7) set the lower limit temperature value and address 1667 (options 1-7) sets the upper limit temperature value (both values are set in binary). If the temperature detected by the panel is above or below these set limits, the panel will report an alarm on Zone 6. To function and report properly, Zone 6 must be selected as a reporting zone, 24hr zone in area 1 and auto-resettable. At both 1666 and 1667 addresses, option 8 sets positive or negative temperature. If the temperature of 0 degrees is required, "negative zero" (-0) degrees must be used (+0 or an empty location is not a valid temperature). To simulate the sensor module, a power supply can be connected to Zone 6 and set from .55v to 3.05v to display the whole temperature range. Temperature values are read and updated every 5 seconds. To report an outer limit temperature, the temperature must be out of limits for 2 seconds. To avoid false alarm reports, the limits have a threshold of 5 degrees in the software. Two new logs have been created for temperature out of limits and restore. If the  key is depressed and held down for 2 seconds, the date will display for 5 seconds.

In addition, three addresses must be enabled (either via Quickloader or via direct address programming) in order for the **Temperature Display at Keypad** feature to operate.

The following features must be enabled In Quickloader (or in direct address programming):

1. **Keypad Assignment, Temperature Settings** tab, **Enable Temperature Display** (Address 1668, option 1)
2. **Keypad Assignment, Keypad Features** tab, **Enable Keypad Time/Date Display** (Address 1420, option 7)
3. **Keypad Assignment, Keypad Features** tab, **Enable Set Time/Date Message** (Address 2051, option 1)

Note: If these three addresses are set and power (AC and battery) are subsequently removed, they keypad will indicate that the time and date are lost and will need to be reset. See W11425 for more information.

*This feature not evaluated by UL.

ZONE OPTIONS - ZONES 1 TO 16 (ADDRESS 0900-1016)

| ZONE OPTIONS | ADDR | ZONES 1 → 8 | | | | | | | | ADDR | ZONES 9 → 16 | | | | | | | |
|------------------------------|------|-------------|----|----|----|----|----|----|----|------|--------------|-----|-----|-----|-----|-----|-----|-----|
| | | Z1 | Z2 | Z3 | Z4 | Z5 | Z6 | Z7 | Z8 | | Z9 | Z10 | Z11 | Z12 | Z13 | Z14 | Z15 | Z16 |
| | | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 |
| 50ms Loop Response (A) | 0900 | | | | | | | | | 0964 | | | | | | | | |
| † Priority | 0901 | | | | | | | | | 0965 | | | | | | | | |
| Priority with Bypass | 0902 | | | | | | | | | 0966 | | | | | | | | |
| Auto-Bypass | 0903 | | | | | | | | | 0967 | | | | | | | | |
| † Selective Bypass | 0904 | | | | | | | | | 0968 | | | | | | | | |
| Keyswitch Arming | 0905 | | | | | | | | | 0969 | | | | | | | | |
| Auto-Bypass Re-entry | 0906 | | | | | | | | | 0970 | | | | | | | | |
| Pre-Alarm Warning | 0907 | | | | | | | | | 0971 | | | | | | | | |
| Never Arm | 0908 | | | | | | | | | 0972 | | | | | | | | |
| 24-Hour Zone | 0909 | | | | | | | | | 0973 | | | | | | | | |
| † Alarm Output | 0910 | | | | | | | | | 0974 | | | | | | | | |
| † Pulsed Alarm Output | 0911 | | | | | | | | | 0975 | | | | | | | | |
| PGM1 Output | 0912 | | | | | | | | | 0976 | | | | | | | | |
| PGM2 Output | 0913 | | | | | | | | | 0977 | | | | | | | | |
| † Entry/Exit 1 | 0914 | | | | | | | | | 0978 | | | | | | | | |
| † Entry/Exit 2 | 0915 | | | | | | | | | 0979 | | | | | | | | |
| † Exit/Entry Follower | 0916 | | | | | | | | | 0980 | | | | | | | | |
| †★ Auto Reset | 0917 | | | | | | | | | 0981 | | | | | | | | |
| †★ Swinger Shutdown | 0918 | | | | | | | | | 0982 | | | | | | | | |
| † Chime | 0919 | | | | | | | | | 0983 | | | | | | | | |
| Abort Delay | 0920 | | | | | | | | | 0984 | | | | | | | | |
| Power-up Delay | 0921 | | | | | | | | | 0985 | | | | | | | | |
| Day Zone Open | 0922 | | | | | | | | | 0986 | | | | | | | | |
| Day Zone Short | 0923 | | | | | | | | | 0987 | | | | | | | | |
| Alarm on Day Zone | 0924 | | | | | | | | | 0988 | | | | | | | | |
| † Alarm Telco 1 | 0925 | | | | | | | | | 0989 | | | | | | | | |
| Alarm Restore 1 | 0926 | | | | | | | | | 0990 | | | | | | | | |
| Trouble Telco 1 | 0927 | | | | | | | | | 0991 | | | | | | | | |
| Trouble Restore 1 | 0928 | | | | | | | | | 0992 | | | | | | | | |
| Alarm Telco 3 | 0929 | | | | | | | | | 0993 | | | | | | | | |
| Alarm Restore 3 | 0930 | | | | | | | | | 0994 | | | | | | | | |
| Trouble Telco 3 | 0931 | | | | | | | | | 0995 | | | | | | | | |
| Trouble Restore 3 | 0932 | | | | | | | | | 0996 | | | | | | | | |
| No EOL Resistor | 0933 | | | | | | | | | 0997 | | | | | | | | |
| Trouble on Open | 0934 | | | | | | | | | 0998 | | | | | | | | |
| Trouble on Short | 0935 | | | | | | | | | 0999 | | | | | | | | |
| † Zone Area 1 | 0936 | | | | | | | | | 1000 | | | | | | | | |
| Zone Area 2 | 0937 | | | | | | | | | 1001 | | | | | | | | |
| Zone Area 3 | 0938 | | | | | | | | | 1002 | | | | | | | | |
| Zone Area 4 | 0939 | | | | | | | | | 1003 | | | | | | | | |
| Interior (Stay) Bypass | 0940 | | | | | | | | | 1004 | | | | | | | | |
| Keypad Sounder on Alarm | 0941 | | | | | | | | | 1005 | | | | | | | | |
| † 2-Wire Smoke Detectors (B) | 0942 | | | | | | | | | 1006 | | | | | | | | |
| † Fire (C) | 0943 | | | | | | | | | 1007 | | | | | | | | |
| Fire Alarm Verification (C) | 0944 | | | | | | | | | 1008 | | | | | | | | |
| RESERVED | 0945 | | | | | | | | | 1009 | | | | | | | | |
| Zone ANDing Group 1 | 0946 | | | | | | | | | 1010 | | | | | | | | |
| Zone ANDing Group 2 | 0947 | | | | | | | | | 1011 | | | | | | | | |
| Zone ANDing Group 3 | 0948 | | | | | | | | | 1012 | | | | | | | | |
| Zone ANDing Group 4 | 0949 | | | | | | | | | 1013 | | | | | | | | |
| Sensor Watch | 0950 | | | | | | | | | 1014 | | | | | | | | |
| RESERVED | 0951 | | | | | | | | | 1015 | | | | | | | | |
| Chime 2 | 0952 | | | | | | | | | 1016 | | | | | | | | |
| RESERVED | 0953 | | | | | | | | | 1017 | | | | | | | | |
| RESERVED | 0954 | | | | | | | | | 1018 | | | | | | | | |

† When the Easy Program Menu is used, these features are enabled by default.

★ Enabled when "Enable SIA CP-01 Features?" is activated (Answer "Yes" in the EZ Programming Menu).

★ Disabled when "Enable SIA CP-01 Features?" is activated (Answer "Yes" in the EZ Programming Menu). Disable Auto-Reset on non-fire zones for SIA CP-01 installations.

ZONE OPTIONS: Select zone options for any zone.

1. Select the desired zone option by entering the option number (1-8) for each selected zone.
2. Enter corresponding option number in address location.

NOTE: Dark shaded data value box shows option not available. Press [Enter] to save.

Notes A, B and C are located on the bottom of the next page.

DIRECT ADDRESS PROGRAM MODE



ZONE OPTIONS - ZONES 17 TO 32 (ADDRESS 1029-1144)

DIRECT ADDRESS PROGRAM MODE

| ZONE FEATURES | ADDR | ZONES 17 → 24 | | | | | | | | ADDR | ZONES 25 → 32 | | | | | | | |
|-----------------------------|------|---------------|-----|-----|-----|-----|-----|-----|-----|------|---------------|-----|-----|-----|-----|-----|-----|-----|
| | | Z17 | Z18 | Z19 | Z20 | Z21 | Z22 | Z23 | Z24 | | Z25 | Z26 | Z27 | Z28 | Z29 | Z30 | Z31 | Z32 |
| | | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 |
| † Priority | 1029 | | | | | | | | | 1093 | | | | | | | | |
| Priority with Bypass | 1030 | | | | | | | | | 1094 | | | | | | | | |
| Auto-Bypass | 1031 | | | | | | | | | 1095 | | | | | | | | |
| † Priority Selective Bypass | 1032 | | | | | | | | | 1096 | | | | | | | | |
| Keyswitch Arming | 1033 | | | | | | | | | 1097 | | | | | | | | |
| Auto-Bypass Re-entry | 1034 | | | | | | | | | 1098 | | | | | | | | |
| Pre-Alarm Warning | 1035 | | | | | | | | | 1099 | | | | | | | | |
| Never Arm | 1036 | | | | | | | | | 1100 | | | | | | | | |
| 24-Hour Zone | 1037 | | | | | | | | | 1101 | | | | | | | | |
| † Alarm Output | 1038 | | | | | | | | | 1102 | | | | | | | | |
| † Pulsed Alarm Output | 1039 | | | | | | | | | 1103 | | | | | | | | |
| PGM1 Output | 1040 | | | | | | | | | 1104 | | | | | | | | |
| PGM2 Output | 1041 | | | | | | | | | 1105 | | | | | | | | |
| † Entry/Exit 1 | 1042 | | | | | | | | | 1106 | | | | | | | | |
| † Entry/Exit 2 | 1043 | | | | | | | | | 1107 | | | | | | | | |
| † Exit/Entry Follower | 1044 | | | | | | | | | 1108 | | | | | | | | |
| † Auto Reset | 1045 | | | | | | | | | 1109 | | | | | | | | |
| † Swinger Shutdown | 1046 | | | | | | | | | 1110 | | | | | | | | |
| † Chime | 1047 | | | | | | | | | 1111 | | | | | | | | |
| Abort Delay | 1048 | | | | | | | | | 1112 | | | | | | | | |
| Power-up Delay | 1049 | | | | | | | | | 1113 | | | | | | | | |
| Day Zone Open | 1050 | | | | | | | | | 1114 | | | | | | | | |
| Day Zone Short | 1051 | | | | | | | | | 1115 | | | | | | | | |
| Alarm on Day Zone | 1052 | | | | | | | | | 1116 | | | | | | | | |
| † Alarm Telco 1 | 1053 | | | | | | | | | 1117 | | | | | | | | |
| Alarm Restore 1 | 1054 | | | | | | | | | 1118 | | | | | | | | |
| Trouble Telco 1 | 1055 | | | | | | | | | 1119 | | | | | | | | |
| Trouble Restore 1 | 1056 | | | | | | | | | 1120 | | | | | | | | |
| Alarm Telco 3 | 1057 | | | | | | | | | 1121 | | | | | | | | |
| Alarm Restore 3 | 1058 | | | | | | | | | 1122 | | | | | | | | |
| Trouble Telco 3 | 1059 | | | | | | | | | 1123 | | | | | | | | |
| Trouble Restore 3 | 1060 | | | | | | | | | 1124 | | | | | | | | |
| No EOL Resistor | 1061 | | | | | | | | | 1125 | | | | | | | | |
| Trouble on Open | 1062 | | | | | | | | | 1126 | | | | | | | | |
| Trouble on Short | 1063 | | | | | | | | | 1127 | | | | | | | | |
| † Zone Area 1 | 1064 | | | | | | | | | 1128 | | | | | | | | |
| Zone Area 2 | 1065 | | | | | | | | | 1129 | | | | | | | | |
| Zone Area 3 | 1066 | | | | | | | | | 1130 | | | | | | | | |
| Zone Area 4 | 1067 | | | | | | | | | 1131 | | | | | | | | |
| Interior (Stay) Bypass | 1068 | | | | | | | | | 1132 | | | | | | | | |
| Keypad Sounder on Alarm | 1069 | | | | | | | | | 1133 | | | | | | | | |
| † Fire (C) | 1071 | | | | | | | | | 1135 | | | | | | | | |
| Fire Alarm Verification (C) | 1072 | | | | | | | | | 1136 | | | | | | | | |
| Zone ANDing Group 1 | 1074 | | | | | | | | | 1138 | | | | | | | | |
| Zone ANDing Group 2 | 1075 | | | | | | | | | 1139 | | | | | | | | |
| Zone ANDing Group 3 | 1076 | | | | | | | | | 1140 | | | | | | | | |
| Zone ANDing Group 4 | 1077 | | | | | | | | | 1141 | | | | | | | | |
| Sensor Watch | 1078 | | | | | | | | | 1142 | | | | | | | | |
| RESERVED | 1079 | | | | | | | | | 1143 | | | | | | | | |
| Chime 2 | 1080 | | | | | | | | | 1144 | | | | | | | | |
| RESERVED | 1081 | | | | | | | | | 1145 | | | | | | | | |
| RESERVED | 1082 | | | | | | | | | 1146 | | | | | | | | |

- † When the Easy Program Menu is used, these features are enabled by default.
 - ★ Enabled when "Enable SIA CP-01 Features?" is activated (Answer "Yes" in the EZ Programming Menu).
 - ★ Disabled when "Enable SIA CP-01 Features?" is activated (Answer "Yes" in the EZ Programming Menu). Disable Auto-Reset on non-fire zones for SIA CP-01 installations.
- NOTES:**
- (A) 50ms Loop Response only available for zones 1-8. If Zone Doubling is enabled, Zones 9-16 will follow the loop response programming for Zones 1-8. For all other Zones, loop response is determined by jumpers on the GEM-EZM8 and/or keypad configuration on the GEM-RP1CAe2 or GEM-K1CA.
 - (B) 2-wire Smoke Detectors only available for zones 7 & 8, and Fire must also be selected.
 - (C) If Fire Alarm Verification is selected, then Fire must also be selected.

- DEFAULTS:** The zone options indicated are automatically set after exiting the Easy Menu Driven Mode.
- Priority, Selective Bypass, Alarm Output, Auto Reset, Swinger Shutdown and Zone Area 1 are enabled for the total number of zones entered in "** OF ZONES IN AREA1 ENTER # ZONES".
 - Alarm Telco 1 is enabled for the zone number(s) entered in "REPORT ALL ZONES TO CENTRAL ZONES? Y/N".
 - Entry/Exit 1 and Chime are enabled for the zone number(s) entered in "ENTR3/EXIT ZONES ENTER ZONE #".
 - Exit/Entry Follower and Interior Bypass are enabled for the zone number(s) entered in "INTERIOR ZONES ENTER ZONE #".
 - Pulse Alarm Output is enabled for the zone number(s) entered in "FIRE ZONES ENTER ZONE #" or "2-WIRE FIRE ZNS ENTER ZONE #".
 - Fire is enabled for the zone number(s) entered in "FIRE ZONES ENTER ZONE #".
 - 2-Wire Smoke Detector is enabled for the zone number(s) entered in "2-WIRE FIRE ZNS ENTER ZONE #".

ZONE OPTIONS - ZONES 33 TO 48 (ADDRESS 1157-1272)

| | ZONE OPTIONS | ADDR | ZONES 33→ 40 | | | | | | | | ADDR | ZONES 41 → 48 | | | | | | | |
|----|-----------------------------|------|--------------|-----|-----|-----|-----|-----|-----|------|------|---------------|-----|-----|-----|-----|-----|-----|-----|
| | | | Z33 | Z34 | Z35 | Z36 | Z37 | Z38 | Z39 | Z40 | | Z41 | Z42 | Z43 | Z44 | Z45 | Z46 | Z47 | Z48 |
| | | | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 |
| | 50ms Loop Response (A) | | | | | | | | | | | | | | | | | | |
| † | Priority | 1157 | | | | | | | | 1221 | | | | | | | | | |
| | Priority with Bypass | 1158 | | | | | | | | 1222 | | | | | | | | | |
| | Auto-Bypass | 1159 | | | | | | | | 1223 | | | | | | | | | |
| † | Selective Bypass | 1160 | | | | | | | | 1224 | | | | | | | | | |
| | Keyswitch Arming | 1161 | | | | | | | | 1225 | | | | | | | | | |
| | Auto-Bypass Re-entry | 1162 | | | | | | | | 1226 | | | | | | | | | |
| | Pre-Alarm Warning | 1163 | | | | | | | | 1227 | | | | | | | | | |
| | Never Arm | 1164 | | | | | | | | 1228 | | | | | | | | | |
| | 24-Hour Zone | 1165 | | | | | | | | 1229 | | | | | | | | | |
| † | Alarm Output | 1166 | | | | | | | | 1230 | | | | | | | | | |
| † | Pulsed Alarm Output | 1167 | | | | | | | | 1231 | | | | | | | | | |
| | PGM1 Output | 1168 | | | | | | | | 1232 | | | | | | | | | |
| | PGM2 Output | 1169 | | | | | | | | 1233 | | | | | | | | | |
| † | Entry/Exit 1 | 1170 | | | | | | | | 1234 | | | | | | | | | |
| | Entry/Exit 2 | 1171 | | | | | | | | 1235 | | | | | | | | | |
| † | Exit/Entry Follower | 1172 | | | | | | | | 1236 | | | | | | | | | |
| †★ | Auto Reset | 1173 | | | | | | | | 1237 | | | | | | | | | |
| †★ | Swinger Shutdown | 1174 | | | | | | | | 1238 | | | | | | | | | |
| † | Chime | 1175 | | | | | | | | 1239 | | | | | | | | | |
| | Abort Delay | 1176 | | | | | | | | 1240 | | | | | | | | | |
| | Power-up Delay | 1177 | | | | | | | | 1241 | | | | | | | | | |
| | Day Zone Open | 1178 | | | | | | | | 1242 | | | | | | | | | |
| | Day Zone Short | 1179 | | | | | | | | 1243 | | | | | | | | | |
| | Alarm on Day Zone | 1180 | | | | | | | | 1244 | | | | | | | | | |
| † | Alarm Telco 1 | 1181 | | | | | | | | 1245 | | | | | | | | | |
| | Alarm Restore 1 | 1182 | | | | | | | | 1246 | | | | | | | | | |
| | Trouble Telco 1 | 1183 | | | | | | | | 1247 | | | | | | | | | |
| | Trouble Restore 1 | 1184 | | | | | | | | 1248 | | | | | | | | | |
| | Alarm Telco 3 | 1185 | | | | | | | | 1249 | | | | | | | | | |
| | Alarm Restore 3 | 1186 | | | | | | | | 1250 | | | | | | | | | |
| | Trouble Telco 3 | 1187 | | | | | | | | 1251 | | | | | | | | | |
| | Trouble Restore 3 | 1188 | | | | | | | | 1252 | | | | | | | | | |
| | No EOL Resistor | 1189 | | | | | | | | 1253 | | | | | | | | | |
| | Trouble on Open | 1190 | | | | | | | | 1254 | | | | | | | | | |
| | Trouble on Short | 1191 | | | | | | | | 1255 | | | | | | | | | |
| † | Zone Area 1 | 1192 | | | | | | | | 1256 | | | | | | | | | |
| | Zone Area 2 | 1193 | | | | | | | | 1257 | | | | | | | | | |
| | Zone Area 3 | 1194 | | | | | | | | 1258 | | | | | | | | | |
| | Zone Area 4 | 1195 | | | | | | | | 1259 | | | | | | | | | |
| | Interior (Stay) Bypass | 1196 | | | | | | | | 1260 | | | | | | | | | |
| | Keypad Sounder on Alarm | 1197 | | | | | | | | 1261 | | | | | | | | | |
| † | 2-Wire Smoke Detectors (B) | 1198 | | | | | | | | 1262 | | | | | | | | | |
| † | Fire (C) | 1199 | | | | | | | | 1263 | | | | | | | | | |
| | Fire Alarm Verification (C) | 1200 | | | | | | | | 1264 | | | | | | | | | |
| | RESERVED | 1201 | | | | | | | | 1265 | | | | | | | | | |
| | Zone ANDing Group 1 | 1202 | | | | | | | | 1266 | | | | | | | | | |
| | Zone ANDing Group 2 | 1203 | | | | | | | | 1267 | | | | | | | | | |
| | Zone ANDing Group 3 | 1204 | | | | | | | | 1268 | | | | | | | | | |
| | Zone ANDing Group 4 | 1205 | | | | | | | | 1269 | | | | | | | | | |
| | Sensor Watch | 1206 | | | | | | | | 1270 | | | | | | | | | |
| | RESERVED | 1207 | | | | | | | | 1271 | | | | | | | | | |
| | Chime 2 | 1208 | | | | | | | | 1272 | | | | | | | | | |
| | RESERVED | 1209 | | | | | | | | 1273 | | | | | | | | | |
| | RESERVED | 1210 | | | | | | | | 1274 | | | | | | | | | |

DIRECT ADDRESS PROGRAM MODE

† When the Easy Program Menu is used, these features are enabled by default.

★ Enabled when "Enable SIA CP-01 Features?" is activated (Answer "Yes" in the EZ Programming Menu).

★ Disabled when "Enable SIA CP-01 Features?" is activated (Answer "Yes" in the EZ Programming Menu). Disable Auto-Reset on non-fire zones for SIA CP-01 installations.

ZONE OPTIONS: Select zone options for any zone.

1. Select the desired zone option by entering the option number (1-8) for each selected zone.
2. Enter corresponding option number in address location.

NOTE: Dark shaded data value box shows option not available. Press [Enter] to save.



ZONE OPTIONS - ZONES 49 TO 64 (ADDRESS 1285-1400)

DIRECT ADDRESS PROGRAM MODE

| ZONE FEATURES | ADDR | ZONES 49 → 56 | | | | | | | | ADDR | ZONES 57 → 64 | | | | | | | |
|-----------------------------|------|---------------|-----|-----|-----|-----|-----|-----|-----|------|---------------|-----|-----|-----|-----|-----|-----|-----|
| | | Z49 | Z50 | Z51 | Z52 | Z53 | Z54 | Z55 | Z56 | | Z57 | Z58 | Z59 | Z60 | Z61 | Z62 | Z63 | Z64 |
| | | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 |
| † Priority | 1285 | | | | | | | | | 1349 | | | | | | | | |
| Priority with Bypass | 1286 | | | | | | | | | 1350 | | | | | | | | |
| Auto-Bypass | 1287 | | | | | | | | | 1351 | | | | | | | | |
| † Priority Selective Bypass | 1288 | | | | | | | | | 1352 | | | | | | | | |
| Keyswitch Arming | 1289 | | | | | | | | | 1353 | | | | | | | | |
| Auto-Bypass Re-entry | 1290 | | | | | | | | | 1354 | | | | | | | | |
| Pre-Alarm Warning | 1291 | | | | | | | | | 1355 | | | | | | | | |
| Never Arm | 1292 | | | | | | | | | 1356 | | | | | | | | |
| 24-Hour Zone | 1293 | | | | | | | | | 1357 | | | | | | | | |
| † Alarm Output | 1294 | | | | | | | | | 1358 | | | | | | | | |
| † Pulsed Alarm Output | 1295 | | | | | | | | | 1359 | | | | | | | | |
| PGM1 Output | 1296 | | | | | | | | | 1360 | | | | | | | | |
| PGM2 Output | 1297 | | | | | | | | | 1361 | | | | | | | | |
| † Entry/Exit 1 | 1298 | | | | | | | | | 1362 | | | | | | | | |
| † Entry/Exit 2 | 1299 | | | | | | | | | 1363 | | | | | | | | |
| † Exit/Entry Follower | 1300 | | | | | | | | | 1364 | | | | | | | | |
| †★ Auto Reset | 1301 | | | | | | | | | 1365 | | | | | | | | |
| †★ Swinger Shutdown | 1302 | | | | | | | | | 1366 | | | | | | | | |
| † Chime | 1303 | | | | | | | | | 1367 | | | | | | | | |
| Abort Delay | 1304 | | | | | | | | | 1368 | | | | | | | | |
| Power-up Delay | 1305 | | | | | | | | | 1369 | | | | | | | | |
| Day Zone Open | 1306 | | | | | | | | | 1370 | | | | | | | | |
| Day Zone Short | 1307 | | | | | | | | | 1371 | | | | | | | | |
| Alarm on Day Zone | 1308 | | | | | | | | | 1372 | | | | | | | | |
| † Alarm Telco 1 | 1309 | | | | | | | | | 1373 | | | | | | | | |
| Alarm Restore 1 | 1310 | | | | | | | | | 1374 | | | | | | | | |
| Trouble Telco 1 | 1311 | | | | | | | | | 1375 | | | | | | | | |
| Trouble Restore 1 | 1312 | | | | | | | | | 1376 | | | | | | | | |
| Alarm Telco 3 | 1313 | | | | | | | | | 1377 | | | | | | | | |
| Alarm Restore 3 | 1314 | | | | | | | | | 1378 | | | | | | | | |
| Trouble Telco 3 | 1315 | | | | | | | | | 1379 | | | | | | | | |
| Trouble Restore 3 | 1316 | | | | | | | | | 1380 | | | | | | | | |
| No EOL Resistor | 1317 | | | | | | | | | 1381 | | | | | | | | |
| Trouble on Open | 1318 | | | | | | | | | 1382 | | | | | | | | |
| Trouble on Short | 1319 | | | | | | | | | 1383 | | | | | | | | |
| † Zone Area 1 | 1320 | | | | | | | | | 1384 | | | | | | | | |
| Zone Area 2 | 1321 | | | | | | | | | 1385 | | | | | | | | |
| Zone Area 3 | 1322 | | | | | | | | | 1386 | | | | | | | | |
| Zone Area 4 | 1323 | | | | | | | | | 1387 | | | | | | | | |
| Interior (Stay) Bypass | 1324 | | | | | | | | | 1388 | | | | | | | | |
| Keypad Sounder on Alarm | 1325 | | | | | | | | | 1389 | | | | | | | | |
| † Fire (C) | 1327 | | | | | | | | | 1391 | | | | | | | | |
| Fire Alarm Verification (C) | 1328 | | | | | | | | | 1392 | | | | | | | | |
| Zone ANDing Group 1 | 1330 | | | | | | | | | 1394 | | | | | | | | |
| Zone ANDing Group 2 | 1331 | | | | | | | | | 1395 | | | | | | | | |
| Zone ANDing Group 3 | 1332 | | | | | | | | | 1396 | | | | | | | | |
| Zone ANDing Group 4 | 1333 | | | | | | | | | 1397 | | | | | | | | |
| Sensor Watch | 1334 | | | | | | | | | 1398 | | | | | | | | |
| RESERVED | 1335 | | | | | | | | | 1399 | | | | | | | | |
| Chime 2 | 1336 | | | | | | | | | 1400 | | | | | | | | |
| RESERVED | 1337 | | | | | | | | | 1401 | | | | | | | | |
| RESERVED | 1338 | | | | | | | | | 1402 | | | | | | | | |

- † When the Easy Program Menu is used, these features are enabled by default.
- ★ Enabled when "Enable SIA CP-01 Features?" is activated (Answer "Yes" in the EZ Programming Menu).
- ★ Disabled when "Enable SIA CP-01 Features?" is activated (Answer "Yes" in the EZ Programming Menu). Disable Auto-Reset on non-fire zones for SIA CP-01 installations.

NOTES: (A) 50ms Loop Response only available for zones 1-8. If Zone Doubling is enabled, Zones 9-16 will follow the loop response programming for Zones 1-8. For all other Zones, loop response is determined by jumpers on the GEM-EZM8 and/or keypad configuration on the GEM-RP1CAe2 or GEM-K1CA.
 (B) 2-wire Smoke Detectors only available for zones 7 & 8, and **Fire** must also be selected.
 (C) If Fire Alarm Verification is selected, then Fire must also be selected.

DEFAULTS: The zone options indicated are automatically set after exiting the Easy Menu Driven Mode.
Priority, Selective Bypass, Alarm Output, Auto Reset, Swinger Shutdown and Zone Area 1 are enabled for the total number of zones entered in "% OF ZONES IN PREREI ENTER ## ZONES".
Alarm Telco 1 is enabled for the zone number(s) entered in "REPORT ALL ZONES TO CENTRAL ZONES? Y/N".
Entry/Exit 1 and Chime are enabled for the zone number(s) entered in "ENTRY/EXIT ZONES ENTER ZONE #".
Exit/Entry Follower and Interior Bypass are enabled for the zone number(s) entered in "INTERIOR ZONES ENTER ZONE #".
Pulse Alarm Output is enabled for the zone number(s) entered in "FIRE ZONES ENTER ZONE #" or "2-WIRE FIRE ZNS ENTER ZONE #".
Fire is enabled for the zone number(s) entered in "FIRE ZONES ENTER ZONE #".
 2-Wire Smoke Detector is enabled for the zone number(s) entered in "2-WIRE FIRE ZNS ENTER ZONE #".

EXTERNAL RELAY CONTROL (ADDRESS 1489-1648)

| ADDRESS 1489-1493 (RELAY EVENT 1) | | | | |
|-----------------------------------|------|---------|----------|-------|
| 1489 | 1490 | 1491 | 1492 | 1493 |
| RELAY # | AREA | TIMEOUT | EVENT ID | COND. |
| | | | | |

| ADDRESS 1494-1498 (RELAY EVENT 2) | | | | |
|-----------------------------------|------|---------|----------|-------|
| 1494 | 1495 | 1496 | 1497 | 1498 |
| RELAY # | AREA | TIMEOUT | EVENT ID | COND. |
| | | | | |

| ADDRESS 1499-1503 (RELAY EVENT 3) | | | | |
|-----------------------------------|------|---------|----------|-------|
| 1499 | 1500 | 1501 | 1502 | 1503 |
| RELAY # | AREA | TIMEOUT | EVENT ID | COND. |
| | | | | |

| ADDRESS 1504-1508 (RELAY EVENT 4) | | | | |
|-----------------------------------|------|---------|----------|-------|
| 1504 | 1505 | 1506 | 1507 | 1508 |
| RELAY # | AREA | TIMEOUT | EVENT ID | COND. |
| | | | | |

| ADDRESS 1509-1513 (RELAY EVENT 5) | | | | |
|-----------------------------------|------|---------|----------|-------|
| 1509 | 1510 | 1511 | 1512 | 1513 |
| RELAY # | AREA | TIMEOUT | EVENT ID | COND. |
| | | | | |

| ADDRESS 1514-1518 (RELAY EVENT 6) | | | | |
|-----------------------------------|------|---------|----------|-------|
| 1514 | 1515 | 1516 | 1517 | 1518 |
| RELAY # | AREA | TIMEOUT | EVENT ID | COND. |
| | | | | |

| ADDRESS 1519-1523 (RELAY EVENT 7) | | | | |
|-----------------------------------|------|---------|----------|-------|
| 1519 | 1520 | 1521 | 1522 | 1523 |
| RELAY # | AREA | TIMEOUT | EVENT ID | COND. |
| | | | | |

| ADDRESS 1524-1528 (RELAY EVENT 8) | | | | |
|-----------------------------------|------|---------|----------|-------|
| 1524 | 1525 | 1526 | 1527 | 1528 |
| RELAY # | AREA | TIMEOUT | EVENT ID | COND. |
| | | | | |

| ADDRESS 1529-1533 (RELAY EVENT 9) | | | | |
|-----------------------------------|------|---------|----------|-------|
| 1529 | 1530 | 1531 | 1532 | 1533 |
| RELAY # | AREA | TIMEOUT | EVENT ID | COND. |
| | | | | |

| ADDRESS 1534-1538 (RELAY EVENT 10) | | | | |
|------------------------------------|------|---------|----------|-------|
| 1534 | 1535 | 1536 | 1537 | 1538 |
| RELAY # | AREA | TIMEOUT | EVENT ID | COND. |
| | | | | |

| ADDRESS 1539-1543 (RELAY EVENT 11) | | | | |
|------------------------------------|------|---------|----------|-------|
| 1539 | 1540 | 1541 | 1542 | 1543 |
| RELAY # | AREA | TIMEOUT | EVENT ID | COND. |
| | | | | |

| ADDRESS 1544-1548 (RELAY EVENT 12) | | | | |
|------------------------------------|------|---------|----------|-------|
| 1544 | 1545 | 1546 | 1547 | 1548 |
| RELAY # | AREA | TIMEOUT | EVENT ID | COND. |
| | | | | |

| ADDRESS 1549-1553 (RELAY EVENT 13) | | | | |
|------------------------------------|------|---------|----------|-------|
| 1549 | 1550 | 1551 | 1552 | 1553 |
| RELAY # | AREA | TIMEOUT | EVENT ID | COND. |
| | | | | |

| ADDRESS 1554-1558 (RELAY EVENT 14) | | | | |
|------------------------------------|------|---------|----------|-------|
| 1554 | 1555 | 1556 | 1557 | 1558 |
| RELAY # | AREA | TIMEOUT | EVENT ID | COND. |
| | | | | |

| ADDRESS 1559-1563 (RELAY EVENT 15) | | | | |
|------------------------------------|------|---------|----------|-------|
| 1559 | 1560 | 1561 | 1562 | 1563 |
| RELAY # | AREA | TIMEOUT | EVENT ID | COND. |
| | | | | |

| ADDRESS 1564-1568 (RELAY EVENT 16) | | | | |
|------------------------------------|------|---------|----------|-------|
| 1564 | 1565 | 1566 | 1567 | 1568 |
| RELAY # | AREA | TIMEOUT | EVENT ID | COND. |
| | | | | |

| ADDRESS 1569-1573 (RELAY EVENT 17) | | | | |
|------------------------------------|------|---------|----------|-------|
| 1569 | 1570 | 1571 | 1572 | 1573 |
| RELAY # | AREA | TIMEOUT | EVENT ID | COND. |
| | | | | |

| ADDRESS 1574-1578 (RELAY EVENT 18) | | | | |
|------------------------------------|------|---------|----------|-------|
| 1574 | 1575 | 1576 | 1577 | 1578 |
| RELAY # | AREA | TIMEOUT | EVENT ID | COND. |
| | | | | |

| ADDRESS 1579-1583 (RELAY EVENT 19) | | | | |
|------------------------------------|------|---------|----------|-------|
| 1579 | 1580 | 1581 | 1582 | 1583 |
| RELAY # | AREA | TIMEOUT | EVENT ID | COND. |
| | | | | |

| ADDRESS 1584-1588 (RELAY EVENT 20) | | | | |
|------------------------------------|------|---------|----------|-------|
| 1584 | 1585 | 1586 | 1587 | 1588 |
| RELAY # | AREA | TIMEOUT | EVENT ID | COND. |
| | | | | |

| ADDRESS 1589-1593 (RELAY EVENT 21) | | | | |
|------------------------------------|------|---------|----------|-------|
| 1589 | 1590 | 1591 | 1592 | 1593 |
| RELAY # | AREA | TIMEOUT | EVENT ID | COND. |
| | | | | |

| ADDRESS 1594-1598 (RELAY EVENT 22) | | | | |
|------------------------------------|------|---------|----------|-------|
| 1594 | 1595 | 1596 | 1597 | 1598 |
| RELAY # | AREA | TIMEOUT | EVENT ID | COND. |
| | | | | |

| ADDRESS 1599-1603 (RELAY EVENT 23) | | | | |
|------------------------------------|------|---------|----------|-------|
| 1599 | 1600 | 1601 | 1602 | 1603 |
| RELAY # | AREA | TIMEOUT | EVENT ID | COND. |
| | | | | |

| ADDRESS 1604-1608 (RELAY EVENT 24) | | | | |
|------------------------------------|------|---------|----------|-------|
| 1604 | 1605 | 1606 | 1607 | 1608 |
| RELAY # | AREA | TIMEOUT | EVENT ID | COND. |
| | | | | |

| ADDRESS 1609-1613 (RELAY EVENT 25) | | | | |
|------------------------------------|------|---------|----------|-------|
| 1609 | 1610 | 1611 | 1612 | 1613 |
| RELAY # | AREA | TIMEOUT | EVENT ID | COND. |
| | | | | |

| ADDRESS 1614-1618 (RELAY EVENT 26) | | | | |
|------------------------------------|------|---------|----------|-------|
| 1614 | 1615 | 1616 | 1617 | 1618 |
| RELAY # | AREA | TIMEOUT | EVENT ID | COND. |
| | | | | |

| ADDRESS 1619-1623 (RELAY EVENT 27) | | | | |
|------------------------------------|------|---------|----------|-------|
| 1619 | 1620 | 1621 | 1622 | 1623 |
| RELAY # | AREA | TIMEOUT | EVENT ID | COND. |
| | | | | |

| ADDRESS 1624-1628 (RELAY EVENT 28) | | | | |
|------------------------------------|------|---------|----------|-------|
| 1624 | 1625 | 1626 | 1627 | 1628 |
| RELAY # | AREA | TIMEOUT | EVENT ID | COND. |
| | | | | |

| ADDRESS 1629-1633 (RELAY EVENT 29) | | | | |
|------------------------------------|------|---------|----------|-------|
| 1629 | 1630 | 1631 | 1632 | 1633 |
| RELAY # | AREA | TIMEOUT | EVENT ID | COND. |
| | | | | |

| ADDRESS 1634-1638 (RELAY EVENT 30) | | | | |
|------------------------------------|------|---------|----------|-------|
| 1634 | 1635 | 1636 | 1637 | 1638 |
| RELAY # | AREA | TIMEOUT | EVENT ID | COND. |
| | | | | |

| ADDRESS 1639-1643 (RELAY EVENT 31) | | | | |
|------------------------------------|------|---------|----------|-------|
| 1639 | 1640 | 1641 | 1642 | 1643 |
| RELAY # | AREA | TIMEOUT | EVENT ID | COND. |
| | | | | |

| ADDRESS 1644-1648 (RELAY EVENT 32) | | | | |
|------------------------------------|------|---------|----------|-------|
| 1644 | 1645 | 1646 | 1647 | 1648 |
| RELAY # | AREA | TIMEOUT | EVENT ID | COND. |
| | | | | |

TO PROGRAM,
SEE NEXT PAGE



[Default = blank (•) from address 1489-1648].

DIRECT ADDRESS PROGRAM MODE



To program, follow the 5 steps below.

DIRECT ADDRESS PROGRAM MODE

| RELAY EVENT OPTIONS | | | | |
|---------------------|------------------|------------------|------------------|------------------|
| RELAY # | AREA | TIMEOUT | EVENT ID | COND. |
| See Step 1 below | See Step 2 below | See Step 3 below | See Step 4 below | See Step 5 below |

STEP 1

RELAY # OPTIONS: The GEM-P1664 supports 16 external relays from Relay Module RM3008. Multiple events may be "mapped" to each relay, up to a maximum of 32 events.

Select the **relay number** from **Table 1** (next page); enter in corresponding address location.

STEP 2

AREA OPTIONS: Each relay event can be assigned to Area 1, 2, 3 and / or 4.

Select the **area** from **Table 2** (on next page); enter in corresponding address location.

STEP 3

TIMEOUTS: Each relay event can be assigned a timeout depending on Alarm Type option.

If Alarm Type is selected for timeout in minutes or seconds, enter the 3-digit **timeout duration** in corresponding address location. To choose seconds or minutes, see step 5A below. 254 is maximum entry.

STEP 4

EVENT ID CODES: Each relay event can be assigned any of the available event IDs from **Table 4**.


Select 2-digit **Event ID** from **Table 4** (on next page); enter in corresponding address locations (left and right digit).

STEP 5

RELAY EVENT CONDITION OPTIONS: Each relay event can be assigned an alarm type; and an activation condition; also, select a timeout type for each. Enter 5A in left area, enter 5B in right area.

5A. Select **Alarm Type** and **Timeout Type** from **Table 5A** (on next page); enter in corresponding left address location.

 5B. Select **Activation Conditions** from **Table 5B** (on next page); enter in corresponding right address location.



| RELAY EVENT OPTIONS | | | | |
|---------------------|----------------------------------|--|-------------------|--------------------------|
| RELAY # | AREA | TIMEOUT | EVENT ID | COND. |
| See Table 1 below | See Table 2 below (right nibble) | Enter a Time period, in seconds or minutes | See Table 4 below | See Tables 5A & 5B below |

| DATA ENTRY | | RELAY # |
|-------------|--------------|---------|
| Left Nibble | Right Nibble | |
| blank (*) | blank (*) | NONE |
| blank (*) | 1 | 1 |
| blank (*) | 2 | 2 |
| blank (*) | 3 | 3 |
| blank (*) | 4 | 4 |
| blank (*) | 5 | 5 |
| blank (*) | 6 | 6 |
| blank (*) | 7 | 7 |
| blank (*) | 8 | 8 |
| blank (*) | 9 | 9 |
| blank (*) | 0 | 10 |
| blank (*) | B | 11 |
| blank (*) | C | 12 |
| blank (*) | D | 13 |
| blank (*) | E | 14 |
| blank (*) | F | 15 |
| 1 | blank (*) | 16 |

| DATA ENTRY | TURN OFF ON AREA DISARM |
|------------|-------------------------|
| blank (*) | NONE |
| 1 | Area 1 |
| 2 | Area 2 |
| 3 | Area 1 & Area 2 |
| 4 | Area 3 |
| 5 | Area 1 & Area 3 |
| 6 | Area 2 & Area 3 |
| 7 | Areas 1, 2 & 3 |
| 8 | Area 4 |
| 9 | Area 1 & Area 4 |
| 0 | Area 2 & Area 4 |
| B | Areas 1, 2 & 4 |
| C | Areas 3 & 4 |
| D | Areas 1, 3 & 4 |
| E | Areas 2, 3 & 4 |
| F | Areas 1-4 |

| RELAY EVENT ALARM TYPE OPTIONS | | |
|--------------------------------|------------|--------------|
| LEFT DATA ENTRIES | ALARM TYPE | TIMEOUT TYPE |
| blank (*) | Burglary | Minutes |
| 1 | Fire | Minutes |
| 4 | Day Zone | Minutes |
| 8 | Burglary | Seconds |
| 9 | Fire | Seconds |
| C | Day Zone | Seconds |

| RELAY EVENT ACTIVATION CONDITIONS | |
|-----------------------------------|-----------------|
| RIGHT DATA ENTRIES | OPTIONS |
| 1 | Alarm |
| 2 | Restore |
| 3 | Trouble |
| 4 | Trouble Restore |
| 5 | Follow Zone |

| EVENT ID CODES | | |
|----------------|-----------|------------|
| DATA ENTRIES | | OPTION |
| LEFT | RIGHT | |
| blank (*) | blank (*) | Area 1 Arm |
| blank (*) | 1 | Area 2 Arm |
| blank (*) | 2 | Area 3 Arm |
| blank (*) | 3 | Area 4 Arm |
| blank (*) | 8 | Zone 1 |
| blank (*) | 9 | Zone 2 |
| blank (*) | 0 | Zone 3 |
| blank (*) | B | Zone 4 |
| blank (*) | C | Zone 5 |
| blank (*) | D | Zone 6 |
| blank (*) | E | Zone 7 |
| blank (*) | F | Zone 8 |
| 1 | blank (*) | Zone 9 |
| 1 | 1 | Zone 10 |
| 1 | 2 | Zone 11 |
| 1 | 3 | Zone 12 |
| 1 | 4 | Zone 13 |
| 1 | 5 | Zone 14 |
| 1 | 6 | Zone 15 |
| 1 | 7 | Zone 16 |
| 1 | 8 | Zone 17 |
| 1 | 9 | Zone 18 |
| 1 | 0 | Zone 19 |
| 1 | B | Zone 20 |
| 1 | C | Zone 21 |
| 1 | D | Zone 22 |
| 1 | E | Zone 23 |
| 1 | F | Zone 24 |
| 2 | blank (*) | Zone 25 |
| 2 | 1 | Zone 26 |
| 2 | 2 | Zone 27 |
| 2 | 3 | Zone 28 |
| 2 | 4 | Zone 29 |
| 2 | 5 | Zone 30 |
| 2 | 6 | Zone 31 |
| 2 | 7 | Zone 32 |
| 2 | 8 | Zone 33 |
| 2 | 9 | Zone 34 |
| 2 | 0 | Zone 35 |
| 2 | B | Zone 36 |
| 2 | C | Zone 37 |

| EVENT ID CODES | | |
|----------------|-----------|----------------------|
| DATA ENTRIES | | OPTION |
| LEFT | RIGHT | |
| 2 | D | Zone 38 |
| 2 | E | Zone 39 |
| 2 | F | Zone 40 |
| 3 | blank (*) | Zone 41 |
| 3 | 1 | Zone 42 |
| 3 | 2 | Zone 43 |
| 3 | 3 | Zone 44 |
| 3 | 4 | Zone 45 |
| 3 | 5 | Zone 46 |
| 3 | 6 | Zone 47 |
| 3 | 7 | Zone 48 |
| 3 | 8 | Zone 49 |
| 3 | 9 | Zone 50 |
| 3 | 0 | Zone 51 |
| 3 | B | Zone 52 |
| 3 | C | Zone 53 |
| 3 | D | Zone 54 |
| 3 | E | Zone 55 |
| 3 | F | Zone 56 |
| 4 | blank (*) | Zone 57 |
| 4 | 1 | Zone 58 |
| 4 | 2 | Zone 59 |
| 4 | 3 | Zone 60 |
| 4 | 4 | Zone 61 |
| 4 | 5 | Zone 62 |
| 4 | 6 | Zone 63 |
| 4 | 7 | Zone 64 |
| 6 | 8 | Area 1 KP Ambush |
| 6 | 9 | Area 1 KP Panic |
| 6 | 0 | Area 1 KP Fire |
| 6 | B | Area 1 KP Aux |
| 6 | C | Area 1 KP Tamper |
| 6 | D | Area 1 Fail to Open |
| 6 | E | Area 1 Fail to Close |
| 7 | blank (*) | Area 2 KP Ambush |
| 7 | 1 | Area 2 KP Panic |
| 7 | 2 | Area 2 KP Fire |
| 7 | 3 | Area 2 KP Aux |
| 7 | 4 | Area 2 KP Tamper |
| 7 | 5 | Area 2 Fail to Open |
| 7 | 6 | Area 2 Fail to Close |

| EVENT ID CODES | | |
|----------------|-----------|--------------------------------------|
| DATA ENTRIES | | OPTION |
| LEFT | RIGHT | |
| 7 | 8 | Area 3 KP Ambush |
| 7 | 9 | Area 3 KP Panic |
| 7 | 0 | Area 3 KP Fire |
| 7 | B | Area 3 KP Aux |
| 7 | C | Area 3 KP Tamper |
| 7 | D | Area 3 Fail to Open |
| 7 | E | Area 3 Fail to Close |
| 7 | F | Area 4 KP Ambush |
| 8 | 1 | Area 4 KP Panic |
| 8 | 2 | Area 4 KP Fire |
| 8 | 3 | Area 4 KP Aux |
| 8 | 4 | Area 4 KP Tamper |
| 8 | 5 | Area 4 Fail to Open |
| 8 | 6 | Area 4 Fail to Close |
| 0 | 8 | Test Timer |
| 0 | B | Memory Fail |
| 0 | C | Low Battery |
| 0 | D | AC Fail |
| 0 | E | EZM Tamper |
| 0 | F | Alarm Supervisory |
| B | 5 | RF Receiver Trouble (Tamper/Fail) |
| B | 6 | Wireless TX Tamper |
| B | 7 | Wireless TX Trouble (LB/Supervisory) |
| C | 8 | Area 1 Arming AWAY |
| C | 9 | Area 2 Arming AWAY |
| C | 0 | Area 3 Arming AWAY |
| C | B | Area 4 Arming AWAY |
| D | blank (*) | Keypad Fail |
| D | 1 | EZM Fail |
| D | 2 | Quickloader Device Control |
| D | 5 | General System Alarm |
| D | 8 | Area 1 General System Alarm |
| D | 9 | Area 2 General System Alarm |
| D | 0 | Area 3 General System Alarm |
| D | B | Area 4 General System Alarm |
| F | blank (*) | Relay Control Group 1 |
| F | 1 | Relay Control Group 2 |
| F | 8 | Entry Relay Area 1 |
| F | 9 | Entry Relay Area 2 |
| F | 0 | Entry Relay Area 3 |
| F | B | Entry Relay Area 4 |

* NOTE: Keypad Auxiliary is not to be selected for UL Installations.
 NOTE: Keypad Tamper must be enabled in UL installations.

DIRECT ADDRESS PROGRAM MODE




RF RECEIVER & SUPERVISORY TIMER OPTIONS (ADDRESS 2029-2044 & 2056)

| Number of RF Receivers | ADDRESS 2056 | |
|------------------------|--------------|-------------|
| | LEFT DIGIT | RIGHT DIGIT |
| | blank (*) | |


| DATA ENTRIES | RF RECEIVER(S) |
|--------------|----------------|
| blank (*) | None |
| 1 | 1 |
| 2 | 2 |

Default for Number of Receivers depends on Easy Menu Question for RF Transmitters.

RF RECEIVERS: Up to 2 RF Receivers may be programmed.

1. Select the number of receivers from the table shown.
2. Enter number in address location shown.
3. Press  to save.

RF SUPERVISORY TIMERS: RF Supervisory Timers may be programmed for each type of transmitter used. A transmitter will send a transmission every time it is tripped, when there is NO activity, the transmitter sends a status transmission about once an hour. If the receiver does NOT receive ANY signal (a trip or a status) from a transmitter in the time specified for transmitter type, a system trouble "WIRELESS TROUBLE/EO4-NN SERVICE" will be displayed at the keypad.

1. Select timer delay from the table shown. Timers are programmed in increments of 30 minutes each. Valid entries are [3] through [F] (90 minutes-450 minutes).
2. Enter in corresponding address locations below (right nibble).
3. Press  to save.

| RF SUPERVISORY TIMER | RF TRANSMITTER | ADDR | RF SUPERVISORY DELAY TIME (Select timer delay from the table at right) |
|----------------------|--------------------|------|--|
| Type 0 | Window/Door, 2 Pt. | 2029 | |
| Type 1 | Window/Door, 2 Pt. | 2030 | |
| Type 2 | Window/Door, 2 Pt. | 2031 | |
| Type 3 | Window/Door, 2 Pt. | 2032 | |
| Type 4 | RESERVED | | |
| Type 5 | PIR | 2034 | |
| Type 6 | PIR | 2035 | |
| Type 7 | Smoke Detector | 2036 | |
| Type 8 | Smoke Detector | 2037 | |
| Type 9 | RESERVED | | |
| Type A | Dual Tech. | 2039 | |
| Type B | RESERVED | | |
| Type C | Window/Door, 4 Pt. | 2041 | |
| Type D | PIR | 2042 | |
| Type E | Smoke Detector | 2043 | |
| Type F | Napco Glass Break | 2044 | |

| RF SUPERVISORY TIMERS | |
|-----------------------|----------|
| DATA ENTRIES | DELAY |
| 3 | 90 min. |
| 4 | 120 min. |
| 5 | 150 min. |
| 6 | 180 min. |
| 7 | 210 min. |
| 8 | 240 min. |
| 9 | 270 min. |
| 0 | 300 min. |
| B | 330 min. |
| C | 360 min. |
| D | 390 min. |
| E | 420 min. |
| F | 450 min. |

[Default = blank (*) from address 2029-2044]. Default = 8 (240 minutes)

NOTE: These timers apply only to Supervised RF Transmitters (see RF Transmitters in Easy Menu Driven Mode Programming).

DIRECT ADDRESS PROGRAM MODE


CLEAR PROGRAM OPTIONS (ADDRESS 2285 & 2286)

2285 XX H

Clear Dealer Program (Erases Dealer Program)



This erases the dealer program. Use this feature to start a customized default program. Program Data and System Status Memory is erased where Scheduled Data and Zone Descriptions are maintained.

Access address 2285, then press . Data entry is not allowed.


NOTE: Enter Easy Menu Driven Program Mode to program system again.

2286 XX H

Cold Start (Erases Entire Program)



This erases the entire program including Dealer Program by erasing Program Data, Zone Description Data and System Status Data (similar to a new panel).







Access address 2286, then press . Data entry is not allowed.

NOTE: Some features (schedules) can only be programmed again with the Downloading Software. If power fails, time and date restarts at 00:00:00 and a date of 01-01-04 (January 1, 2004).

USER PROGRAM MODE

PRELIMINARY INFORMATION

The User Program Mode is covered in detail in the operating instructions for the keypad in use.

-  The Program Mode cannot be accessed while the communicator is transmitting except during the first three minutes after power-up.
-  After entering codes or data, press the save  button. *Data will not be stored into memory unless this button is pressed.*
-  If the keypad is in the Program Mode and no activity is detected for longer than 4 minutes, a steady tone will sound.
-  Press the  button to silence the sounder and exit the User Program Mode.

NOTE: For ease of programming, it is recommended that a GEM K1CA (or GEM-RP1CAe2) be used. See Keypad Configuration Mode.

If a GEM-RP2ASe2/GEM-K2AS keypad is used, see WI1423.

ACCESSING USER PROGRAM MODE

1. Press **MENU**
 ← New Panel (Default User Code = 123) →
 Existing Panel (Any Code with User Program Option Enabled)

 
2. Press **Until "ACTIVATE PROGRAM Y/N" appears on LCD screen.**

3. Press **To Enter User Program Mode**

4. Press **To Exit User Program Mode when finished**

DIRECT ADDRESS PROGRAM MODE

USER CODES



GEM-K1CAe2 Keypad (Direct Entry)

Up to 64 User Codes may be programmed.
NOTE: In this mode, only the code is programmable; the accompanying Area Options must be programmed in the Dealer Program Mode (see page 5).

Use the button to place the cursor over the User Number.

Enter a User Number (01-8) using the number buttons. The cursor will then advance to the User Code and read the existing code, if any.

Enter the new User Code using the number buttons (0-9). If an old code is displayed, program over it. To erase the digit at the cursor, press .

Press the button to save the code in memory.

Repeat this procedure for each user. To proceed to Zone-Description programming, press the NEXT/YES button or the PRIOR/NO button.

To Program User Codes

 
 
 

1. Set Cursor Position using the button.
2. Enter 2-digit User Number (01-64) directly using number buttons (0-9).
3. Enter Code (1-6 digits) directly using number buttons (0-9).
4. Press the button to save each code.

 

 
 
 
 
 

 
 
 
 


 
 
 

 

 
NOTE: Press button to clear character at cursor.
 To continue press or button.


Programming User Codes with GEM-K1CA Keypad


ZONE DESCRIPTIONS (GEM-RP1CAE2 / GEM-K1CA KEYPADS)

01-





Enter an identifying description for each zone. Characters are selected by pressing keypad buttons multiple times, "Cell Phone" style. Buttons  through  plus  and  are used, as per the following table:

| PRESS: | CHARACTERS DISPLAYED IN SEQUENCE | HOLD  AND PRESS: | CHARACTERS DISPLAYED IN SEQUENCE |
|---|----------------------------------|---|----------------------------------|
|  | ABC1 |  | abc1 |
|  | DEF2 |  | def2 |
|  | GHI3 |  | ghi3 |
|  | JKL4 |  | jkl4 |
|  | MNO5 |  | mno5 |
|  | PQR6 |  | pqr6 |
|  | STU7 |  | stu7 |
|  | VWX8 |  | vwx8 |
|  | YZ90 |  | yz90 |
|  | (SPACE)•- . () , / : ? # |  | (Reserved) |



 

Press  to move cursor right.


Press  to move cursor left.

 Notes:

1. After releasing the number button for 2 seconds, the character will be accepted and the cursor advanced to the right.
2. After releasing the number button, if a new number button is pressed before the 2 second window expires, the current character will be accepted and the cursor automatically advanced to the right. The first of the 4 characters of this new number button will be displayed.
3. To erase an existing entry, use  or  to move the cursor below the character to be changed. Enter a new character to overwrite the old, or press zero to delete the character.
4. To generate lowercase characters, the  button must be pressed and held down while pressing the number button. If the  button is released during the 2 second window, the current character will change to uppercase.

 Press  to save.


To advance to the next zone (or to any other zone), move the cursor to the displayed zone number (i.e., "01") using  and . Change the zone number using keys  through . Enter two digits for the zone number (after entering the first digit, the cursor will automatically advance to the second digit). When the second zone number digit is entered, the cursor will automatically advance to the right, allowing the description locations to be entered.

Always press  to save each zone description.

Enter Date
 < / / >

(Direct Entry)


Enter Date (Press the  button to set cursor.)

Enter the current date in the format MM/DD/YY, where MM = the month (01–12); DD=the day (01–31); and YY=the year. Press  to save. Press NEXT button to proceed.

Enter Time
 < : >

(Direct Entry)

Enter Time (Press the  button to set cursor.)

Enter the current time in the format HH:MMA/P, where HH=hours (01–12); MM=minutes (00–59). Select AM or PM by pressing any number button, then press  once again to save.

NOTE: To enter the date and time, GEM-RP1CAe2/GEM-K1CA keypad (version 9A or greater) must be used and "Enable Keypad Time/Date Display" (Address 1420) must be enabled.



KEYPAD CONFIGURATION MODE

This section will focus on configuring the GEM-RP1CAe2/GEM-K1CA Keypads. If there is more than one keypad in the system, we recommend that either a GEM-RP1CAe2 or a GEM-K1CA keypad be used for programming.

KEYPAD INSTALLATION

Several types of keypads may be used with the GEM-P1664: the GEM-RP1CAe2/GEM-K1CA, the GEM-RP2ASe2/GEM-K2AS, the GEM-RP3DGTL/GEM-K3DGTL, and the GEM-RP4RFC/GEM-K4RF series (see WI1423). Each must be assigned an address number (1–7) and each requires its own configuration procedure (see CONFIGURING THE KEYPADS, which follows, and DIRECT ADDRESS KEYPAD AREA OPTIONS). At least 1 keypad must be used; only 1 is required for a single-area Commercial Burglary installation.

GEM-RP1CAe2/GEM-K1CA - is a 2-line combination fire/burglary/access keypad capable of supporting 4 EZM zones and a PGM output. The GEM-RP1CAe2 or GEM-K1CA is recommended for programming. See "Important Note" on page 2 for more information regarding the buttons on the GEM-RP1CAe2/GEM-K1CA keypads.

CONFIGURING THE KEYPADS

A total of up to 7 keypads may be connected to the panel. GEM-RP1CAe2/GEM-K1CA, GEM-RP2ASe2/GEM-K2AS, GEM-RP3DGTL/GEM-K3DGTL, and GEM-RP4RFC/GEM-K4RF series keypads may be intermixed but require different configuration procedures, as described below and in WI1423.

Configuring the GEM-RP1CAe2/GEM-K1CA Keypad

Each GEM-RP1CAe2/GEM-K1CA keypad must be configured for (a) keypad tactile beep; (b) entry sounder; (c) keypad address; (d) compatibility number; (e) EZM address; and (f) zone response.

To enter the Keypad Configuration Mode:

1. Move jumper JP1 (located in the center of the control panel board) from Pins 1-2 (top two) to Pins 2-3 (bottom two). **NOTE:** See Wiring Diagram at the end of this manual.
2. After about 15 seconds, the display will read "XX OUT OF SYSTEM", where XX indicates the keypad address.
3. Press and proceed as follows. (Repeat the following procedure for all keypads).

NORMAL

KEYPAD
CONFIGURE

Keypad Beep

ON

Keypad Tactile Beep

Upon entering the Keypad Configuration Mode, "KEYPAD BEEP ON" will be displayed, indicating that the tactile beep, which sounds when any button is pressed, is on. To turn off the tactile beep, press the button (the button will toggle the tactile beep on and off). Press to continue or press to exit.

Entry Sounder

ON

Entry Sounder

To turn off the keypad entry sounder during entry time, press (the button will toggle the entry sounder on and off). Press to continue or press to exit.

Keypad Address

01

Keypad Address

If more than one keypad is installed, each must be assigned a unique keypad address (that is, no two keypads may be numbered alike):

Keypads must be numbered consecutively (missing numbers are not permitted)



To assign the keypad number, proceed as follows:

1. Enter the assigned keypad number 01–07, then press to save. A valid number will be acknowledged by a short beep; an invalid number will be rejected by a long beep.
2. Press to continue or press to exit.

| |
|------------------------------|
| <p>New Compat # 0000</p> |
|------------------------------|

Compatibility Number (Not Applicable)



THIS FEATURE IS NOT COMPATIBLE WITH THE GEM-P1664 CONTROL PANEL. **DO NOT CHANGE THIS SETTING.**

Press the  button to continue or press the  button to exit.

| |
|---------------------------|
| <p>EZM Address 01</p> |
|---------------------------|

EZM Address

The keypad's internal EZM (Expansion Zone Module) may be utilized to provide four additional wired zones. Whether used alone or in conjunction with optional GEM-EZM series modules or other keypad EZMs, it must be assigned a unique address (or Group number, see Keypad Programming Workbook) similar to its keypad address. If no other EZMs are to be used,


designate the keypad as Group "01" at the "EZM ADDRESS 00" display. In multiple-EZM systems, enter an assigned group number "01" through "14". (Each EZM must have a unique assigned group number, starting with "01" and proceeding consecutively.) Press the  button to continue or press the  button to exit.

| |
|-----------------------------|
| <p>Zone Response 00</p> |
|-----------------------------|


Zone Response



The normal loop response of each keypad expansion zone is 750mS, however the response time of any zone can be reduced to 50mS as follows.

1. Of the following, circle the number(s) in parentheses associated with the zone(s) to be changed: Zone 1=(1); Zone 2=(2); Zone 3=(4); Zone 4=(8)
2. Add up the circled numbers.

3. At the keypad, enter the sum as a two-digit number "01" through "15" on the display, then press .

Example. Change Zones 2, 3 and 4 to 50mS response.



1. Circle numbers for Zones 2, 3 and 4: (2), (4) and (8).
2. Add up the circled numbers: 2 + 4 + 8 = 14.
3. Enter "14" at the keypad, then press the  button.

Press the  button to continue or press the  button to exit.

| |
|--|
| <p>Program Control Message # ?</p> |
|--|

Program Control Message (Not Applicable)

THIS FEATURE IS NOT COMPATIBLE WITH THE GEM-P1664 CONTROL PANEL.

Press the  button to continue (the display will loop back through selections, for changes) or press the  button to exit the Keypad Configuration Mode (display will read "01 OUT OF SYSTEM"). Then replace Jumper JP1 across Pins 1–2 (top two).

EASY MENU PROGRAMMING WORKSHEET - 2 OF 4

RF Transmitter Points:

| XMTR # | ZONE # | RF ID (printed on xmtr box) | | | | CHECK SUM | POINT # |
|--------|--------|--------------------------------|--|--|--|-----------|---------|
| 1 | | | | | | | |
| 2 | | | | | | | |
| 3 | | | | | | | |
| 4 | | | | | | | |
| 5 | | | | | | | |
| 6 | | | | | | | |
| 7 | | | | | | | |
| 8 | | | | | | | |
| 9 | | | | | | | |
| 10 | | | | | | | |
| 11 | | | | | | | |
| 12 | | | | | | | |
| 13 | | | | | | | |
| 14 | | | | | | | |
| 15 | | | | | | | |
| 16 | | | | | | | |

| XMTR # | ZONE # | RF ID (printed on xmtr box) | | | | CHECK SUM | POINT # |
|--------|--------|--------------------------------|--|--|--|-----------|---------|
| 17 | | | | | | | |
| 18 | | | | | | | |
| 19 | | | | | | | |
| 20 | | | | | | | |
| 21 | | | | | | | |
| 22 | | | | | | | |
| 23 | | | | | | | |
| 24 | | | | | | | |
| 25 | | | | | | | |
| 26 | | | | | | | |
| 27 | | | | | | | |
| 28 | | | | | | | |
| 29 | | | | | | | |
| 30 | | | | | | | |
| 31 | | | | | | | |
| 32 | | | | | | | |

| XMTR # | ZONE # | RF ID (printed on xmtr box) | | | | CHECK SUM | POINT # |
|--------|--------|--------------------------------|--|--|--|-----------|---------|
| 33 | | | | | | | |
| 34 | | | | | | | |
| 35 | | | | | | | |
| 36 | | | | | | | |
| 37 | | | | | | | |
| 38 | | | | | | | |
| 39 | | | | | | | |
| 40 | | | | | | | |
| 41 | | | | | | | |
| 42 | | | | | | | |
| 43 | | | | | | | |
| 44 | | | | | | | |
| 45 | | | | | | | |
| 46 | | | | | | | |
| 47 | | | | | | | |
| 48 | | | | | | | |

| XMTR # | ZONE # | RF ID (printed on xmtr box) | | | | CHECK SUM | POINT # |
|--------|--------|--------------------------------|--|--|--|-----------|---------|
| 49 | | | | | | | |
| 50 | | | | | | | |
| 51 | | | | | | | |
| 52 | | | | | | | |
| 53 | | | | | | | |
| 54 | | | | | | | |
| 55 | | | | | | | |
| 56 | | | | | | | |
| 57 | | | | | | | |
| 58 | | | | | | | |
| 59 | | | | | | | |
| 60 | | | | | | | |
| 61 | | | | | | | |
| 62 | | | | | | | |
| 63 | | | | | | | |
| 64 | | | | | | | |

Key Fob Transmitters:

| KEY FOB # | Area | RF ID (printed on xmtr box) | | | | CHECK SUM | OPTION 1 | OPTION 2 |
|-----------|------|--------------------------------|--|--|--|-----------|----------|----------|
| 1 | | | | | | | | |
| 2 | | | | | | | | |
| 3 | | | | | | | | |
| 4 | | | | | | | | |
| 5 | | | | | | | | |
| 6 | | | | | | | | |
| 7 | | | | | | | | |
| 8 | | | | | | | | |




EASY MENU PROGRAMMING WORKSHEET - 3 OF 4

Zone Descriptions 1-32

| ZN # | CHARACTERS AVAILABLE (See below) | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
|------|----------------------------------|---|---|---|---|---|---|---|---|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|--|
| | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 | 10 | 11 | 12 | 13 | 14 | 15 | 16 | 17 | 18 | 19 | 20 | 21 | 22 | 23 | 24 | 25 | 26 | 27 | 28 | 29 | |
| 1 | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 2 | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 3 | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 4 | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 5 | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 6 | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 7 | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 8 | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 9 | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 10 | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 11 | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 12 | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 13 | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 14 | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 15 | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 16 | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 17 | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 18 | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 19 | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 20 | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 21 | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 22 | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 23 | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 24 | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 25 | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 26 | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 27 | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 28 | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 29 | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 30 | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 31 | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 32 | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |

Characters Available for Zone Descriptions
 !@#\$%^&*()_+!|{|}[]`.,.<>?
 1234567890
 abcdefghijklmnopqrstuvwxyz
 ABCDEFGHIJKLMNOPQRSTUVWXYZ

Dealer Code:

For Zones 33-64,
see next page


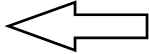
EASY MENU PROGRAMMING WORKSHEET - 4 OF 4

Zone Descriptions 33-64

| ZN # | CHARACTERS AVAILABLE (See below) | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
|------|----------------------------------|---|---|---|---|---|---|---|---|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|
| | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 | 10 | 11 | 12 | 13 | 14 | 15 | 16 | 17 | 18 | 19 | 20 | 21 | 22 | 23 | 24 | 25 | 26 | 27 | 28 | 29 |
| 33 | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 34 | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 35 | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 36 | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 37 | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 38 | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 39 | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 40 | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 41 | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 42 | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 43 | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 44 | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 45 | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 46 | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 47 | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 48 | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 49 | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 50 | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 51 | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 52 | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 53 | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 54 | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 55 | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 56 | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 57 | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 58 | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 59 | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 60 | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 61 | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 62 | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 63 | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 64 | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |

Characters Available for Zone Descriptions

!@#\$%^&*()_+!|{|}[]`.,.<>?
 1 2 3 4 5 6 7 8 9 0
 a b c d e f g h i j k l m n o p q r s t u v w x y z
 A B C D E F G H I J K L M N O P Q R S T U V W X Y

For Zones 1-32,
 see previous
 page

Dealer Code:



ALPHABETICAL INDEX

| | |
|---|----|
| 1400HZ HANDSHAKE/KISSOFF, ADDRESS 0461..... | 20 |
| 1400HZ HANDSHAKE/KISSOFF, ADDRESS 0483..... | 20 |
| 1400HZ HANDSHAKE/KISSOFF, ADDRESS 0505..... | 20 |
| 2300HZ HANDSHAKE/KISSOFF, ADDRESS 0461..... | 20 |
| 2300HZ HANDSHAKE/KISSOFF, ADDRESS 0483..... | 20 |
| 2300HZ HANDSHAKE/KISSOFF, ADDRESS 0505..... | 20 |
| 24 HOUR AUXILIARY (MODEM CODE)..... | 23 |
| 24 HOUR ZONES IN AREA 1..... | 6 |
| 24-HOUR ZONE (ZONE OPTION), ADDRESS 0909, 0973..... | 29 |
| 24-HOUR ZONE (ZONE OPTION), ADDRESS 1037, 1101..... | 30 |
| 24-HOUR ZONE (ZONE OPTION), ADDRESS 1165, 1229..... | 31 |
| 24-HOUR ZONE (ZONE OPTION), ADDRESS 1293, 1357..... | 32 |
| 2-WIRE FIRE ZONES IN AREA 1..... | 6 |
| 2-WIRE SMOKE DETECTORS (ZONE OPTION), ADDRESS 0942..... | 29 |
| 2-WIRE SMOKE DETECTORS (ZONE OPTION), ADDRESS 1198, 1262..... | 31 |
| 3/1 WITH EXTENDED RESTORES, ADDRESS 0461..... | 20 |
| 3/1 WITH EXTENDED RESTORES, ADDRESS 0483..... | 20 |
| 3/1 WITH EXTENDED RESTORES, ADDRESS 0505..... | 20 |
| 50MS LOOP RESPONSE (ZONE OPTION), ADDRESS 0900, 0964..... | 29 |
| 50MS LOOP RESPONSE ZONES..... | 7 |
| ABORT DELAY (ZONE OPTION), ADDRESS 0920, 0984..... | 29 |
| ABORT DELAY (ZONE OPTION), ADDRESS 1048, 1112..... | 30 |
| ABORT DELAY (ZONE OPTION), ADDRESS 1176, 1240..... | 31 |
| ABORT DELAY (ZONE OPTION), ADDRESS 1304, 1368..... | 32 |
| ABORT DELAY, ADDRESS 1417..... | 15 |
| AC FAIL REPORT DELAY, ADDRESS 1419..... | 15 |
| ACCESS | |
| AREA OPTION..... | 9 |
| ACCESS CONTROL ON PGM2 OUTPUT, ADDRESS 1421..... | 19 |
| ACCESSING DEALER PROGRAM MODE..... | 5 |
| ACTIVATE DOWNLOAD FUNCTION..... | 4 |
| ADDRESS DISPLAYS | |
| TYPES..... | 11 |
| ADDRESS MODE DISPLAYS..... | 11 |
| ADEMCO POINT ID (CS RECEIVER 1 FORMAT)..... | 20 |
| ADEMCO SLOW, SILENT KNIGHT SLOW (CS RECEIVER 1 FORMAT)..... | 20 |
| ALARM ON DAY ZONE (ZONE OPTION), ADDRESS 0924, 0988..... | 29 |
| ALARM ON DAY ZONE (ZONE OPTION), ADDRESS 1052, 1116..... | 30 |
| ALARM ON DAY ZONE (ZONE OPTION), ADDRESS 1180, 1244..... | 31 |
| ALARM ON DAY ZONE (ZONE OPTION), ADDRESS 1308, 1372..... | 32 |
| ALARM OUTPUT (ZONE OPTION), ADDRESS 0910, 0974..... | 29 |
| ALARM OUTPUT (ZONE OPTION), ADDRESS 1038, 1102..... | 30 |
| ALARM OUTPUT (ZONE OPTION), ADDRESS 1166, 1230..... | 31 |
| ALARM OUTPUT (ZONE OPTION), ADDRESS 1294, 1358..... | 32 |
| ALARM OUTPUT SUPERV., ADDRESS 0689..... | 22 |
| ALARM OUTPUT TIMEOUT, ADDRESS 1414..... | 16 |
| ALARM OUTPUT, ADDRESS 0836..... | 17 |
| ALARM OUTPUT, ADDRESS 0857..... | 17 |
| ALARM OUTPUT, ADDRESS 0865..... | 17 |
| ALARM OUTPUT, ADDRESS 0873..... | 18 |
| ALARM OUTPUT, ADDRESS 0881..... | 18 |
| ALARM RESTORE 1 (ZONE OPTION), ADDRESS 0926, 0990..... | 29 |
| ALARM RESTORE 1 (ZONE OPTION), ADDRESS 1054, 1118..... | 30 |
| ALARM RESTORE 1 (ZONE OPTION), ADDRESS 1182, 1246..... | 31 |
| ALARM RESTORE 1 (ZONE OPTION), ADDRESS 1310, 1374..... | 32 |
| ALARM RESTORE 3 (ZONE OPTION), ADDRESS 0930, 0994..... | 29 |
| ALARM RESTORE 3 (ZONE OPTION), ADDRESS 1058, 1122..... | 30 |
| ALARM RESTORE 3 (ZONE OPTION), ADDRESS 1186, 1250..... | 31 |
| ALARM RESTORE 3 (ZONE OPTION), ADDRESS 1314, 1378..... | 32 |
| ALARM RESTORE, ADDRESS 0670..... | 22 |
| ALARM TELCO 1 (ZONE OPTION), ADDRESS 0925, 0989..... | 29 |
| ALARM TELCO 1 (ZONE OPTION), ADDRESS 1053, 1117..... | 30 |
| ALARM TELCO 1 (ZONE OPTION), ADDRESS 1181, 1245..... | 31 |
| ALARM TELCO 1 (ZONE OPTION), ADDRESS 1309, 1373..... | 32 |
| ALARM TELCO 3 (ZONE OPTION), ADDRESS 0929, 0993..... | 29 |
| ALARM TELCO 3 (ZONE OPTION), ADDRESS 1057, 1121..... | 30 |
| ALARM TELCO 3 (ZONE OPTION), ADDRESS 1185, 1249..... | 31 |
| ALARM TELCO 3 (ZONE OPTION), ADDRESS 1313, 1377..... | 32 |
| AMBUSH | |
| AREA OPTION..... | 9 |
| AMBUSH, ADDRESS 0698..... | 22 |
| AREA ARMING OPTIONS (ADDRESS 1469-1472)..... | 25 |
| AREA BELL CONTROL OPTIONS (ADDRESS 1473-1488)..... | 26 |
| ARM ONLY | |
| AREA OPTION..... | 9 |
| ARM/DISARM | |
| AREA OPTION..... | 9 |
| AUTO BELL TEST ON ARMING, ADDRESS 1421..... | 19 |
| AUTO BYPASS RE-ENTRY ZONES..... | 7 |
| AUTO RESET (ZONE OPTION), ADDRESS 0917, 0981..... | 29 |
| AUTO RESET (ZONE OPTION), ADDRESS 1045, 1109..... | 30 |
| AUTO RESET (ZONE OPTION), ADDRESS 1173, 1237..... | 31 |
| AUTO RESET (ZONE OPTION), ADDRESS 1301, 1365..... | 32 |
| AUTO RESET AFTER BURGLARY OUTPUT TIMEOUT, ADDRESS 1421..... | 19 |
| AUTO-BYPASS (ZONE OPTION), ADDRESS 0903, 0967..... | 29 |
| AUTO-BYPASS (ZONE OPTION), ADDRESS 1031, 1095..... | 30 |
| AUTO-BYPASS (ZONE OPTION), ADDRESS 1159, 1223..... | 31 |
| AUTO-BYPASS (ZONE OPTION), ADDRESS 1287, 1351..... | 32 |
| AUTO-BYPASS RE-ENTRY (ZONE OPTION), ADDRESS 0906, 0970..... | 29 |
| AUTO-BYPASS RE-ENTRY (ZONE OPTION), ADDRESS 1034, 1098..... | 30 |
| AUTO-BYPASS RE-ENTRY (ZONE OPTION), ADDRESS 1162, 1226..... | 31 |
| AUTO-BYPASS RE-ENTRY (ZONE OPTION), ADDRESS 1290, 1354..... | 32 |
| AUTOMATIC INTERIOR BYPASS/EASY EXIT, ADDRESS 1424..... | 19 |
| AUX OUTPUT ACTIVATED ON ALARM ZONES..... | 7 |
| AUXILIARY ALARM (MODEM CODE)..... | 23 |
| AUXILIARY, ADDRESS 0701..... | 22 |
| BACKUP REPORT ON TELCO 1 & 2, ADDRESS 0788..... | 22 |
| BINARY (BIT) FORMAT EXAMPLE..... | 11 |
| BIT FORMAT | |
| EXAMPLE..... | 11 |
| BURGLARY (MODEM CODE)..... | 23 |
| BURGLARY OUTPUT TURNS OFF UPON DISARM, ADDRESS 1473..... | 26 |
| BURGLARY OUTPUT TURNS OFF UPON DISARM, ADDRESS 1474..... | 26 |
| BURGLARY OUTPUT TURNS OFF UPON DISARM, ADDRESS 1475..... | 26 |
| BURGLARY OUTPUT TURNS OFF UPON DISARM, ADDRESS 1476..... | 26 |
| BYPASS ENABLE | |
| AREA OPTION..... | 9 |
| CALLBACK METHOD..... | 4 |
| CALLBACK TELEPHONE NUMBER, ADDRESS 0526-0545..... | 16 |
| CANCEL A CODE..... | 9 |
| CANCEL NEXT TEST TIMER ON ANY REPORT, ADDRESS 0788..... | 22 |
| CANCEL, ADDRESS 0681..... | 22 |
| CENTRAL STATION RECEIVER 1 ACCOUNT NUMBER..... | 8 |
| CENTRAL STATION RECEIVER 1 FORMAT..... | 8 |
| CENTRAL STATION RECEIVER 1 TELEPHONE NUMBER..... | 8 |
| CHANGE PULSE OUTPUT TO TEMPORAL OUTPUT, ADDRESS 1422..... | 19 |
| CHANGING OR CANCELING A CODE..... | 9 |
| CHIME (ZONE OPTION), ADDRESS 0919, 0983..... | 29 |
| CHIME (ZONE OPTION), ADDRESS 1047, 1111..... | 30 |
| CHIME (ZONE OPTION), ADDRESS 1175, 1239..... | 31 |
| CHIME (ZONE OPTION), ADDRESS 1303, 1367..... | 32 |
| CHIME 2 (ZONE OPTION), ADDRESS 0952, 1016..... | 29 |
| CHIME 2 (ZONE OPTION), ADDRESS 1080, 1144..... | 30 |
| CHIME 2 (ZONE OPTION), ADDRESS 1208, 1272..... | 31 |

ALPHABETICAL INDEX (CONT'D)

| | |
|---|---|
| <p>CHIME 2 (ZONE OPTION), ADDRESS 1336, 1400..... 32</p> <p>CHIME 2 ZONES IN AREA 1..... 7</p> <p>CHIME TIME, ADDRESS 1418..... 15</p> <p>CHIME ZONES IN AREA 1..... 7</p> <p>CHIRP OUTPUT ON KEYFOB ARM/DISARM, ADDRESS 1422..... 19</p> <p>CLEAR DEALER PROGRAM EASY MENU..... 10</p> <p>CLEAR DEALER PROGRAM, ADDRESS 2285..... 37</p> <p>CLOSING REPORT..... 24</p> <p>CLOSING REPORT ONLY ON CONDITIONAL CLOSE, ADDRESS 1420..... 19</p> <p>CLOSING, ADDRESS 0678..... 22</p> <p>COLD START EASY MENU..... 10</p> <p>COLD START, ADDRESS 2286..... 37</p> <p>COMPATIBILITY NUMBER..... 41</p> <p>CONDITIONAL CLOSE, ADDRESS 0680..... 22</p> <p>CONFIGURING THE KEYPADS..... 40</p> <p>CONTROL PANEL FIRMWARE VERSION..... 2</p> <p>CREATE A CUSTOM PROGRAM..... 6</p> <p>CS AREA & SYSTEM REPORTING OPTIONS (ADDRESS 0785, 0786 & 0788) 22</p> <p>CS RECEIVER 1 FORMAT, ADDRESS 0460..... 20</p> <p>CS RECEIVER 1 TELEPHONE NUMBER, ADDRESS 0462-0481..... 20</p> <p>CS RECEIVER 2 FORMAT, ADDRESS 0482..... 20</p> <p>CS RECEIVER 2 TELEPHONE NUMBER, ADDRESS 0484-0503..... 20</p> <p>CS RECEIVER 3 FORMAT, ADDRESS 0504..... 20</p> <p>CS RECEIVER 3 TELEPHONE NUMBER, ADDRESS 0506-0525..... 20</p> <p>CS RECEIVER OPTIONS - TELCO 1, ADDRESS 0461..... 20</p> <p>CS RECEIVER OPTIONS - TELCO 2, ADDRESS 0483..... 20</p> <p>CS RECEIVER OPTIONS - TELCO 3, ADDRESS 0505..... 20</p> <p>CS SUBSCRIBER ID OPTIONS (ADDRESS 0560-0667)..... 21</p> <p>CS SYSTEM REPORT OPTIONS, ADDRESS 0788..... 22</p> <p>CS SYSTEM REPORTING CODES, ADDRESS 0683-0708..... 22</p> <p>CS TELCO SUBSCRIBER ID NUMBERS..... 21</p> <p>CS USER REPORTING OPTIONS (ADDRESS 0800-0835)..... 24</p> <p>CS ZONE REPORTING OPTIONS (ADDRESS 0720-0783)..... 23</p> <p>CURRENT TIME..... 10</p> <p>CUSTOM DEFAULT PROGRAM..... 5</p> <p>CUSTOMIZING A DEFAULT PROGRAM..... 5</p> <p>DATE..... 10</p> <p>DAY ZONE OPEN (ZONE OPTION), ADDRESS 0922, 0986..... 29</p> <p>DAY ZONE OPEN (ZONE OPTION), ADDRESS 1050, 1114..... 30</p> <p>DAY ZONE OPEN (ZONE OPTION), ADDRESS 1178, 1242..... 31</p> <p>DAY ZONE OPEN (ZONE OPTION), ADDRESS 1306, 1370..... 32</p> <p>DAY ZONE SHORT (ZONE OPTION), ADDRESS 0923, 0987..... 29</p> <p>DAY ZONE SHORT (ZONE OPTION), ADDRESS 1051, 1115..... 30</p> <p>DAY ZONE SHORT (ZONE OPTION), ADDRESS 1179, 1243..... 31</p> <p>DAY ZONE SHORT (ZONE OPTION), ADDRESS 1307, 1371..... 32</p> <p>DEALER CODE..... 10</p> <p> DEFAULT..... 5</p> <p>DEALER PROGRAM - PRELIMINARY INFORMATION..... 5</p> <p>DEALER PROGRAM MODE..... 4</p> <p>DEALER PROGRAM MODE ACCESSING..... 5</p> <p>DECIMAL FORMAT EXAMPLE..... 12</p> <p>DECIMAL FORMAT EXAMPLE..... 12</p> <p>DEFAULT DEALER CODE..... 5</p> <p>DIGITAL DIALER RPT ENTER /EXIT TEST MODE, ADDRESS 2053..... 19</p> <p>DIRECT ADDRESS OVERVIEW..... 11</p> <p>DIRECT ADDRESS PROGRAM MODE..... 4</p> <p>DIRECT ADDRESS PROGRAM MODE..... 11</p> <p>DISABLE [ON/OFF] AS EASY EXIT, ADDRESS 2051..... 19</p> | <p>DISABLE 2ND CALL ANS. MACHINE OVERRIDE, ADDRESS 1424..... 19</p> <p>DISABLE AUTO DIAL TONE DETECT, ADDRESS 0788..... 22</p> <p>DISABLE CALL WAITING ON 1ST ATTEMPT, ADDRESS 2053..... 19</p> <p>DISABLE CALLBACK DOWNLOAD, ADDRESS 1422..... 19</p> <p>DISABLE CLOSING REPORTS, ADDRESS 0786..... 22</p> <p>DISABLE CODE REQUIRED FOR EZ BYPASS, ADDRESS 1424..... 19</p> <p>DISABLE KEYPAD FUNCTION MODE DOWNLOAD, ADDRESS 1422..... 19</p> <p>DISABLE KEYPAD INSTANT MODE, ADDRESS 1421..... 19</p> <p>DISABLE OPENING REPORTS, ADDRESS 0785..... 22</p> <p>DISABLE SYSTEM TROUBLE AUDIBLE TIMEOUT, ADDRESS 2051..... 19</p> <p>DISABLE WAIT FOR HANDSHAKE ON TRANSMIT, ADDRESS 0788..... 22</p> <p>DISABLE WAIT FOR SILENCE (PAGER FORMAT), ADDRESS 0788..... 22</p> <p>DISABLE ZONE FAULT SCROLLING, ADDRESS 1420..... 19</p> <p>DISABLED AREA OPTION..... 9</p> <p>DON'T CLEAR PGM2 OUTPUT WITH DISARM, ADDRESS 1424..... 19</p> <p>DOWNLOAD/CALLBACK OPTIONS (ADDRESS 2059 & 0526-0545)..... 16</p> <p>DOWNLOADING FROM A COMPUTER..... 4</p> <p>EASY MENU DRIVEN PROGRAM MODE..... 5</p> <p>EASY MENU PROGRAMMING WORKSHEET..... 42, 43, 44, 45</p> <p>EASY MENU-DRIVEN PROGRAM..... 4</p> <p>ENABLE "K SERIES" STYLE KEYPADS, ADDRESS 2051..... 19</p> <p>ENABLE ALARM OUTPUT ON TELCO FAIL ONLY WHEN ARMED, ADDRESS 1423..... 19</p> <p>ENABLE AUTOARM IF NOT CLOSED AT END OF WINDOW, ADDRESS 1420 19</p> <p>ENABLE BURG OUTPUT CHIRP ON KEYFOB..... 8</p> <p>ENABLE CANCEL REPORT TO TELCO 3, ADDRESS 2051..... 19</p> <p>ENABLE CP-01 EGRESS TONES ONLY, ADDRESS 2053..... 19</p> <p>ENABLE CP-01 LIMITS, ADDRESS 2053..... 19</p> <p>ENABLE GEM-PRINT MODULE, ADDRESS 2051..... 19</p> <p>ENABLE GLOBAL AMBUSH CODE, ADDRESS 1422..... 19</p> <p>ENABLE KEYPAD 1 ONLY PROGRAMMING, ADDRESS 2053..... 19</p> <p>ENABLE KEYPAD OPTIONS, ADDRESS 1440-1446..... 27</p> <p>ENABLE KEYPAD SET TIME/DATE MESSAGE, ADDRESS 2051..... 19</p> <p>ENABLE KEYPAD TIME/DATE DISPLAY, ADDRESS 1420..... 19</p> <p>ENABLE KEYPAD TYPE & ACTIVATION, ADDRESS 1425-1431..... 27</p> <p>ENABLE LINE-FAULT TEST, ADDRESS 1423..... 19</p> <p>ENABLE LOCAL ALARM ON FIRST ZONE AND TRIP, ADDRESS 1421..... 19</p> <p>ENABLE MANAGER'S MODE, ADDRESS 1421..... 19</p> <p>ENABLE NO EOLR ZONES..... 7</p> <p>ENABLE RESIDENTIAL FIRE, ADDRESS 1422..... 19</p> <p>ENABLE SIA CP-01 FEATURES..... 8</p> <p>ENABLE TCP/IP AES RPT, ADDRESS 0461..... 20</p> <p>ENABLE TCP/IP AES RPT, ADDRESS 0483..... 20</p> <p>ENABLE TCP/IP AES RPT, ADDRESS 0505..... 20</p> <p>ENABLE TCP/IP COMMUNICATIONS, ADDRESS 2054..... 19</p> <p>ENABLE TELCO LINE FAULT TEST..... 7</p> <p>ENABLE TEMPERATURE DISPLAY OPTION, ADDRESS 1668..... 28</p> <p>ENABLE USERS TO REPORT OPENING AND CLOSINGS..... 24</p> <p>ENABLE ZONE DOUBLING (ZONES 9-16), ADDRESS 1423..... 19</p> <p>ENABLE ZONE NUMBER ON PULSE ALARM, ADDRESS 0461..... 20</p> <p>ENABLE ZONE NUMBER ON PULSE ALARM, ADDRESS 0483..... 20</p> <p>ENABLE ZONE NUMBER ON PULSE ALARM, ADDRESS 0505..... 20</p> <p>ENTER DATE..... 10, 39</p> <p>ENTER TIME..... 10, 39</p> <p>ENTER USER CODES..... 8</p> <p>ENTER ZONE DESCRIPTIONS..... 10</p> <p>ENTRY DELAY 1, ADDRESS 0001..... 15</p> <p>ENTRY DELAY 2, ADDRESS 0002..... 15</p> <p>ENTRY/EXIT 1 (ZONE OPTION), ADDRESS 0914, 0978..... 29</p> <p>ENTRY/EXIT 1 (ZONE OPTION), ADDRESS 1042, 1106..... 30</p> <p>ENTRY/EXIT 1 (ZONE OPTION), ADDRESS 1170, 1234..... 31</p> |
|---|---|



ALPHABETICAL INDEX (CONT'D)

| | | | |
|---|----|---|----|
| ENTRY/EXIT 1 (ZONE OPTION), ADDRESS 1298, 1362 | 32 | KEYPAD ADDRESS | 40 |
| ENTRY/EXIT 2 (ZONE OPTION), ADDRESS 0915, 0979 | 29 | KEYPAD CONFIGURATION MODE | 40 |
| ENTRY/EXIT 2 (ZONE OPTION), ADDRESS 1043, 1107 | 30 | KEYPAD ENTRY SOUNDER | 40 |
| ENTRY/EXIT 2 (ZONE OPTION), ADDRESS 1171, 1235 | 31 | KEYPAD INSTALLATION | 40 |
| ENTRY/EXIT 2 (ZONE OPTION), ADDRESS 1299, 1363 | 32 | KEYPAD OPTIONS (ADDRESS 1425-1431, 1440-1446) | 27 |
| ERASE DEALER PROGRAM, ADDRESS 2285 | 37 | KEYPAD SOUNDER ON ALARM (ZONE OPTION), ADDRESS 0941, 1005 .. | 29 |
| ERASE ENTIRE PROGRAM, ADDRESS 2286 | 37 | KEYPAD SOUNDER ON ALARM (ZONE OPTION), ADDRESS 1069, 1133 .. | 30 |
| ERASING DEALER PROGRAM | | KEYPAD SOUNDER ON ALARM (ZONE OPTION), ADDRESS 1197, 1261 .. | 31 |
| EASY MENU | 10 | KEYPAD SOUNDER ON ALARM (ZONE OPTION), ADDRESS 1325, 1389 .. | 32 |
| ERASING ENTIRE PROGRAM | | KEYPAD SOUNDER ON ALARM ZONES | 7 |
| EASY MENU | 10 | KEYPAD TACTILE BEEP | 40 |
| EXIT DEALER PROGRAM MODE | 10 | KEYSWITCH ARMING (ZONE OPTION), ADDRESS 0905, 0969 | 29 |
| EXIT DELAY, ADDRESS 0000 | 15 | KEYSWITCH ARMING (ZONE OPTION), ADDRESS 1033, 1097 | 30 |
| EXIT TIME RESTART, ADDRESS 2053 | 19 | KEYSWITCH ARMING (ZONE OPTION), ADDRESS 1161, 1225 | 31 |
| EXIT/ENTRY FOLLOWER (ZONE OPTION), ADDRESS 0916, 0980 | 29 | KEYSWITCH ARMING (ZONE OPTION), ADDRESS 1289, 1353 | 32 |
| EXIT/ENTRY FOLLOWER (ZONE OPTION), ADDRESS 1044, 1108 | 30 | LEADING DIGITS FOR PAGER FORMAT (1ST DIGIT), ADDRESS 0546 | 16 |
| EXIT/ENTRY FOLLOWER (ZONE OPTION), ADDRESS 1172, 1236 | 31 | LEADING DIGITS FOR PAGER FORMAT (2ND DIGIT), ADDRESS 0547 | 16 |
| EXIT/ENTRY FOLLOWER (ZONE OPTION), ADDRESS 1300, 1364 | 32 | LINE-FAULT TEST ONLY WHEN ARMED, ADDRESS 1423 | 19 |
| EXIT/ENTRY ZONES IN AREA 1 | 6 | LOCAL DOWNLOADING | 4 |
| EXIT/ENTRY2 ZONES IN AREA 1 | 7 | LOCAL OR CENTRAL STATION REPORTING SYSTEM | 6 |
| EXTERNAL RELAY CONTROL (ADDRESS 1489-1648) | 33 | LOW BATTERY, ADDRESS 0686 | 22 |
| EZM ADDRESS | 41 | LUG E15 AREA 1 ARMED AWAY ONLY, ADDRESS 2052 | 19 |
| EZM GROUP OPTIONS (ADDRESS 1455-1468) | 25 | MAINTAINED KEYSWITCH ARMING, ADDRESS 1421 | 19 |
| EZM TAMPER, ADDRESS 0688 | 22 | MEMORY FAIL, ADDRESS 0685 | 22 |
| FAIL TO CLOSE, ADDRESS 0704 | 22 | MODEM CODES | 23 |
| FAIL TO OPEN, ADDRESS 0703 | 22 | NEVER ARM (ZONE OPTION), ADDRESS 0908, 0972 | 29 |
| FIRE (MODEM CODE) | 23 | NEVER ARM (ZONE OPTION), ADDRESS 1036, 1100 | 30 |
| FIRE (ZONE OPTION), ADDRESS 0943, 1007 | 29 | NEVER ARM (ZONE OPTION), ADDRESS 1164, 1228 | 31 |
| FIRE (ZONE OPTION), ADDRESS 1071, 1135 | 30 | NEVER ARM (ZONE OPTION), ADDRESS 1292, 1356 | 32 |
| FIRE (ZONE OPTION), ADDRESS 1199, 1263 | 31 | NEW PANELS | 5 |
| FIRE (ZONE OPTION), ADDRESS 1327, 1391 | 32 | NO EOL RESISTOR (ZONE OPTION), ADDRESS 0933, 0997 | 29 |
| FIRE ALARM VERIFICATION (ZONE OPTION), ADDRESS 0944, 1008 | 29 | NO EOL RESISTOR (ZONE OPTION), ADDRESS 1061, 1125 | 30 |
| FIRE ALARM VERIFICATION (ZONE OPTION), ADDRESS 1072, 1136 | 30 | NO EOL RESISTOR (ZONE OPTION), ADDRESS 1189, 1253 | 31 |
| FIRE ALARM VERIFICATION (ZONE OPTION), ADDRESS 1200, 1264 | 31 | NO EOL RESISTOR (ZONE OPTION), ADDRESS 1317, 1381 | 32 |
| FIRE ALARM VERIFICATION (ZONE OPTION), ADDRESS 1328, 1392 | 32 | NO. RINGS BEFORE PICKUP, ADDRESS 2059 | 16 |
| FIRE ZONES IN AREA 1 | 6 | NUMBER OF KEYPADS IN AREA 1 | 8 |
| FIRE, ADDRESS 0700 | 22 | NUMBER OF RINGS BEFORE PICKUP, ADDRESS 2059 | 16 |
| FIRMWARE VERSION | 2 | OPENING AFTER ALARM, ADDRESS 0679 | 22 |
| FUNCTION MODE | 4 | OPENING REPORT | 24 |
| GAS ALARM (MODEM CODE) | 23 | OPENING REPORT ONLY AFTER ALARM REPORT, ADDRESS 1420 | 19 |
| GEM-P1664 WIRING DIAGRAM | 56 | OPENING, ADDRESS 0677 | 22 |
| GEM-RP1CAE2/GEM-K1CA KEYPAD EASY PROGRAM MENU | 6 | OUT OF SYSTEM | 40 |
| GLOBAL AMBUSH CODE, ADDRESS 2045 | 17 | PAGER (CS RECEIVER 1 FORMAT) | 20 |
| HEAT ALARM (MODEM CODE) | 23 | PAGER FORMAT OPTIONS (ADDRESS 0546 & 0547) | 16 |
| HEXADECIMAL FORMAT | | PANEL AC FAIL, ADDRESS 0687 | 22 |
| EXAMPLE | 13 | PANEL ZONE DOUBLING | 6 |
| HEXADECIMAL FORMAT EXAMPLE | 13 | PANIC (MODEM CODE) | 23 |
| HOLD UP (MODEM CODE) | 23 | PANIC, ADDRESS 0699 | 22 |
| INCL. SEL./GRP. BYPASS IN COND. CLOSE /STATUS, ADDRESS 1420 .. | 19 | PGM ON RF TRANSMITTER TAMPER, ADDRESS 2052 | 19 |
| INHIBIT SYSTEM TROUBLE AUDIBLE AT KEYPAD, ADDRESS 1423 | 19 | PGM1 OUTPUT (ZONE OPTION), ADDRESS 0912, 0976 | 29 |
| INTERIOR (STAY) BYPASS (ZONE OPTION), ADDRESS 0940, 1004 | 29 | PGM1 OUTPUT (ZONE OPTION), ADDRESS 1040, 1104 | 30 |
| INTERIOR (STAY) BYPASS (ZONE OPTION), ADDRESS 1068, 1132 | 30 | PGM1 OUTPUT (ZONE OPTION), ADDRESS 1168, 1232 | 31 |
| INTERIOR (STAY) BYPASS (ZONE OPTION), ADDRESS 1196, 1260 | 31 | PGM1 OUTPUT (ZONE OPTION), ADDRESS 1296, 1360 | 32 |
| INTERIOR (STAY) BYPASS (ZONE OPTION), ADDRESS 1324, 1388 | 32 | PGM1 OUTPUT TIMEOUT, ADDRESS 1416 | 16 |
| INTERIOR NORMALLY BYPASSED, ADDRESS 1422 | 19 | PGM1 OUTPUT TURNS OFF UPON DISARM, ADDRESS 1481 | 26 |
| INTERIOR ZONES IN AREA 1 | 6 | PGM1 OUTPUT TURNS OFF UPON DISARM, ADDRESS 1482 | 26 |
| K SERIES KEYPAD PROGRAMMING | 2 | PGM1 OUTPUT TURNS OFF UPON DISARM, ADDRESS 1483 | 26 |
| KEY FOB TRANSMITTERS AS ARM/DISARM & CONTROL DEVICES | 9 | PGM1 OUTPUT TURNS OFF UPON DISARM, ADDRESS 1484 | 26 |
| KEY FOB TRANSMITTERS AS ZONE INPUT DEVICES | 10 | PGM1 OUTPUT, ADDRESS 0838 | 17 |
| KEYFOB LOW BATTERY, ADDRESS 0705 | 22 | PGM1 OUTPUT, ADDRESS 0858 | 17 |
| KEYPAD | | PGM1 OUTPUT, ADDRESS 0866 | 17 |
| CONFIGURING | 40 | PGM1 OUTPUT, ADDRESS 0874 | 18 |

ALPHABETICAL INDEX (CONT'D)

| | |
|---|---|
| <p>PGM1 OUTPUT, ADDRESS 0882..... 18</p> <p>PGM2 OUTPUT (ZONE OPTION), ADDRESS 0913, 0977..... 29</p> <p>PGM2 OUTPUT (ZONE OPTION), ADDRESS 1041, 1105..... 30</p> <p>PGM2 OUTPUT (ZONE OPTION), ADDRESS 1169, 1233..... 31</p> <p>PGM2 OUTPUT (ZONE OPTION), ADDRESS 1297, 1361..... 32</p> <p>PGM2 OUTPUT ACCESS CNTRL TIMEOUT, ADDRESS 1413..... 15</p> <p>PGM2 OUTPUT TIMEOUT, ADDRESS 1412..... 16</p> <p>PGM2 OUTPUT TURNS OFF UPON DISARM, ADDRESS 1485..... 26</p> <p>PGM2 OUTPUT TURNS OFF UPON DISARM, ADDRESS 1486..... 26</p> <p>PGM2 OUTPUT TURNS OFF UPON DISARM, ADDRESS 1487..... 26</p> <p>PGM2 OUTPUT TURNS OFF UPON DISARM, ADDRESS 1488..... 26</p> <p>PGM2 OUTPUT, ADDRESS 0839..... 17</p> <p>PGM2 OUTPUT, ADDRESS 0860..... 17</p> <p>PGM2 OUTPUT, ADDRESS 0868..... 17</p> <p>PGM2 OUTPUT, ADDRESS 0876..... 18</p> <p>PGM2 OUTPUT, ADDRESS 0884..... 18</p> <p>POWER-UP DELAY (ZONE OPTION), ADDRESS 0921, 0985..... 29</p> <p>POWER-UP DELAY (ZONE OPTION), ADDRESS 1049, 1113..... 30</p> <p>POWER-UP DELAY (ZONE OPTION), ADDRESS 1177, 1241..... 31</p> <p>POWER-UP DELAY (ZONE OPTION), ADDRESS 1305, 1369..... 32</p> <p>PRE-ALARM WARNING (ZONE OPTION), ADDRESS 0907, 0971..... 29</p> <p>PRE-ALARM WARNING (ZONE OPTION), ADDRESS 1035, 1099..... 30</p> <p>PRE-ALARM WARNING (ZONE OPTION), ADDRESS 1163, 1227..... 31</p> <p>PRE-ALARM WARNING (ZONE OPTION), ADDRESS 1291, 1355..... 32</p> <p>PRIORITY (ZONE OPTION), ADDRESS 0901, 0965..... 29</p> <p>PRIORITY (ZONE OPTION), ADDRESS 1029, 1093..... 30</p> <p>PRIORITY (ZONE OPTION), ADDRESS 1157, 1221..... 31</p> <p>PRIORITY (ZONE OPTION), ADDRESS 1285, 1349..... 32</p> <p>PRIORITY ARMING AREA 1, ADDRESS 1469..... 25</p> <p>PRIORITY ARMING AREA 2, ADDRESS 1470..... 25</p> <p>PRIORITY ARMING AREA 3, ADDRESS 1471..... 25</p> <p>PRIORITY ARMING AREA 4, ADDRESS 1472..... 25</p> <p>PRIORITY WITH BYPASS (ZONE OPTION), ADDRESS 0902, 0966..... 29</p> <p>PRIORITY WITH BYPASS (ZONE OPTION), ADDRESS 1030, 1094..... 30</p> <p>PRIORITY WITH BYPASS (ZONE OPTION), ADDRESS 1158, 1222..... 31</p> <p>PRIORITY WITH BYPASS (ZONE OPTION), ADDRESS 1286, 1350..... 32</p> <p>PROGRAM CONTROL MESSAGE..... 41</p> <p>PROGRAMMING CONVENTIONS..... 14</p> <p>PROGRAMMING STEPS</p> <p style="padding-left: 20px;">GENERAL..... 14</p> <p>PROGRAMMING WITH THE K SERIES KEYPADS..... 2</p> <p>PULSE ALARM OUTPUT TIMEOUT, ADDRESS 1415..... 16</p> <p>PULSE EVENT CODE..... 23</p> <p>PULSED ALARM OUTPUT (ZONE OPTION), ADDRESS 0911, 0975..... 29</p> <p>PULSED ALARM OUTPUT (ZONE OPTION), ADDRESS 1039, 1103..... 30</p> <p>PULSED ALARM OUTPUT (ZONE OPTION), ADDRESS 1167, 1231..... 31</p> <p>PULSED ALARM OUTPUT (ZONE OPTION), ADDRESS 1295, 1359..... 32</p> <p>PULSED ALARM OUTPUT, ADDRESS 0837..... 17</p> <p>PULSED ALARM OUTPUT, ADDRESS 0856..... 17</p> <p>PULSED ALARM OUTPUT, ADDRESS 0864..... 17</p> <p>PULSED ALARM OUTPUT, ADDRESS 0872..... 18</p> <p>PULSED ALARM OUTPUT, ADDRESS 0880..... 18</p> <p>PULSED BURG OUTPUT TURNS OFF UPON DISARM, ADDRESS 1477..... 26</p> <p>PULSED BURG OUTPUT TURNS OFF UPON DISARM, ADDRESS 1478..... 26</p> <p>PULSED BURG OUTPUT TURNS OFF UPON DISARM, ADDRESS 1479..... 26</p> <p>PULSED BURG OUTPUT TURNS OFF UPON DISARM, ADDRESS 1480..... 26</p> <p>QUICK METHOD..... 9</p> <p>RADIONICS FAST (CS RECEIVER 1 FORMAT)..... 20</p> <p>RADIONICS, DCI, FRANKLIN SLOW (CS RECEIVER 1 FORMAT)..... 20</p> <p>RELAY MODULE RM3008..... 34</p> <p>REMOTE DOWNLOADING..... 4</p> <p>REPORT CANCEL WINDOW, ADDRESS 2055..... 15</p> <p>REPORT EVENT TELCO 1, ADDRESS 0840..... 17</p> | <p>REPORT EVENT TELCO 1, ADDRESS 0861..... 17</p> <p>REPORT EVENT TELCO 1, ADDRESS 0869..... 17</p> <p>REPORT EVENT TELCO 1, ADDRESS 0877..... 18</p> <p>REPORT EVENT TELCO 1, ADDRESS 0885..... 18</p> <p>REPORT EVENT TELCO 3, ADDRESS 0842..... 17</p> <p>REPORT EVENT TELCO 3, ADDRESS 0863..... 17</p> <p>REPORT EVENT TELCO 3, ADDRESS 0871..... 17</p> <p>REPORT EVENT TELCO 3, ADDRESS 0879..... 18</p> <p>REPORT EVENT TELCO 3, ADDRESS 0887..... 18</p> <p>REPORT OPENING AND CLOSINGS..... 24</p> <p>REPORT RESTORE TELCO 1, ADDRESS 0841..... 17</p> <p>REPORT RESTORE TELCO 3, ADDRESS 0843..... 17</p> <p>REPORT TEMPERATURE ALARM (ZONE 6), ADDRESS 1668..... 28</p> <p>RESET DAY ZONE WITH ARM/DISARM ONLY, ADDRESS 1422..... 19</p> <p>RESOUND ON WIRELESS SMOKE LOW BATTERY, ADDRESS 1424..... 19</p> <p>RF REC. TROUBLE, ADDRESS 0684..... 22</p> <p>RF RECEIVER & SUPERVISORY TIMER OPTIONS (ADDRESS 2029-2044 & 2056)..... 36</p> <p>RF TRANSMITTER POINTS..... 9</p> <p>RPT EXIT ERR/RECENT CLOSE, ADDRESS 2053..... 19</p> <p>SELECT ALARM OUTPUT FOR KEYFOB CHIRP, ADDRESS 1423..... 19</p> <p>SELECT DEGREES CELSIUS, ADDRESS 1668..... 28</p> <p>SELECTIVE BYPASS (ZONE OPTION), ADDRESS 0904, 0968..... 29</p> <p>SELECTIVE BYPASS (ZONE OPTION), ADDRESS 1032, 1096..... 30</p> <p>SELECTIVE BYPASS (ZONE OPTION), ADDRESS 1160, 1224..... 31</p> <p>SELECTIVE BYPASS (ZONE OPTION), ADDRESS 1288, 1352..... 32</p> <p>SENSOR WATCH (ZONE OPTION), ADDRESS 0950, 1014..... 29</p> <p>SENSOR WATCH (ZONE OPTION), ADDRESS 1078, 1142..... 30</p> <p>SENSOR WATCH (ZONE OPTION), ADDRESS 1206, 1270..... 31</p> <p>SENSOR WATCH (ZONE OPTION), ADDRESS 1334, 1398..... 32</p> <p>SENSOR WATCH TIME, ADDRESS 2050..... 15</p> <p>SENSOR WATCH ZONES..... 7</p> <p>SIA (CS RECEIVER 1 FORMAT)..... 20</p> <p>SILENT KNIGHT FAST (CS RECEIVER 1 FORMAT)..... 20</p> <p>SINGLE DIGIT ONLY, ADDRESS 0461..... 20</p> <p>SINGLE DIGIT ONLY, ADDRESS 0483..... 20</p> <p>SINGLE DIGIT ONLY, ADDRESS 0505..... 20</p> <p>SOUND ALARM ON EXIT ERROR, ADDRESS 2053..... 19</p> <p>STATUS REPORT, ADDRESS 1420..... 19</p> <p>SUM CHECK, ADDRESS 0461..... 20</p> <p>SUM CHECK, ADDRESS 0483..... 20</p> <p>SUM CHECK, ADDRESS 0505..... 20</p> <p>SUPPRESS BYPASS REMINDER WHEN ARMED, ADDRESS 1421..... 19</p> <p>SWINGER SHUTDOWN (ZONE OPTION), ADDRESS 0918, 0982..... 29</p> <p>SWINGER SHUTDOWN (ZONE OPTION), ADDRESS 1046, 1110..... 30</p> <p>SWINGER SHUTDOWN (ZONE OPTION), ADDRESS 1174, 1238..... 31</p> <p>SWINGER SHUTDOWN (ZONE OPTION), ADDRESS 1302, 1366..... 32</p> <p>SYSTEM DELAYS & TIMEOUTS (ADDRESS 0000-0002, 1413, 1417, 2050 & 2055)..... 15</p> <p>SYSTEM DELAYS & TIMEOUTS (ADDRESS 1418-1419)..... 15</p> <p>SYSTEM OPTIONS (ADDRESS 0836-0871 & 2045)..... 17</p> <p>SYSTEM OPTIONS (ADDRESS 0872-0887)..... 18</p> <p>SYSTEM OPTIONS (ADDRESS 1420-1424, 2051-2054)..... 19</p> <p>SYSTEM OUTPUT TIMEOUTS (ADDRESS 1412 & 1414-1416)..... 16</p> <p>SYSTEM PROGRAMMING OPTIONS..... 4</p> <p>SYSTEM RESPONSE ACTIVATED BY AREA 1 EVENT/TROUBLE..... 17</p> <p>SYSTEM RESPONSE ACTIVATED BY AREA 2 EVENT/TROUBLE..... 17</p> <p>SYSTEM RESPONSE ACTIVATED BY AREA 3 EVENT/TROUBLE..... 18</p> <p>SYSTEM RESPONSE ACTIVATED BY AREA 4 EVENT/TROUBLE..... 18</p> <p>SYSTEM RESPONSE ACTIVATED BY GLOBAL EVENT/TROUBLE,..... 17</p> <p>TAMPER, ADDRESS 0702..... 22</p> <p>TCP/IP PANEL/SITE INITIATED FUNCTIONS, ADDRESS 2054..... 19</p> <p>TELCO FAIL, ADDRESS 0683..... 22</p> |
|---|---|



ALPHABETICAL INDEX (CONT'D)

| | | | |
|---|----|---|----|
| TEMPERATURE DISPLAY AT KEYPAD (ADDRESS 1666-1668)..... | 28 | ZONE ANDING GROUP 2 (ZONE OPTION), ADDRESS 1203, 1267 | 31 |
| TEMPERATURE LOWER LIMIT, ADDRESS 1666..... | 28 | ZONE ANDING GROUP 2 (ZONE OPTION), ADDRESS 1331, 1395 | 32 |
| TEMPERATURE OPTIONS, ADDRESS 1668 | 28 | ZONE ANDING GROUP 3 (ZONE OPTION), ADDRESS 0948, 1012 | 29 |
| TEMPERATURE UPPER LIMIT, ADDRESS 1667 | 28 | ZONE ANDING GROUP 3 (ZONE OPTION), ADDRESS 1076, 1140 | 30 |
| TEST TIMER..... | 10 | ZONE ANDING GROUP 3 (ZONE OPTION), ADDRESS 1204, 1268 | 31 |
| TEST TIMER, ADDRESS 0682..... | 22 | ZONE ANDING GROUP 3 (ZONE OPTION), ADDRESS 1332, 1396 | 32 |
| TIME..... | 10 | ZONE ANDING GROUP 4 (ZONE OPTION), ADDRESS 0949, 1013 | 29 |
| TOTAL NUMBER OF ZONES IN AREA 1 | 6 | ZONE ANDING GROUP 4 (ZONE OPTION), ADDRESS 1077, 1141 | 30 |
| TOUCH-TONE DIALING ONLY, ADDRESS 0788 | 22 | ZONE ANDING GROUP 4 (ZONE OPTION), ADDRESS 1205, 1269 | 31 |
| TOUCH-TONE DIALING W/ROTARY BACKUP, ADDRESS 0788 | 22 | ZONE ANDING GROUP 4 (ZONE OPTION), ADDRESS 1333, 1397 | 32 |
| TRANSMITTER WIRELESS POINTS | | ZONE AREA 1 (ZONE OPTION), ADDRESS 0936, 1000..... | 29 |
| ENROLLING..... | 9 | ZONE AREA 1 (ZONE OPTION), ADDRESS 1064, 1128..... | 30 |
| TROUBLE ON OPEN (ZONE OPTION), ADDRESS 0934, 0998 | 29 | ZONE AREA 1 (ZONE OPTION), ADDRESS 1192, 1256..... | 31 |
| TROUBLE ON OPEN (ZONE OPTION), ADDRESS 1062, 1126 | 30 | ZONE AREA 1 (ZONE OPTION), ADDRESS 1320, 1384..... | 32 |
| TROUBLE ON OPEN (ZONE OPTION), ADDRESS 1190, 1254 | 31 | ZONE AREA 2 (ZONE OPTION), ADDRESS 0937, 1001..... | 29 |
| TROUBLE ON OPEN (ZONE OPTION), ADDRESS 1318, 1382 | 32 | ZONE AREA 2 (ZONE OPTION), ADDRESS 1065, 1129..... | 30 |
| TROUBLE ON SHORT (ZONE OPTION), ADDRESS 0935, 0999..... | 29 | ZONE AREA 2 (ZONE OPTION), ADDRESS 1193, 1257..... | 31 |
| TROUBLE ON SHORT (ZONE OPTION), ADDRESS 1063, 1127..... | 30 | ZONE AREA 2 (ZONE OPTION), ADDRESS 1321, 1385..... | 32 |
| TROUBLE ON SHORT (ZONE OPTION), ADDRESS 1191, 1255..... | 31 | ZONE AREA 3 (ZONE OPTION), ADDRESS 0938, 1002..... | 29 |
| TROUBLE ON SHORT (ZONE OPTION), ADDRESS 1319, 1383..... | 32 | ZONE AREA 3 (ZONE OPTION), ADDRESS 1066, 1130..... | 30 |
| TROUBLE RESTORE 1 (ZONE OPTION), ADDRESS 0928, 0992 | 29 | ZONE AREA 3 (ZONE OPTION), ADDRESS 1194, 1258..... | 31 |
| TROUBLE RESTORE 1 (ZONE OPTION), ADDRESS 1056, 1120 | 30 | ZONE AREA 3 (ZONE OPTION), ADDRESS 1322, 1386..... | 32 |
| TROUBLE RESTORE 1 (ZONE OPTION), ADDRESS 1184, 1248 | 31 | ZONE AREA 4 (ZONE OPTION), ADDRESS 0939, 1003..... | 29 |
| TROUBLE RESTORE 1 (ZONE OPTION), ADDRESS 1312, 1376 | 32 | ZONE AREA 4 (ZONE OPTION), ADDRESS 1067, 1131..... | 30 |
| TROUBLE RESTORE 3 (ZONE OPTION), ADDRESS 0932, 0996 | 29 | ZONE AREA 4 (ZONE OPTION), ADDRESS 1195, 1259..... | 31 |
| TROUBLE RESTORE 3 (ZONE OPTION), ADDRESS 1060, 1124 | 30 | ZONE AREA 4 (ZONE OPTION), ADDRESS 1323, 1387..... | 32 |
| TROUBLE RESTORE 3 (ZONE OPTION), ADDRESS 1188, 1252 | 31 | ZONE DESCRIPTIONS | |
| TROUBLE RESTORE 3 (ZONE OPTION), ADDRESS 1316, 1380 | 32 | ENTERING..... | 10 |
| TROUBLE RESTORE, ADDRESS 0672 | 22 | ZONE DESCRIPTIONS..... | 39 |
| TROUBLE TELCO 1 (ZONE OPTION), ADDRESS 0927, 0991 | 29 | ZONE DOUBLING..... | 6 |
| TROUBLE TELCO 1 (ZONE OPTION), ADDRESS 1055, 1119 | 30 | ZONE OPTIONS - ZONES 1 TO 16 (ADDRESS 0900-1016)..... | 29 |
| TROUBLE TELCO 1 (ZONE OPTION), ADDRESS 1183, 1247 | 31 | ZONE OPTIONS - ZONES 17 TO 32 (ADDRESS 1029-1144) | 30 |
| TROUBLE TELCO 1 (ZONE OPTION), ADDRESS 1311, 1375 | 32 | ZONE OPTIONS - ZONES 33 TO 48 (ADDRESS 1157-1272) | 31 |
| TROUBLE TELCO 3 (ZONE OPTION), ADDRESS 0931, 0995 | 29 | ZONE OPTIONS - ZONES 49 TO 64 (ADDRESS 1285-1400) | 32 |
| TROUBLE TELCO 3 (ZONE OPTION), ADDRESS 1059, 1123 | 30 | ZONE REPORT CODE OPTIONS..... | 23 |
| TROUBLE TELCO 3 (ZONE OPTION), ADDRESS 1187, 1251 | 31 | ZONE RESPONSE | 41 |
| TROUBLE TELCO 3 (ZONE OPTION), ADDRESS 1315, 1379 | 32 | | |
| TROUBLE, ADDRESS 0671..... | 22 | | |
| UNIVERSAL HIGH SPEED (CS RECEIVER 1 FORMAT)..... | 20 | | |
| USER CODES | 38 | | |
| USER PROGRAM | | | |
| AREA OPTION..... | 9 | | |
| USER PROGRAM MODE..... | 4 | | |
| USER PROGRAM MODE | | | |
| ACCESSING..... | 38 | | |
| PRELIMINARY INFORMATION | 37 | | |
| USERS TO REPORT OPENING AND CLOSINGS | 24 | | |
| VERI-PHONE AUDIO PRIORITY OVER ALARMS, ADDRESS 1424..... | 19 | | |
| VERI-PHONE ZONES TRIP PGM2 OUTPUT, ADDRESS 1424 | 19 | | |
| WIRELESS TROUBLE ACTIVATES TELCO 1, ADDRESS 1423 | 19 | | |
| WIRELESS TROUBLE ACTIVATES TELCO 3, ADDRESS 1423 | 19 | | |
| WIRING DIAGRAM | 56 | | |
| XMITTER LOW BATTERY, ADDRESS 0673 | 22 | | |
| XMITTER SUPERVISION, ADDRESS 0674 | 22 | | |
| XMITTER TAMPER, ADDRESS 0675 | 22 | | |
| ZONE 6 TEMPERATURE SENSOR | 28 | | |
| ZONE ANDING GROUP 1 (ZONE OPTION), ADDRESS 0946, 1010 | 29 | | |
| ZONE ANDING GROUP 1 (ZONE OPTION), ADDRESS 1074, 1138 | 30 | | |
| ZONE ANDING GROUP 1 (ZONE OPTION), ADDRESS 1202, 1266 | 31 | | |
| ZONE ANDING GROUP 1 (ZONE OPTION), ADDRESS 1330, 1394 | 32 | | |
| ZONE ANDING GROUP 2 (ZONE OPTION), ADDRESS 0947, 1011 | 29 | | |
| ZONE ANDING GROUP 2 (ZONE OPTION), ADDRESS 1075, 1139 | 30 | | |

ADDRESS NUMBER INDEX

| | | |
|-------------------------|---|----|
| ADDRESS 0000 | EXIT DELAY | 15 |
| ADDRESS 0000-0002 | SYSTEM DELAYS & TIMEOUTS | 15 |
| ADDRESS 0001 | ENTRY DELAY 1 | 15 |
| ADDRESS 0002 | ENTRY DELAY 2 | 15 |
| ADDRESS 0460 | CS RECEIVER 1 FORMAT | 20 |
| ADDRESS 0461 | 1400HZ HANDSHAKE/KISSOFF | 20 |
| ADDRESS 0461 | 2300HZ HANDSHAKE/KISSOFF | 20 |
| ADDRESS 0461 | 3/1 WITH EXTENDED RESTORES | 20 |
| ADDRESS 0461 | CS RECEIVER OPTIONS - TELCO 1 | 20 |
| ADDRESS 0461 | ENABLE ZONE NUMBER ON PULSE ALARM | 20 |
| ADDRESS 0461 | SINGLE DIGIT ONLY | 20 |
| ADDRESS 0461 | SUM CHECK | 20 |
| ADDRESS 0461 | ENABLE TCP/IP AES RPT | 20 |
| ADDRESS 0462-0481 | CS RECEIVER 1 TELEPHONE NUMBER | 20 |
| ADDRESS 0482 | CS RECEIVER 2 FORMAT | 20 |
| ADDRESS 0483 | 1400HZ HANDSHAKE/KISSOFF | 20 |
| ADDRESS 0483 | 2300HZ HANDSHAKE/KISSOFF | 20 |
| ADDRESS 0483 | 3/1 WITH EXTENDED RESTORES | 20 |
| ADDRESS 0483 | CS RECEIVER OPTIONS - TELCO 2 | 20 |
| ADDRESS 0483 | ENABLE ZONE NUMBER ON PULSE ALARM | 20 |
| ADDRESS 0483 | SINGLE DIGIT ONLY | 20 |
| ADDRESS 0483 | SUM CHECK | 20 |
| ADDRESS 0483 | ENABLE TCP/IP AES RPT | 20 |
| ADDRESS 0484-0503 | CS RECEIVER 2 TELEPHONE NUMBER | 20 |
| ADDRESS 0504 | CS RECEIVER 3 FORMAT | 20 |
| ADDRESS 0505 | 1400HZ HANDSHAKE/KISSOFF | 20 |
| ADDRESS 0505 | 2300HZ HANDSHAKE/KISSOFF | 20 |
| ADDRESS 0505 | 3/1 WITH EXTENDED RESTORES | 20 |
| ADDRESS 0505 | CS RECEIVER OPTIONS - TELCO 3 | 20 |
| ADDRESS 0505 | ENABLE ZONE NUMBER ON PULSE ALARM | 20 |
| ADDRESS 0505 | SINGLE DIGIT ONLY | 20 |
| ADDRESS 0505 | SUM CHECK | 20 |
| ADDRESS 0505 | ENABLE TCP/IP AES RPT | 20 |
| ADDRESS 0506-0525 | CS RECEIVER 3 TELEPHONE NUMBER | 20 |
| ADDRESS 0526-0545 | DOWNLOAD/CALLBACK OPTIONS | 16 |
| ADDRESS 0546 | LEADING DIGITS FOR PAGER FORMAT (1ST DIGIT) | 16 |
| ADDRESS 0546 | PAGER FORMAT OPTIONS | 16 |
| ADDRESS 0547 | LEADING DIGITS FOR PAGER FORMAT (2ND DIGIT) | 16 |
| ADDRESS 0547 | PAGER FORMAT OPTIONS | 16 |
| ADDRESS 0560-0667 | CS SUBSCRIBER ID OPTIONS | 21 |
| ADDRESS 0670 | ALARM RESTORE | 22 |
| ADDRESS 0671 | TROUBLE | 22 |
| ADDRESS 0672 | TROUBLE RESTORE | 22 |
| ADDRESS 0673 | XMITTER LOW BATTERY | 22 |
| ADDRESS 0674 | XMITTER SUPERVISION | 22 |
| ADDRESS 0675 | XMITTER TAMPER | 22 |
| ADDRESS 0677 | OPENING | 22 |
| ADDRESS 0678 | CLOSING | 22 |
| ADDRESS 0679 | OPENING AFTER ALARM | 22 |
| ADDRESS 0680 | CONDITIONAL CLOSE | 22 |
| ADDRESS 0681 | CANCEL | 22 |



ADDRESS NUMBER INDEX (CONT'D)

| | | |
|-------------------|---|----|
| ADDRESS 0682 | TEST TIMER | 22 |
| ADDRESS 0683 | TELCO FAIL | 22 |
| ADDRESS 0683-0708 | CS SYSTEM REPORTING CODES | 22 |
| ADDRESS 0684 | RF REC. TROUBLE | 22 |
| ADDRESS 0685 | MEMORY FAIL | 22 |
| ADDRESS 0686 | LOW BATTERY | 22 |
| ADDRESS 0687 | PANEL AC FAIL | 22 |
| ADDRESS 0688 | EZM TAMPER | 22 |
| ADDRESS 0689 | ALARM OUTPUT SUPERV. | 22 |
| ADDRESS 0698 | AMBUSH | 22 |
| ADDRESS 0699 | PANIC | 22 |
| ADDRESS 0700 | FIRE | 22 |
| ADDRESS 0701 | AUXILIARY | 22 |
| ADDRESS 0702 | TAMPER | 22 |
| ADDRESS 0703 | FAIL TO OPEN | 22 |
| ADDRESS 0704 | FAIL TO CLOSE | 22 |
| ADDRESS 0705 | KEYFOB LOW BATTERY | 22 |
| ADDRESS 0720-0783 | CS ZONE REPORTING OPTIONS | 23 |
| ADDRESS 0785 | CS AREA & SYSTEM REPORTING OPTIONS | 22 |
| ADDRESS 0785 | DISABLE OPENING REPORTS | 22 |
| ADDRESS 0786 | CS AREA & SYSTEM REPORTING OPTIONS | 22 |
| ADDRESS 0786 | DISABLE CLOSING REPORTS | 22 |
| ADDRESS 0788 | BACKUP REPORT ON TELCO 1 & 2 | 22 |
| ADDRESS 0788 | CANCEL NEXT TEST TIMER ON ANY REPORT | 22 |
| ADDRESS 0788 | CS AREA & SYSTEM REPORTING OPTIONS | 22 |
| ADDRESS 0788 | CS SYSTEM REPORT OPTIONS | 22 |
| ADDRESS 0788 | DISABLE AUTO DIAL TONE DETECT | 22 |
| ADDRESS 0788 | DISABLE WAIT FOR HANDSHAKE ON TRANSMIT | 22 |
| ADDRESS 0788 | DISABLE WAIT FOR SILENCE (PAGER FORMAT) | 22 |
| ADDRESS 0788 | TOUCH-TONE DIALING ONLY | 22 |
| ADDRESS 0788 | TOUCH-TONE DIALING W/ROTARY BACKUP | 22 |
| ADDRESS 0800-0835 | CS USER REPORTING OPTIONS | 24 |
| ADDRESS 0836 | ALARM OUTPUT | 17 |
| ADDRESS 0836-0871 | SYSTEM OPTIONS | 17 |
| ADDRESS 0837 | PULSED ALARM OUTPUT | 17 |
| ADDRESS 0838 | PGM1 OUTPUT | 17 |
| ADDRESS 0839 | PGM2 OUTPUT | 17 |
| ADDRESS 0840 | REPORT EVENT TELCO 1 | 17 |
| ADDRESS 0841 | REPORT RESTORE TELCO 1 | 17 |
| ADDRESS 0842 | REPORT EVENT TELCO 3 | 17 |
| ADDRESS 0843 | REPORT RESTORE TELCO 3 | 17 |
| ADDRESS 0856 | PULSED ALARM OUTPUT | 17 |
| ADDRESS 0857 | ALARM OUTPUT | 17 |
| ADDRESS 0858 | PGM1 OUTPUT | 17 |
| ADDRESS 0860 | PGM2 OUTPUT | 17 |
| ADDRESS 0861 | REPORT EVENT TELCO 1 | 17 |
| ADDRESS 0863 | REPORT EVENT TELCO 3 | 17 |
| ADDRESS 0864 | PULSED ALARM OUTPUT | 17 |
| ADDRESS 0865 | ALARM OUTPUT | 17 |
| ADDRESS 0866 | PGM1 OUTPUT | 17 |
| ADDRESS 0868 | PGM2 OUTPUT | 17 |

ADDRESS NUMBER INDEX (CONT'D)

| | | |
|-------------------------|---|----|
| ADDRESS 0869 | REPORT EVENT TELCO 1 | 17 |
| ADDRESS 0871 | REPORT EVENT TELCO 3 | 17 |
| ADDRESS 0872 | PULSED ALARM OUTPUT | 18 |
| ADDRESS 0872-0887 | SYSTEM OPTIONS | 18 |
| ADDRESS 0873 | ALARM OUTPUT | 18 |
| ADDRESS 0874 | PGM1 OUTPUT | 18 |
| ADDRESS 0876 | PGM2 OUTPUT | 18 |
| ADDRESS 0877 | REPORT EVENT TELCO 1 | 18 |
| ADDRESS 0879 | REPORT EVENT TELCO 3 | 18 |
| ADDRESS 0880 | PULSED ALARM OUTPUT | 18 |
| ADDRESS 0881 | ALARM OUTPUT | 18 |
| ADDRESS 0882 | PGM1 OUTPUT | 18 |
| ADDRESS 0884 | PGM2 OUTPUT | 18 |
| ADDRESS 0885 | REPORT EVENT TELCO 1 | 18 |
| ADDRESS 0887 | REPORT EVENT TELCO 3 | 18 |
| ADDRESS 0900-1016 | ZONE OPTIONS - ZONES 1 TO 16 | 29 |
| ADDRESS 1029-1144 | ZONE OPTIONS - ZONES 17 TO 32 | 30 |
| ADDRESS 1157-1272 | ZONE OPTIONS - ZONES 33 TO 48 | 31 |
| ADDRESS 1285-1400 | ZONE OPTIONS - ZONES 49 TO 64 | 32 |
| ADDRESS 1412 | PGM2 OUTPUT TIMEOUT | 16 |
| ADDRESS 1412 | SYSTEM OUTPUT TIMEOUTS | 16 |
| ADDRESS 1413 | PGM2 OUTPUT ACCESS CNTRL TIMEOUT | 15 |
| ADDRESS 1413 | SYSTEM DELAYS & TIMEOUTS | 15 |
| ADDRESS 1414 | ALARM OUTPUT TIMEOUT | 16 |
| ADDRESS 1414-1416 | SYSTEM OUTPUT TIMEOUTS | 16 |
| ADDRESS 1415 | PULSE ALARM OUTPUT TIMEOUT | 16 |
| ADDRESS 1416 | PGM1 OUTPUT TIMEOUT | 16 |
| ADDRESS 1417 | ABORT DELAY | 15 |
| ADDRESS 1417 | SYSTEM DELAYS & TIMEOUTS | 15 |
| ADDRESS 1418 | CHIME TIME | 15 |
| ADDRESS 1418-1419 | SYSTEM DELAYS & TIMEOUTS | 15 |
| ADDRESS 1419 | AC FAIL REPORT DELAY | 15 |
| ADDRESS 1420 | CLOSING REPORT ONLY ON CONDITIONAL CLOSE | 19 |
| ADDRESS 1420 | DISABLE ZONE FAULT SCROLLING | 19 |
| ADDRESS 1420 | ENABLE AUTOARM IF NOT CLOSED AT END OF WINDOW | 19 |
| ADDRESS 1420 | ENABLE KEYPAD TIME/DATE DISPLAY | 19 |
| ADDRESS 1420 | INCL. SEL./GRP. BYPASS IN COND. CLOSE /STATUS | 19 |
| ADDRESS 1420 | OPENING REPORT ONLY AFTER ALARM REPORT | 19 |
| ADDRESS 1420 | STATUS REPORT | 19 |
| ADDRESS 1420-1424 | SYSTEM OPTIONS | 19 |
| ADDRESS 1421 | ACCESS CONTROL ON PGM2 OUTPUT | 19 |
| ADDRESS 1421 | AUTO BELL TEST ON ARMING | 19 |
| ADDRESS 1421 | AUTO RESET AFTER BURGLARY OUTPUT TIMEOUT | 19 |
| ADDRESS 1421 | DISABLE KEYPAD INSTANT MODE | 19 |
| ADDRESS 1421 | ENABLE LOCAL ALARM ON FIRST ZONE AND TRIP | 19 |
| ADDRESS 1421 | ENABLE MANAGER'S MODE | 19 |
| ADDRESS 1421 | MAINTAINED KEYSWITCH ARMING | 19 |
| ADDRESS 1421 | SUPPRESS BYPASS REMINDER WHEN ARMED | 19 |
| ADDRESS 1422 | CHANGE PULSE OUTPUT TO TEMPORAL OUTPUT | 19 |
| ADDRESS 1422 | CHIRP OUTPUT ON KEYFOB ARM/DISARM | 19 |
| ADDRESS 1422 | DISABLE CALLBACK DOWNLOAD | 19 |



ADDRESS NUMBER INDEX (CONT'D)

| | | |
|-------------------|---|----|
| ADDRESS 1422 | DISABLE KEYPAD FUNCTION MODE DOWNLOAD | 19 |
| ADDRESS 1422 | ENABLE GLOBAL AMBUSH CODE | 19 |
| ADDRESS 1422 | ENABLE RESIDENTIAL FIRE | 19 |
| ADDRESS 1422 | INTERIOR NORMALLY BYPASSED | 19 |
| ADDRESS 1422 | RESET DAY ZONE WITH ARM/DISARM ONLY | 19 |
| ADDRESS 1423 | ENABLE ALARM OUTPUT ON TELCO FAIL ONLY WHEN ARMED | 19 |
| ADDRESS 1423 | ENABLE LINE-FAULT TEST | 19 |
| ADDRESS 1423 | ENABLE ZONE DOUBLING (ZONES 9-16) | 19 |
| ADDRESS 1423 | INHIBIT SYSTEM TROUBLE AUDIBLE AT KEYPAD | 19 |
| ADDRESS 1423 | LINE-FAULT TEST ONLY WHEN ARMED | 19 |
| ADDRESS 1423 | SELECT ALARM OUTPUT FOR KEYFOB CHIRP | 19 |
| ADDRESS 1423 | WIRELESS TROUBLE ACTIVATES TELCO 1 | 19 |
| ADDRESS 1423 | WIRELESS TROUBLE ACTIVATES TELCO 3 | 19 |
| ADDRESS 1424 | AUTOMATIC INTERIOR BYPASS/EASY EXIT | 19 |
| ADDRESS 1424 | DISABLE 2ND CALL ANS. MACHINE OVERRIDE | 19 |
| ADDRESS 1424 | DISABLE CODE REQUIRED FOR EZ BYPASS | 19 |
| ADDRESS 1424 | DON'T CLEAR PGM2 OUTPUT WITH DISARM | 19 |
| ADDRESS 1424 | RESOUND ON WIRELESS SMOKE LOW BATTERY | 19 |
| ADDRESS 1424 | VERI-PHONE AUDIO PRIORITY OVER ALARMS | 19 |
| ADDRESS 1424 | VERI-PHONE ZONES TRIP PGM2 OUTPUT | 19 |
| ADDRESS 1425-1431 | ENABLE KEYPAD TYPE & ACTIVATION | 27 |
| ADDRESS 1425-1431 | KEYPAD OPTIONS | 27 |
| ADDRESS 1440-1446 | ENABLE KEYPAD OPTIONS | 27 |
| ADDRESS 1440-1446 | KEYPAD OPTIONS | 27 |
| ADDRESS 1455-1468 | EZM GROUP OPTIONS | 25 |
| ADDRESS 1469 | PRIORITY ARMING AREA 1 | 25 |
| ADDRESS 1469-1472 | AREA ARMING OPTIONS | 25 |
| ADDRESS 1470 | PRIORITY ARMING AREA 2 | 25 |
| ADDRESS 1471 | PRIORITY ARMING AREA 3 | 25 |
| ADDRESS 1472 | PRIORITY ARMING AREA 4 | 25 |
| ADDRESS 1473 | BURGLARY OUTPUT TURNS OFF UPON DISARM | 26 |
| ADDRESS 1473-1488 | AREA BELL CONTROL OPTIONS | 26 |
| ADDRESS 1474 | BURGLARY OUTPUT TURNS OFF UPON DISARM | 26 |
| ADDRESS 1475 | BURGLARY OUTPUT TURNS OFF UPON DISARM | 26 |
| ADDRESS 1476 | BURGLARY OUTPUT TURNS OFF UPON DISARM | 26 |
| ADDRESS 1477 | PULSED BURG OUTPUT TURNS OFF UPON DISARM | 26 |
| ADDRESS 1478 | PULSED BURG OUTPUT TURNS OFF UPON DISARM | 26 |
| ADDRESS 1479 | PULSED BURG OUTPUT TURNS OFF UPON DISARM | 26 |
| ADDRESS 1480 | PULSED BURG OUTPUT TURNS OFF UPON DISARM | 26 |
| ADDRESS 1481 | PGM1 OUTPUT TURNS OFF UPON DISARM | 26 |
| ADDRESS 1482 | PGM1 OUTPUT TURNS OFF UPON DISARM | 26 |
| ADDRESS 1483 | PGM1 OUTPUT TURNS OFF UPON DISARM | 26 |
| ADDRESS 1484 | PGM1 OUTPUT TURNS OFF UPON DISARM | 26 |
| ADDRESS 1485 | PGM2 OUTPUT TURNS OFF UPON DISARM | 26 |
| ADDRESS 1486 | PGM2 OUTPUT TURNS OFF UPON DISARM | 26 |
| ADDRESS 1487 | PGM2 OUTPUT TURNS OFF UPON DISARM | 26 |
| ADDRESS 1488 | PGM2 OUTPUT TURNS OFF UPON DISARM | 26 |
| ADDRESS 1489-1648 | EXTERNAL RELAY CONTROL | 33 |
| ADDRESS 1666 | TEMPERATURE LOWER LIMIT | 28 |
| ADDRESS 1666-1668 | TEMPERATURE DISPLAY AT KEYPAD | 28 |
| ADDRESS 1667 | TEMPERATURE UPPER LIMIT | 28 |

ADDRESS NUMBER INDEX (CONT'D)

| | | |
|-------------------------|--|----|
| ADDRESS 1668 | ENABLE TEMPERATURE DISPLAY OPTION | 28 |
| ADDRESS 1668 | REPORT TEMPERATURE ALARM (ZONE 6) | 28 |
| ADDRESS 1668 | SELECT DEGREES CELSIUS | 28 |
| ADDRESS 1668 | TEMPERATURE OPTIONS | 28 |
| ADDRESS 2029-2044 | RF RECEIVER & SUPERVISORY TIMER OPTIONS | 36 |
| ADDRESS 2045 | GLOBAL AMBUSH CODE | 17 |
| ADDRESS 2045 | SYSTEM OPTIONS | 17 |
| ADDRESS 2050 | SENSOR WATCH TIME | 15 |
| ADDRESS 2050 | SYSTEM DELAYS & TIMEOUTS | 15 |
| ADDRESS 2051 | DISABLE [ON/OFF] AS EASY EXIT | 19 |
| ADDRESS 2051 | DISABLE SYSTEM TROUBLE AUDIBLE TIMEOUT | 19 |
| ADDRESS 2051 | ENABLE "K SERIES" STYLE KEYPADS | 19 |
| ADDRESS 2051 | ENABLE CANCEL REPORT TO TELCO 3 | 19 |
| ADDRESS 2051 | ENABLE GEM-PRINT MODULE | 19 |
| ADDRESS 2051 | ENABLE KEYPAD SET TIME/DATE MESSAGE | 19 |
| ADDRESS 2051-2054 | SYSTEM OPTIONS | 19 |
| ADDRESS 2052 | LUG E15 AREA 1 ARMED AWAY ONLY | 19 |
| ADDRESS 2052 | PGM ON RF TRANSMITTER TAMPER | 19 |
| ADDRESS 2053 | DIGITAL DIALER RPT ENTER /EXIT TEST MODE | 19 |
| ADDRESS 2053 | DISABLE CALL WAITING ON 1ST ATTEMPT | 19 |
| ADDRESS 2053 | ENABLE CP-01 EGRESS TONES ONLY | 19 |
| ADDRESS 2053 | ENABLE CP-01 LIMITS | 19 |
| ADDRESS 2053 | ENABLE KEYPAD 1 ONLY PROGRAMMING | 19 |
| ADDRESS 2053 | EXIT TIME RESTART | 19 |
| ADDRESS 2053 | RPT EXIT ERR/RECENT CLOSE | 19 |
| ADDRESS 2053 | SOUND ALARM ON EXIT ERROR | 19 |
| ADDRESS 2054 | ENABLE TCP/IP COMMUNICATIONS | 19 |
| ADDRESS 2054 | TCP/IP PANEL/SITE INITIATED FUNCTIONS | 19 |
| ADDRESS 2055 | REPORT CANCEL WINDOW | 15 |
| ADDRESS 2055 | SYSTEM DELAYS & TIMEOUTS | 15 |
| ADDRESS 2056 | RF RECEIVER & SUPERVISORY TIMER OPTIONS | 36 |
| ADDRESS 2059 | DOWNLOAD/CALLBACK OPTIONS | 16 |
| ADDRESS 2059 | NO. RINGS BEFORE PICKUP | 16 |
| ADDRESS 2059 | NUMBER OF RINGS BEFORE PICKUP | 16 |
| ADDRESS 2285 | CLEAR DEALER PROGRAM | 37 |
| ADDRESS 2285 | ERASE DEALER PROGRAM | 37 |
| ADDRESS 2286 | COLD START | 37 |
| ADDRESS 2286 | ERASE ENTIRE PROGRAM | 37 |

GEM-P1664 WIRING DIAGRAM



NAPCO SECURITY SYSTEMS, INC.
AMITYVILLE, N.Y. 11701

GEM-P1664 WIRING DIAGRAM

(REFER TO OPERATION AND INSTALLATION INSTRUCTIONS W1388)

RESIDENTIAL AND COMMERCIAL BURGLARY**

| 16.5V TRANSFORMER | STANDBY BATTERY | COMBINED STANDBY CURRENT | ALARM CURRENT | STANDBY TIME |
|-------------------|-----------------|--------------------------|---------------|--------------|
| 40VA/50VA | 7AH | 450mA | 450mA(1) | 4 HOURS |
| 20VA* | 4AH | 500mA | 2.0A | 4 HOURS |
| 20VA* | 7AH | 500mA | 2.0A | 6 HOURS |



RESIDENTIAL FIRE

| 16.5V TRANSFORMER | STANDBY BATTERY | COMBINED STANDBY CURRENT | ALARM CURRENT | STANDBY TIME |
|-------------------|-----------------|--------------------------|---------------|--------------|
| 40VA/50VA | 7AH | 120mA | 520mA(1) | 24 HOURS |
| 40VA/50VA* | 2-7AH | 360mA | 280mA(1) | 24 HOURS |
| 20VA* | 7AH | 120mA | 360mA(1) | 24 HOURS |
| 20VA* | 2-7AH | 360mA | 120mA(1) | 24 HOURS |

(1) ALARM CURRENT CAN BE INCREASED BY REDUCING STANDBY CURRENT BY THE SAME AMOUNT.

* NOT PRESENTLY EVALUATED BY U.L.
** COMMERCIAL BURGLARY IS NOT PRESENTLY EVALUATED BY U.L.

 
PCD LOCAL DOWNLOAD CONNECTION

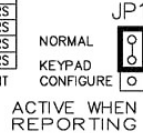


WARNING

TO PREVENT RISK OF ELECTRIC SHOCK DISCONNECT TELEPHONE LINES PRIOR TO SERVICING.


STANDARD ZONE WIRING (12VDC 5mA)

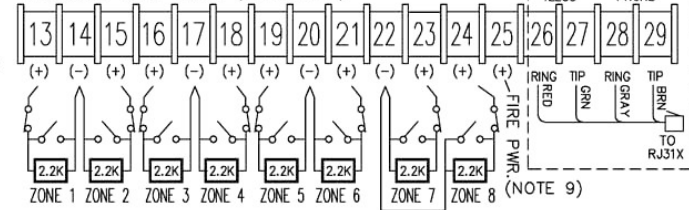





EZ Zone Doubling™ Wiring (ONLY FOR N.C. BURG. ZONES)

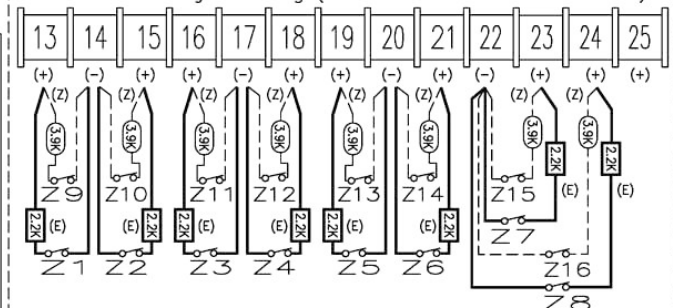

(NOTE 6) 2 WIRE SMOKE DETECTOR WIRING

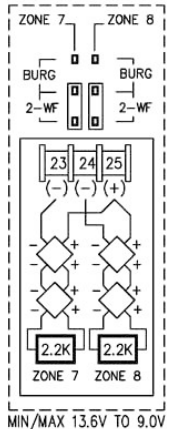

4 WIRE SMOKE DETECTOR WIRING

 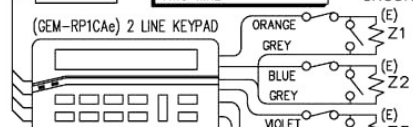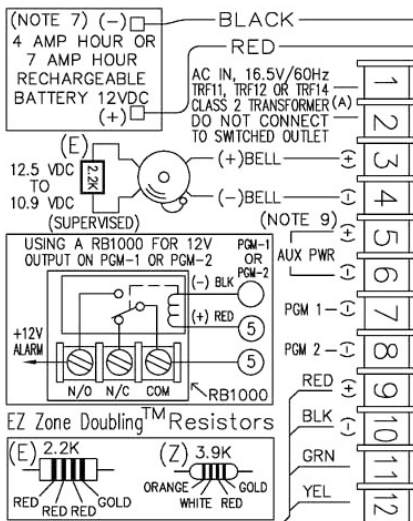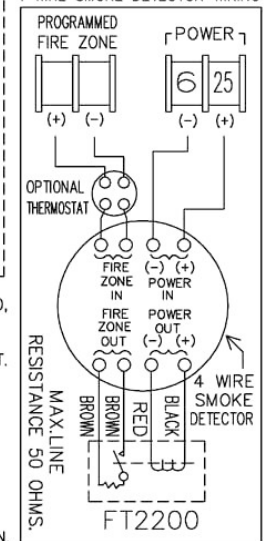

THIS UNIT INCLUDES AN ALARM VERIFICATION FEATURE THAT WILL RESULT IN A DELAY OF THE SYSTEM ALARM SIGNAL FROM THE INDICATED CIRCUITS. THE TOTAL DELAY (CONTROL UNIT PLUS SMOKE DETECTORS) SHALL NOT EXCEED 60 SECONDS. NO OTHER SMOKE DETECTORS SHALL BE CONNECTED TO THESE CIRCUITS UNLESS APPROVED BY THE LOCAL AUTHORITY HAVING JURISDICTION.

| CIRCUIT ZONES | CONTROL UNIT DELAY-SEC | SMOKE DETECTORS MODEL-DELAY-SEC. |
|---------------|------------------------|----------------------------------|
| 12 | | (+) |

+ THE DELAY (POWER UP) (STARTUP) TIME MARKED ON THE INSTALLATION WIRING DIAGRAM OF THE SMOKE DETECTOR OR ON THE INSTALLED SMOKE DETECTOR(S) IS TO BE USED.

- NOTES:
- ALARM CURRENT CAN BE INCREASED BY REDUCING STANDBY CURRENT BY THE SAME AMOUNT.
 - THE FOLLOWING DEVICES MAY BE PLACED ON THE REMOTE BUS: GEM-RP1CAe2, GEM-RP2ASe2, GEM-EZM816, GEM-X10, GEM-RECv8, GEM-RECv16, RM3008, GEM-EVA1, WIZARD2, GEM-KICA, GEM-K2AS, GEM-K3DGL AND GEM-RECv96.
 - REFER TO W1388 FOR U.L. LISTINGS.
 - COMBINED STANDBY CURRENT = KEYPAD CURRENT + AUX CURRENT + FIRE POWER + PGM1 AND PGM2 CURRENT.
 - UNIT INTENDED TO BE MOUNTED VERTICAL ON WALL.
 - REFER TO W1388 FOR COMPATIBLE TWO WIRE SMOKE DETECTORS. DO NOT MIX DIFFERENT MODELS.
 - RECOMMENDED BATTERIES YUASA NP4-12 OR NP7-12. BATTERY SHOULD BE REPLACED EVERY 5 YEARS.
 - THIS PANEL SHALL BE CHECKED BY A QUALIFIED TECHNICIAN AT LEAST ONCE EVERY 3 YEARS.
 - AUX. POWER AND FIRE POWER VOLTAGE RATING: 12.5 VDC TO 11.7 VDC. THE PANEL WILL DISREGARD INPUTS FROM ALL SENSORS WHEN VOLTAGE DROPS BELOW 8.5V.
 - A.C. MUST BE DISCONNECTED WHEN PERFORMING WEEKLY TESTS.
 - THIS PANEL ONLY SUPPORTS ONE SMOKE DETECTOR IN ALARM FOR EACH ZONE.
 - DISABLE AUTO-RESET ON NON-FIRE ZONES FOR SIA CP-01 INSTALLATIONS.
 - DESIGN EVALUATED BY UL IN ACCORDANCE WITH SIA CP-01 CONTROL PANEL STANDARD FEATURES FOR FALSE ALARM REDUCTION.

LA2338B

GEM-P1664 Wiring Diagram