


Programming of tape cartridges: A programming service is available from A.T.A. Control Systems. 6 minute endless loop tapes are available if you desire to program your own messages. The programmer Model #320 must be used. Observe instructions below:

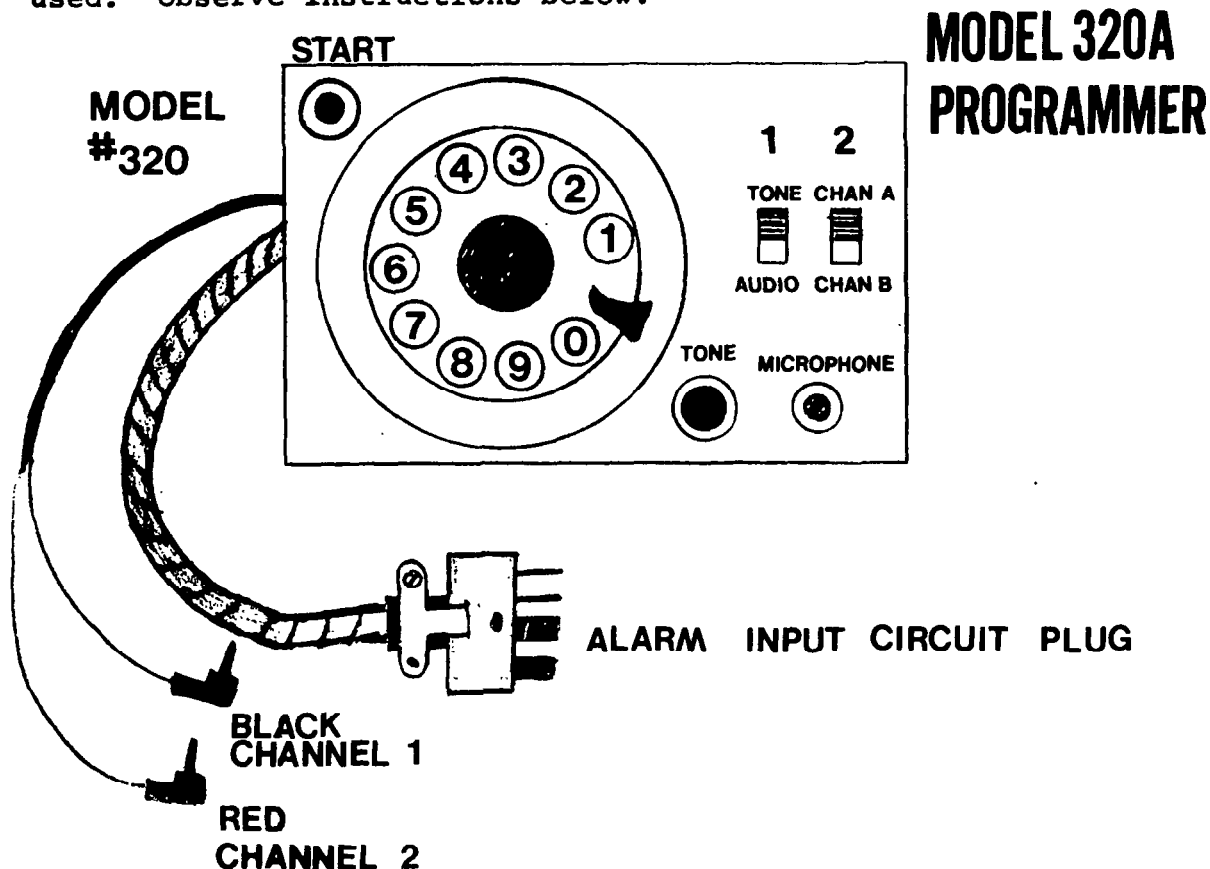

1. Initial switch set-up of dialer and programmer switches.
 - A. 203 & 300
 1. Apply power to dialer
 2. Insert cartridge
 3. Insert alarm input circuit plug to back of dialer
 4. Disconnect cables from board and plug in cable from programmer.
 - B. 320A Programmer
 1. Switch 1 to tone
 2. Switch 2 to channel A
 3. Plug-in microphone. Hold 4-6 inches away so as not to distort speech.

2. Now you are ready to program channel A tape.

- A. Push down on motor start switch to activate dialer. Wait 10 seconds.
- B. Push tone button on dialer for 20 to 25 seconds then release.
- C. Dial desired phone number (use area code or 1 where required).
- D. Move switch 1 to audio. Record message thru microphone. Hold microphone approximately 4-6 inches from mouth and talk in a clear distinct voice.

Sample Message: PLEASE STAND BY FOR AN EMERGENCY RECORDED MESSAGE. PLEASE STAND BY FOR AN EMERGENCY RECORDED MESSAGE. THERE IS A BURGLARY IN PROGRESS AT (NAME AND ADDRESS, WITH DIRECTIONS OR HOUSE DESCRIPTION IF REQUIRED) PLEASE SEND ASSISTANCE AT ONCE. THERE IS A BURGLARY IN PROGRESS AT (NAME AND ADDRESS).

- E. Tape length is 6 minutes. Maximum of 3 messages per channel. If message is shorter, additional numbers may be dialed. After you have recorded 3 times and after 6 minutes, tape will automatically shut off and reset.
- F. You have just finished recording Channel A.
- G. Place switch 1 on programmer to tone, place switch 2 on programmer to Channel B. Repeat steps A thru E for Channel B.
- H. After you have programmed Channel A and Channel B remove programming plug from dialer and place dialer switch 1 back to play mode.

