



NAPCO®

333 Bayview Avenue
Amityville, New York 11701
For Sales and Repairs, (800) 645-9445
For Technical Service, (800) 645-9440
Publicly traded on NASDAQ Symbol: NSSC

© NAPCO 2006

FREEDOM 64 Wireless F-64TP Touchpad INSTRUCTIONS FOR APPLICATIONS AS SOLE SOUNDING DEVICE

WI1571 9/06


To comply with UL Audibility requirements, a small acoustic cloth that covers the siren module must be removed or a compatible UL Listed siren (Wheelock AH-12WP) must be installed on the F-64 control panel bell circuit terminals (see WI1501). To remove the cloth, follow the instructions below.

1 With power to the control panel off, open the F-64TP Touchpad. Remove the front of the Touchpad housing by inserting a screwdriver into the (2) slots in the bottom of pad. Twist screwdriver to remove cover.



2 Locate the Siren Module.

The image at right highlights the Touchpad Siren Module and plug, located at the bottom right of the Touchpad rear housing.

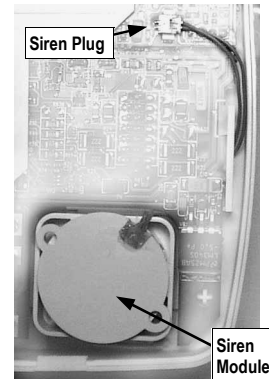


The small acoustic cloth to be removed is located under the Siren Module.


3 Find the retaining tab and locking clip.

As shown in the image at right, the Siren Module's retaining tab is held in place by a locking clip.


The locking clip must be pushed away from the retaining tab to unlock the Siren Module.

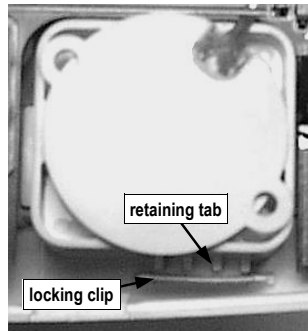

4 Use a small screwdriver to push the locking clip away from the retaining tab to unlock the Siren Module.

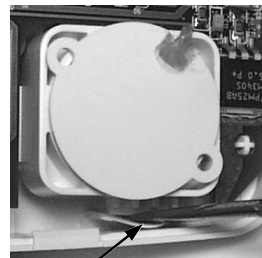

Insert screwdriver here...

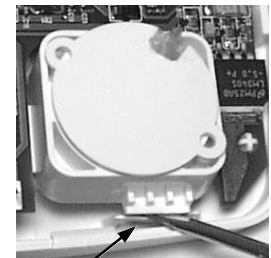


...and push clip away from the tab

5 Lift the Siren Module to expose the acoustic cloth.

As shown in the image at right, gently lift the Siren Module, exposing the acoustic cloth.


Remove cloth and store in a safe place.

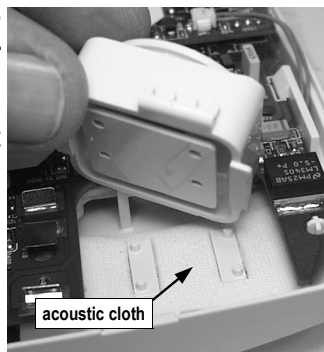

acoustic cloth

6 With the acoustic cloth removed, the siren dB level will be consistent with UL Audibility requirements.

Re-install the Siren Module and the Touchpad housing in the reverse order of removal.

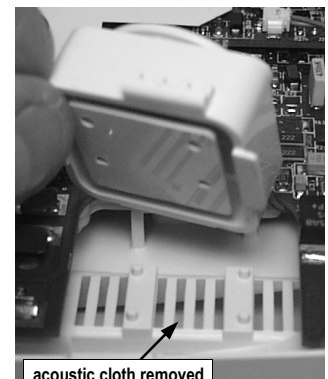

acoustic cloth removed